


How to use the IVI System

User Guide

[IVI System: In-Vehicle Infotainment System]

Start Reading

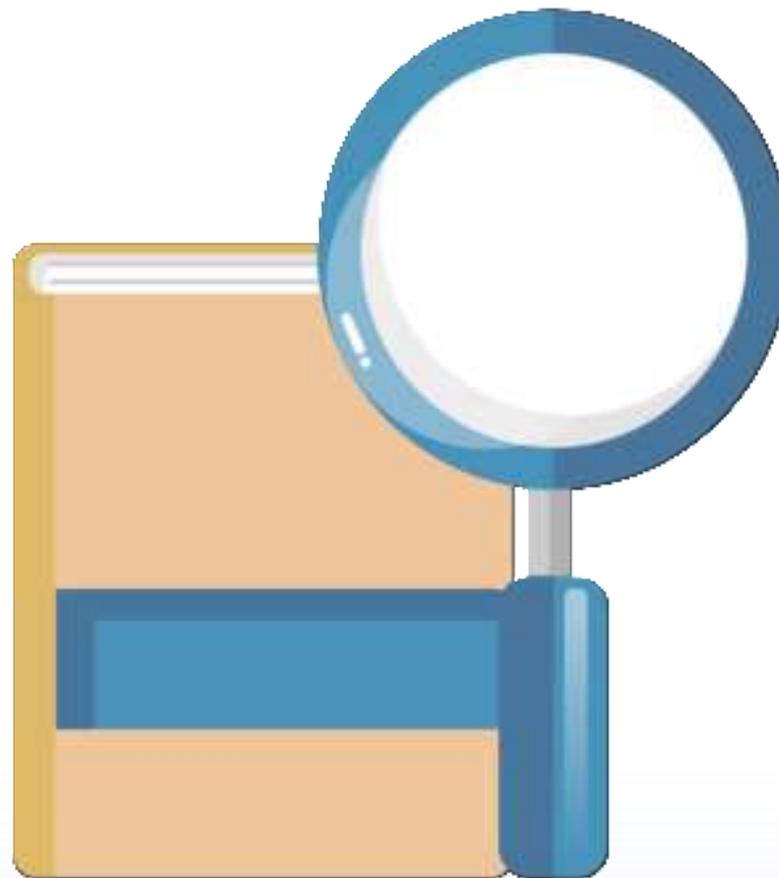

CONTENTS

Home

Menu

Music

Video

Radio

Bluetooth

DSP Set

Car Settings

Avin

File

Recorder

Play Store

Maps

Chrome

Google

Phone Link

Reverse

I. Home

1. Page introduction:

1) Desktop top icon:



Home



Hide



Backstage



Return



2. App introduction:

- 1) Click  to return to the main page
- 2) Click  to hide the top icon, click again to restore
- 3) Click  to select or close a running apps
- 4) Click  to step back
- 5) Click  to browse all apps
- 6) Long press the app on the main interface to move or delete
- 7) Long press the date and time to set it
- 8) Five-finger long press the screen to calibrate the touch


3. Touch settings:

Set the touch buttons: power, main interface, return, volume +, volume-, previous song, next song, navigation, etc.

II. Drop-down Menu

Touch the screen and drag down to pop up a drop-down menu, drag up to hide it

1. Page introduction:

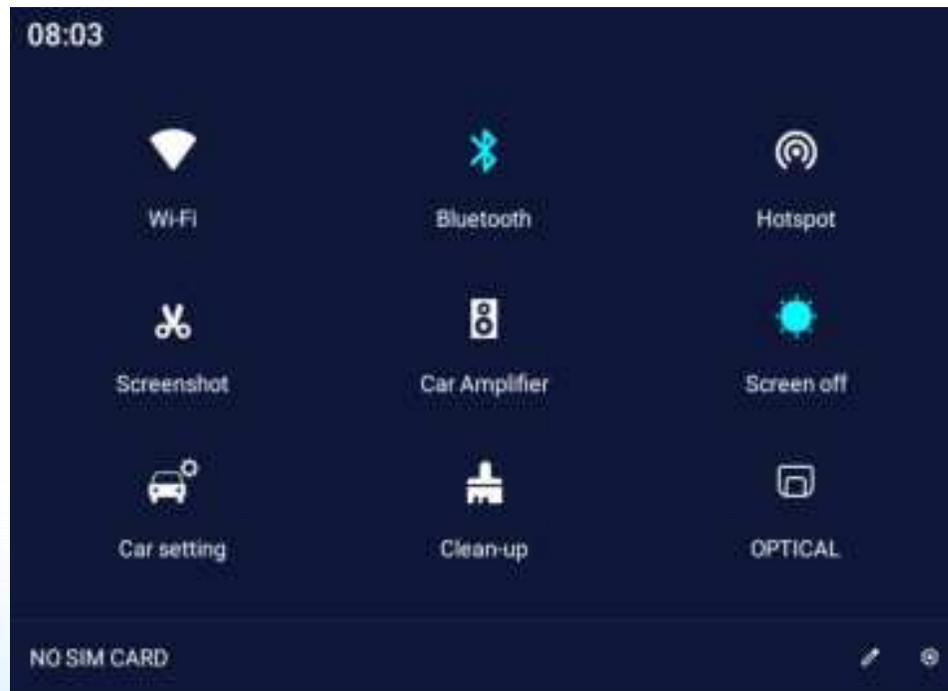

- 1) WiFi, click to turn on/off, press and hold to enter the WiFi
- 2) Bluetooth, click to turn on/off, press and hold to enter the BT
- 3) Hot spot, click to turn on/off, press and hold to enter the hot spot
- 4) Screenshot, save the picture to the file manager
- 5) Car Amplifier, click to turn on/off
- 6) Screen off, click to turn off the screen
- 7) Car settings, click to enter car settings
- 8) Clear-up, click to clear the device garbage
- 9) Optical fiber output, click to turn on/off
- 10) Click  to move the icon on the drop-down menu
- 11) Click  to enter Android settings. Setting WiFi, BT, App, Display, Sound, Storage, Account, System, etc.

III. Music


Click "Music" to enter the app

- This operation is valid when the device has media files
- Key introduction:



1. **Playlist:** directory, song, singer, favorites, search
2. **Playback mode:** single loop, listing loop, random play
3. **Sound effect:** rock, classical, jazz, pop and other modes, can also be customized
4. **How to play U disk audio:**

- Insert the U disk and the music will be played directly in the local music
- Open **[File Manager]** --- Select the audio file and click **[Copy]** --- Switch to the **[Internal storage]** --- Click **[Paste]**

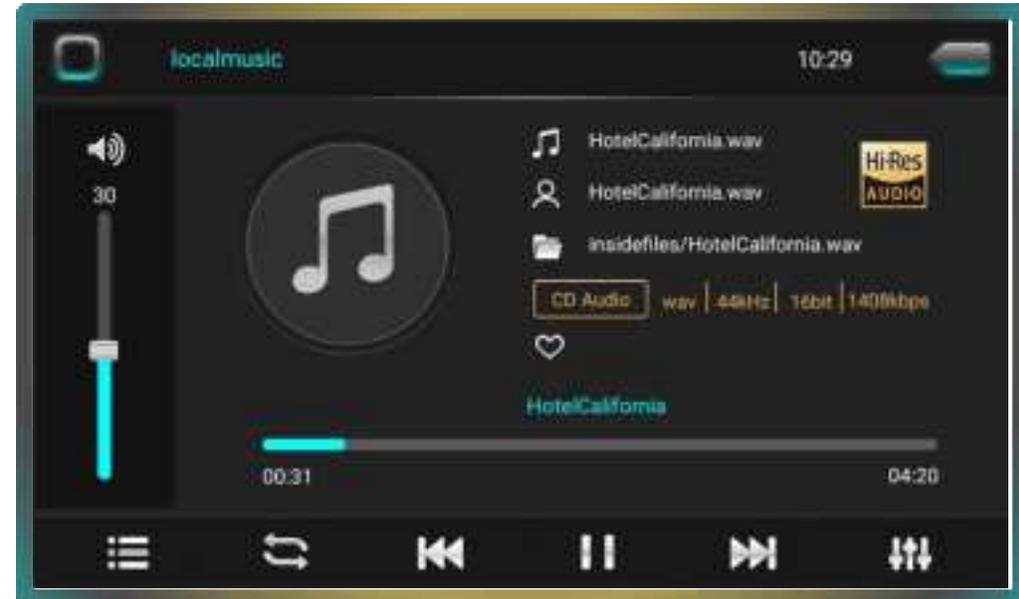

IV. Video

Click "Video" to enter the app

- This operation is valid when the device has video files
- Key introduction:

- Return
- Sound effect
- Previous
- Next
- Pause
- Play
- Screen ratio
- Decode mode
- Playback mode

1. **Playback mode:** single loop, listing loop, random play
2. **Screen ratio:** full screen, 4:3, 16:9
3. **Playback mode:** dual-screen display, picture-in-picture
4. **Small window play:** Open [picture-in-picture], switch the video to run in the background. Click  to play the video in full screen mode.
5. **Video list:** All, SD card, Udisk



V. Radio

Click "Radio" to enter the app

- The FM/AM band can store 40 valid platforms each
- Key introduction:

-  Home
-  Return
-  Sound effect
-  Search up
-  Search down
-  Previous
-  Next
- DX** DX/LOC switch
- FM** FM/AM switch

1. DX/LOC:

DX: High sensitivity, suitable for radio stations with weak or distant signals
LOC: Low sensitivity, suitable for radio stations with strong local signals

2. Auto search:

Click [**Search**] to perform the automatic search function, and automatically save the searched stations

3. FM/AM:

FM: 64.0MHz-108.0MHz
AM: 522KHz-1629KHz



* **FM+RDS AM+FM+RDS:** The interface is different

4. Contractions:

- ST:** Stereo switch during FM radio
- TA:** Automatically search for other transmission frequencies of the current station
- AF:** Automatically search for stations of the same type of program
- PTY:** Display and search of program types
- TP:** Mandatory traffic information