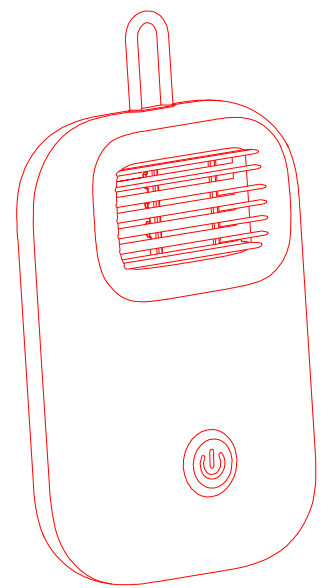
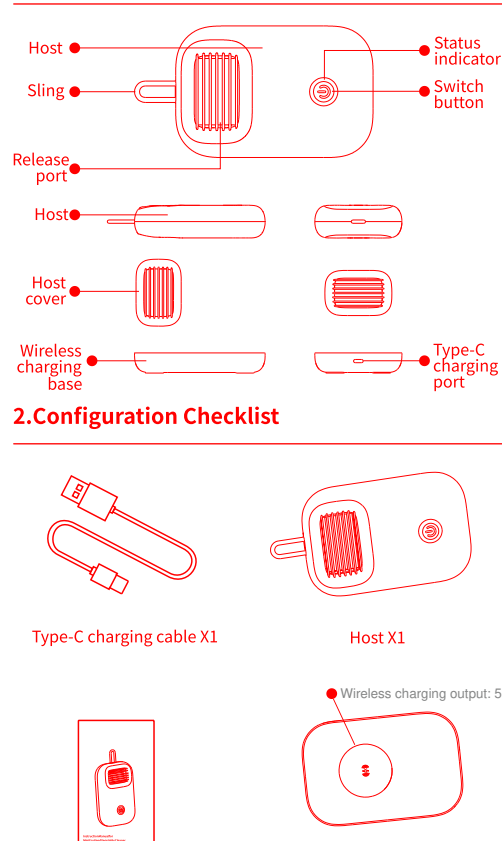


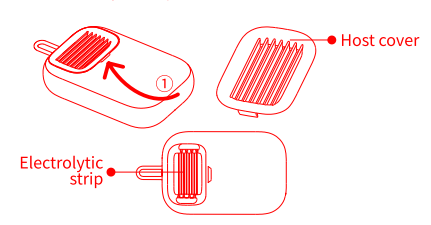


<

 <p><b>Instruction Manual for Mini Fruit and Vegetable Cleaner GFC12</b></p> <p>Thank you for purchasing our products. In order to have a better experience, please read this content carefully before using it and keep it properly.</p>	<p><b>1.Product Introduction</b></p>  <p><b>2.Configuration Checklist</b></p> <p>Type-C charging cable X1      Host X1</p> <p>Instruction manual X1      Wireless charging base X1</p> <p>-1-</p>	<p><b>3.Safety Precautions</b></p> <p>In order to prevent injury to users or other personnel, and to avoid property damage, be sure to observe the following items.</p> <ul style="list-style-type: none"><li>- Do not allow children to use or keep it out of the reach of infants and young children.</li><li>- It can cause burns, electric shock, and physical discomfort.</li><li>- Do not operate the machine or unplug the power cord with wet hands.</li><li>- May cause electric shock.</li><li>- Before maintenance work, please turn off the machine and unplug the charging cable. - May cause electric shock.</li><li>- Do not rinse the charging base machine with water or immerse it in other liquids.</li><li>- It will cause water to enter the inside, which will lead to electric shock, fire and malfunction.</li><li>- Do not wipe the product with solvents such as gasoline, alcohol, chemicals, etc.</li><li>- May cause fire and malfunction.</li><li>- Do not put foreign objects on the dissolving sheet in the release port.</li><li>- will cause malfunction.</li><li>- Do not disassemble, repair or modify this product.</li><li>- It can cause electric shock or injury.</li><li>- Do not use this product in flammable, explosive, corrosive, combustible or metal dust environments.</li><li>- May cause fire or explosion.</li><li>- Prevent the host from falling and strong shaking.</li><li>- Causes damage, deformation, malfunction.</li><li>- If the product has abnormal noise, smell, high temperature and other abnormalities, please stop using it immediately.</li><li>- Can cause fire.</li><li>- Do not use the main unit in a high temperature environment.</li><li>- May cause fire, explosion, malfunction.</li><li>- The host and the charging base are used together, and other charging bases are strictly prohibited.</li><li>- Effectively protect battery life.</li><li>- Do not use metal objects to touch the points to disassemble.</li><li>- In order to avoid short circuit of the electrolytic sheet, it cannot work normally.</li></ul> <p>-2-</p>	<p>-The exposed electrolytic sheet is the working part of this product, so avoid bumping it when using it.</p> <p>- In order to avoid short circuit caused by deformation of the electrolytic sheet, it cannot work normally.</p> <p>- Do not insert metal objects or other conductive objects into the electrode pads.</p> <p>- In order to avoid short circuit of the electrolytic sheet, it cannot work normally.</p> <p>-The product should be used in water at 0°C~40°C.</p> <p>-Exceeding or falling below the above temperature range will prevent the product from functioning properly.</p> <p>-When charging is not required, unplug the charger from the power outlet.</p> <p>-Residue of grease can cause abnormal work. Use a soft toothbrush to clean and rinse the electrolytic plate.</p> <p>-The battery contained in the appliance contains materials that are harmful to the environment and needs to be disposed of according to the steps before disposal. Before disposing of the appliance, the battery must be removed from the appliance.</p> <p>- Before disposing of the appliance, the battery must be removed from the appliance;</p> <p>- The appliance must be switched off when removing the battery.</p> <p>- Batteries should be disposed of safely.</p> <p><b>4.instructions For Use</b></p> <p><b>Function instructions:</b></p> <p>01. Mild purification mode:</p> <p>In the standby state, click the "key switch" once to start the mild purification mode, and the machine works for 5 minutes to electrolyze water to generate hypochlorous acid. The indicator light is breathing green when working.</p> <p>02. Deep purification mode:</p> <p>In the standby state, click the "key switch" twice to start the deep purification mode, and the machine works for 10 minutes to electrolyze water to generate hypochlorous acid. The indicator light is solid green during operation.</p> <p>In any mode, press and hold the key switch for 2 seconds, the mode indicator flashes off, and the shutdown is successful.</p> <p>-3-</p>	<p>Tips for using:</p> <p>01. Put the fruits, vegetables and meat to be cleaned in the washing basin or sink, and add water with a temperature not exceeding 40°C (recommended to not exceed 3 liters of water at a time).</p> <p>02. Select mild mode or deep mode as required. After starting, place the main unit on the bottom of the water to keep the main unit lying down (or the release port is completely immersed in water).</p>  <p>03. Please stir the fruits and vegetables from time to time during the working of the fruit and vegetable machine to achieve a better purification effect. It is normal for the electrolyzed water to smell of disinfectants and detergents. At the same time, according to the number of ingredients to be purified each time, an appropriate amount of fruit and vegetable salt can be added, and the cleaning effect is better.</p>  <p>04. After the main unit is finished, all indicator lights will go out. At this time, let the cabbage and meat in the dish or sink stand for 5-10 minutes to make the electrolysis fully work. Finally, take out the cleaning material and rinse with clean water.</p> <p><b>5. Cleaning and Maintenance</b></p> <p>01. Please ensure that there is no foreign matter in the special release port and the electrolytic strip, otherwise it will not work.</p>  <p>-4-</p>
--	--	---	--	--