

CONTACT INFORMATION

Website: www.gpx.com
Email Support: prodinfo@dpiinc.com
Email Parts: partsinfo@dpiinc.com
Phone Support: 1-888-999-4215

WARRANTY

For Warranty Information and the most up-to-date version of this User's Guide, go to: www.gpx.com



INTERNATIONAL SUPPORT

To download this User's Guide in English, Spanish, or French, or to get answers to frequently asked questions, visit the support section at: www.gpx.com
Para descargar este Manual del Usuario en inglés, español y francés, o para obtener respuestas a preguntas frecuentes, visite la sección de apoyo en: www.gpx.com
Pour télécharger ce guide de l'utilisateur en anglais, espagnol ou français, ou pour obtenir des réponses à des questions fréquemment posées, consultez la rubrique d'assistance sur: www.gpx.com

INDICATORS

STATUS	INDICATOR
Power On	Blue Solid Light or Blue Flashing Light
Charging Device	Red Solid Light
Full Charge	No Lights
Pairing Device	Blue Flashing Light
Device Paired	Blue Solid Light
Low Battery	Red Flashing Light

PAIRING A BLUETOOTH DEVICE

- Turn on the unit using the **Power** switch. Press and hold the **Pair** button once, the **Pairing Indicator** will flash blue quickly, and the unit will enter pairing mode.
- When pairing, remain within 3 feet of the unit.
- Using the native controls on your Bluetooth device, scan for and select **SB05** in your Bluetooth settings to pair.
- If your device requests a password, the default password is **0 0 0 0**. Refer to the user's manual for your specific device for instructions on pairing and connecting Bluetooth devices.
- When successfully paired and connected, the **Pairing Indicator** will display a solid blue light and a beep will sound from the unit.
- If problems arise with pairing, press and hold the **Pair** button to begin pairing again.

PLAYING AUDIO WIRELESSLY

- Use the native controls on the connected Bluetooth device to select a track.
- To play, pause or skip the selected track: Use the native controls on the connected Bluetooth device, or use the **Play/Pause/Skip** controls on the speaker.
- Audio played through the connected Bluetooth device will now be heard through the speakers.



Portable Wireless Speaker
User's Guide for Model No. SB05 v1177-01

WARNINGS AND PRECAUTIONS

- WARNING: To prevent fire or shock hazards, do not expose this unit to rain or moisture.
- WARNING: Do not place this unit directly onto furniture surfaces with any type of soft, porous, or sensitive finish. As with any rubber compound made with oils, the feet could cause marks or staining where the feet reside. We recommend using a protective barrier such as a cloth or a piece of glass between the unit and the surface to reduce the risk of damage and/or staining.
- WARNING : Where the mains plug or appliance coupler is used as the disconnect device, such disconnect device shall remain readily operable.
- Batteries should be recycled or disposed of as per state and local guidelines.

Note : This device uses an internal rechargeable lithium-ion battery that should last the lifetime of the device. If you suspect your battery may be dead after several attempts to charge, please contact 1-888-999-4215 for support.
Never disassemble the unit or attempt to remove the battery as that could cause leakage of an electrolytic substance.

FCC WARNINGS


- Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
- NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
- Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help.

FEATURES


- Wireless range: 33 feet
- Supports automatic device pairing
- Built-in speaker
- LED pairing and battery indicators
- DC battery power: built-in rechargeable lithium ion battery
- Micro-USB port for battery recharge
- Micro USB to USB charging cable
- Battery Life: approx. 1.5 hours

Special Note:
This speaker, though it includes a rubberized outer surface, *IS NOT WATER PROOF OR WATER RESISTANT*. Please bear this in mind when placing the unit in a location that may be near a water source.

CONTROLS

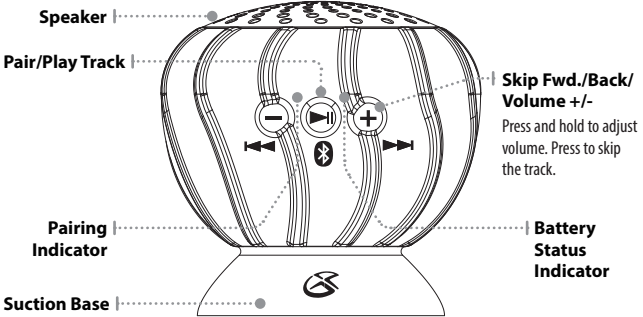

CONTROLS

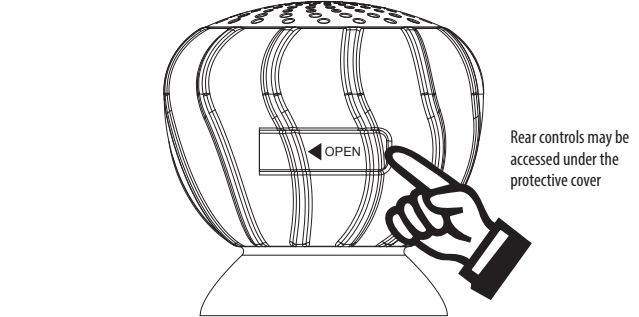

CONTROLS

