



# OWNER'S MANUAL

*Please read and understand all precautions prior to use.*

Modél / Modèle No.: T3703URR (Transmitter), R3703URR (Car)

**Thank you for choosing a premium New Bright product.**

## USA & Canada 30-Day Limited Warranty

New Bright Industries warrants to the original purchaser that this product will be free of defects in materials and workmanship for thirty (30) days from the date of purchase. In the event of such defect within the warranty period, New Bright will repair or replace the product at our sole discretion. This warranty does not cover damage resulting from unauthorized modifications, accident, misuse, or abuse.

Should your item have a defect covered under this warranty, first call the toll free number listed below. Most problems can be resolved in this manner. If necessary, you will be issued a Return Authorization (RA) number and instructions on how to obtain a Product Return Form. The Product Return Form is to be used when returning a product to us (postage pre-paid and insured by the consumer).

When returning a defective product, please package the product, the Product Return Form and a copy of the dated sales receipt as proof of purchase. Be sure to mark the RA number on the Product Return Form. If the product is returned without a dated sales receipt, it will be excluded from coverage under this warranty. Please allow 4 to 6 weeks for delivery of repaired or replacement vehicles (depending on your location).

New Bright Industries' liability for defects in materials and workmanship under this warranty shall be limited to repair or replacement at our sole discretion. In no event shall we be responsible for incidental, consequential or contingent damages (except in those states that do not allow this exclusion or limitation).

Valid only in the USA & Canada.

Contact New Bright Industries Customer Service Toll Free at:

1-877-NBI-TOYS


(1-877-624-8697)

Monday through Friday, 8:00 AM to 5:00 PM Eastern Time


L575112846/JN120-16

# WHAT'S INCLUDED


## Component Checklist

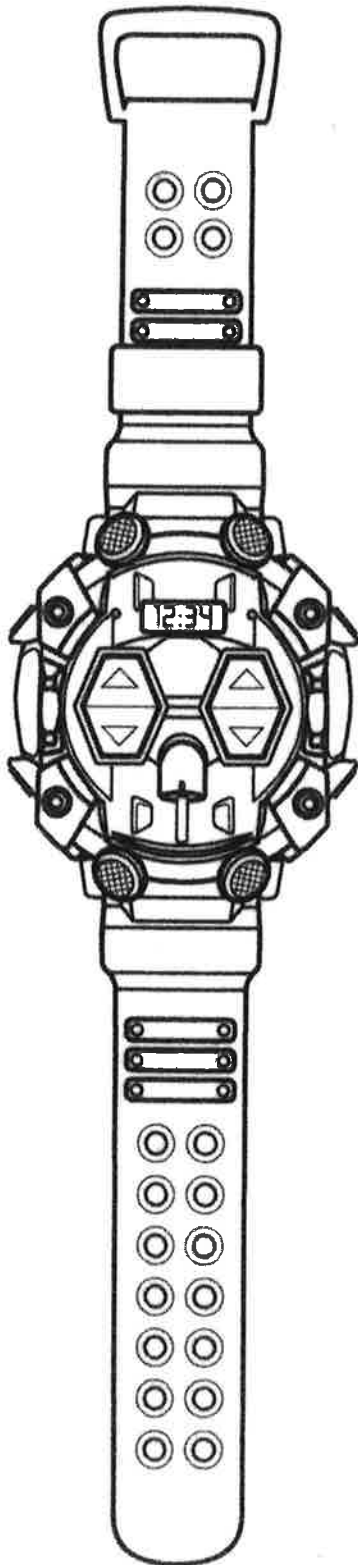


**(1) Watch Band Transmitter**

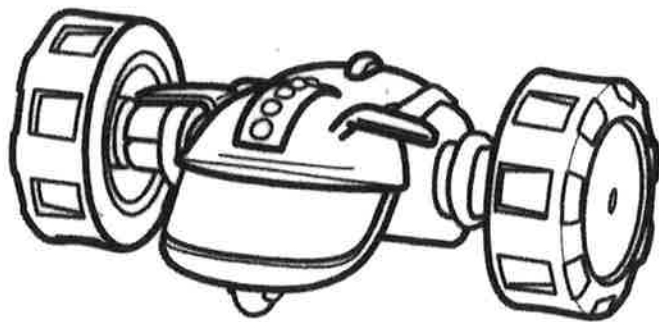

**(1) WatchDog Vehicle**

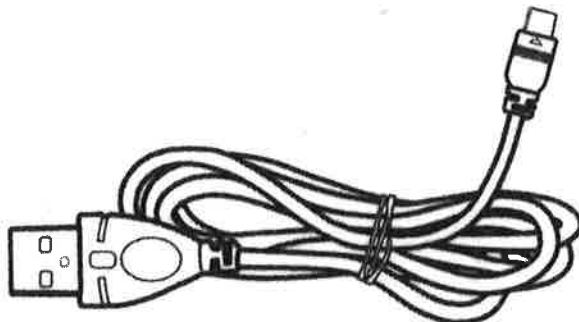


**(1) USB Charging Cord**

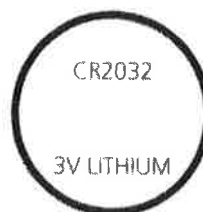

**(1) 3V Lithium Coin Cell Battery (CR2032)\***  
\*installed in watch

# TRANSMITTER & WATCH

## Functions

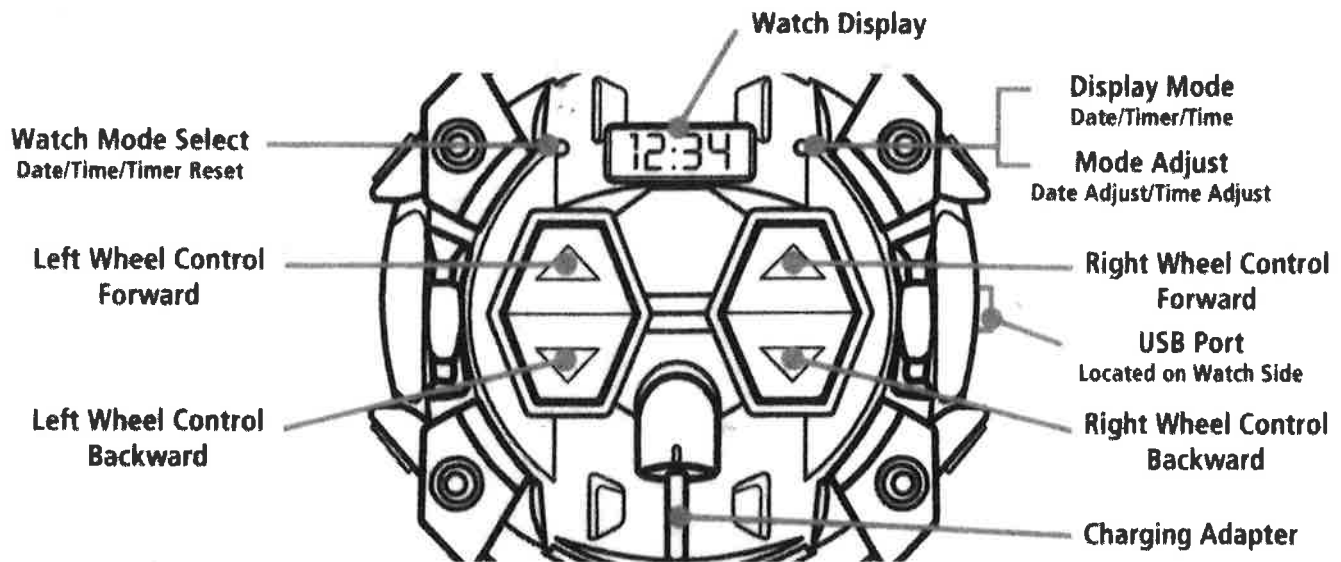

## Adjusting Date, Time & Display Mode

**Mode Select**  
Date/Time/Timer Reset



**Display Mode**  
Date/Timer/Time

**Mode Adjust**  
Date Adjust/Time Adjust

### Mode Select: Date



 
Month Day

Using a fingernail or small screwdriver, press Mode Select once to display the date.



Month Adjust


Press Mode Select once more to enter Month Adjust Mode. To adjust the Month, press Mode Adjust until the desired number is displayed.



Day Adjust

Press Mode Select once more to enter Day Adjust Mode. To adjust the Day, press the Mode Adjust until the desired number is displayed.

### Mode Select: Time

 

Hour AM/PM

Press Mode Select 4 times to enter Hour Adjust Mode. Press Mode Adjust until the hour is correct.




Minute

After adjusting the hour, press Mode Select once more to enter Minute Adjust Mode. Press Mode Adjust until the minute is correct.

Press Mode Select again to exit Time Adjust.

### Press the Display Mode button to toggle through display modes.

 


Press once for Date Display



Press twice for Timer\*

 
\*Timer will remember last known time. Press Mode Select Button to reset countdown to zero.



Third Press returns to Time


# VEHICLE

## Functions

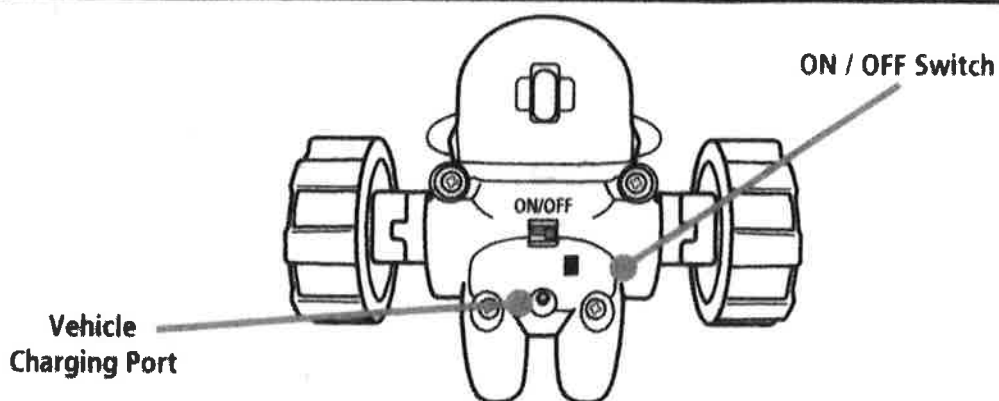

## Charging


**This vehicle is equipped with an internal Lithium-Ion battery that is recharged via USB.**  
ON/OFF Switch must be in the OFF position prior to charging.

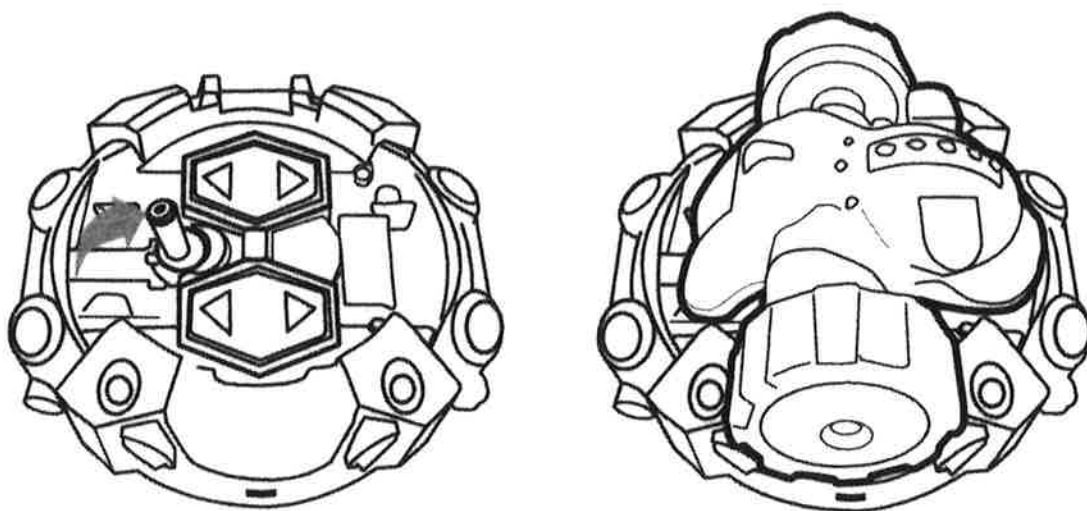

1. Locate the Charging Adapter on the face of the watch.
2. Carefully rotate the Charging Adapter into the upright position, as shown above.
3. Locate the Charging Port on the underside of the WatchDog. Face of the dog should point toward the clock on the watch face.
4. Align WatchDog as shown above and seat into place on the watch face.
5. Locate the USB Port on the side of the watch case
6. Plug the small end of the supplied USB cord into the watch case USB Port. Plus the large end into any powered USB port, such as a laptop or power brick (not included).
7. Charging will take approximately ## Minutes when charging from a computer. After charging is complete, store the USB Charging Cord in a safe place.

## How to Drive

### FORWARD AND REVERSE DRIVING

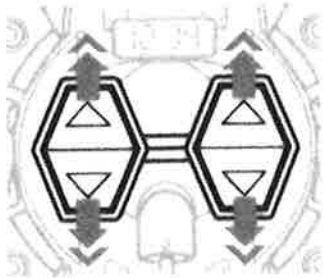

#### FORWARD DRIVING



Press BOTH UP ARROWS Button for Forward Driving.

#### REVERSE DRIVING



Press BOTH DOWN ARROWS Button for Reverse Driving.


### TURNING



#### RIGHT TURNING

Press LEFT Up Arrow Button to turn right while driving forward.

Press LEFT Down Arrow Button to turn right in reverse.

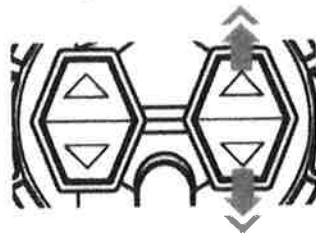


#### LEFT TURNING


Press RIGHT Up Arrow Button to turn left while driving forward.

Press RIGHT Down Arrow Button to turn left in reverse.

### SPINS

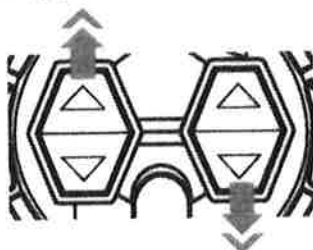


**360° SPINS - Clockwise**  
Press buttons as shown for Clockwise Spinning.

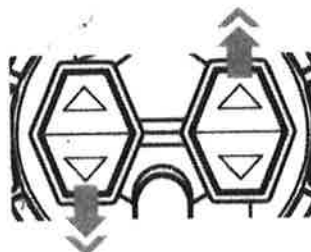

**360° SPINS - Counter-Clockwise**  
Press buttons as shown for Counter-Clockwise Spinning.

## Changing the Battery

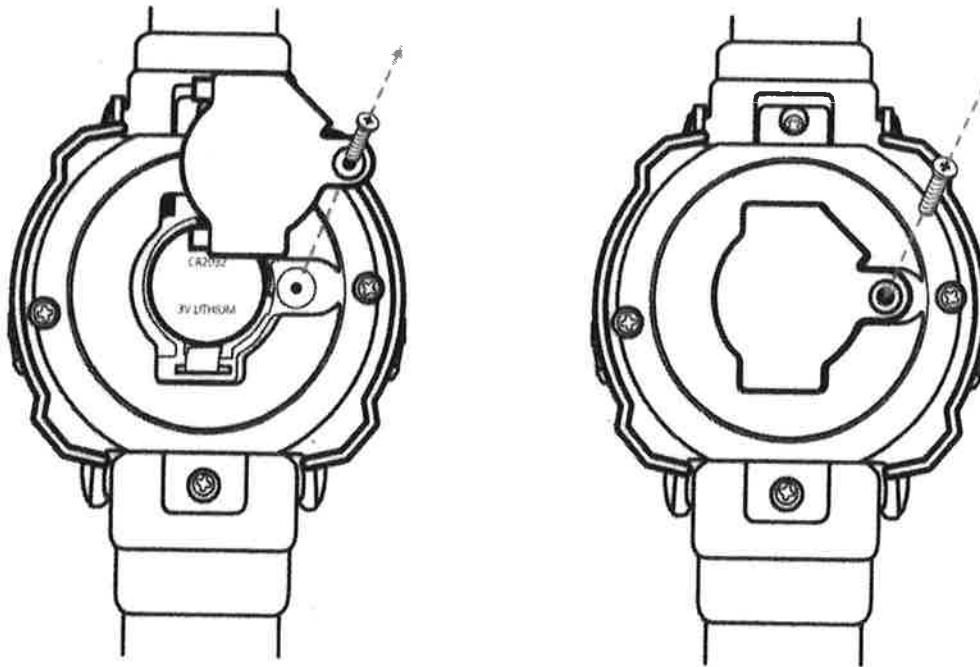

1. Locate Battery Compartment on back of watch body. Use a screwdriver to remove the screw, as shown.
2. Using a fingernail, gently pop old coin cell out of place.
3. Insert one 3V Lithium CR2032 coin cell battery with the etched text facing upwards.
4. Secure battery compartment by replacing the small screw.

## Syncing

The transmitter is equipped with 2.4GHz technology which allows up to 6 WatchDog vehicles to be used at the same time.

To sync transmitter and vehicle, follow these steps:

1. Install batteries in Transmitter.
2. Turn on Vehicle.

Once the batteries are installed and the vehicle is turned on, the Transmitter will sync automatically with the vehicle.

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**FCC CAUTION:**

Changes or modification not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC



## RSS Statement

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.


Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

# Proper Use

## Precautions and Care




Switch vehicle OFF  
when not in use.

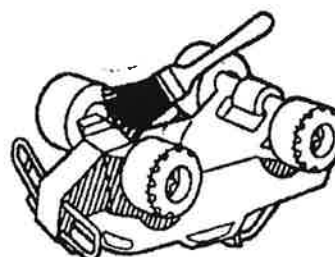

Brush areas where  
dirt gets trapped.



Wipe body with a  
soft rag or cloth.

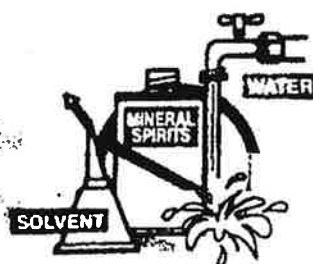

Do not use chemicals  
or water to clean

## **SUPPORT**

### **Trouble Shooting**

#### **Problem - Vehicle does not move or moves slowly.**

- Has the Battery Pack been installed in the vehicle?
- Has the rechargeable Battery Pack been fully charged?
- Are the metal contact tabs touching, rusty or dirty in the connectors?
- Make certain there are fresh alkaline batteries in the transmitter and that they have been installed in the correct position.
- Are the (+) and (-) markings on the alkaline batteries in the same position as the (+) and (-) markings in the Transmitter Battery Compartment?
- Make certain that the vehicle ON/OFF switch is in the "ON" position.

#### **Problem - Vehicle moves by itself or exhibits reduced range from the transmitter.**

- Make certain there is no outside radio interference in your area. The best way to test this is to take the vehicle as far away from radio towers, electrical lines or tall buildings as possible to ensure no further radio interference will occur.