

30-035209 Bottom Cabinet

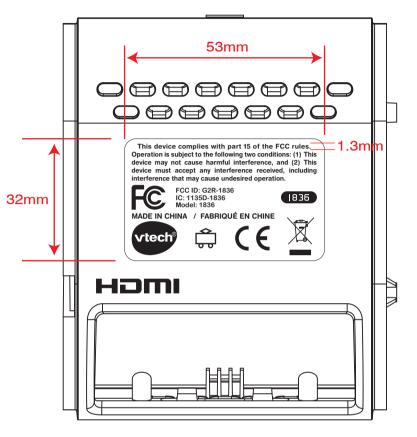

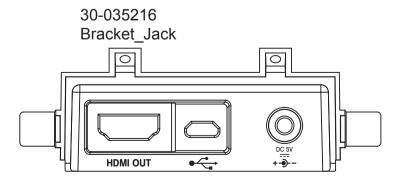

黑凸白凹


30-035212 Button Move-Card



30-035226 Door Mic-SD



30-035217 Bracket standby-battery

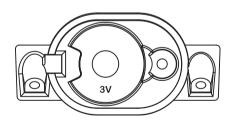

30-035218 Door Standby-battery

