

K28 说明书

user manual: 70x110 mm

ALL IN ONE  
selfie stick tripod  
Model K28

User Manual

Product Introduction

Replacing Battery

How to Use Remote

1. turn on the power switch, LED indicator start flashing.

2. go to setting - turn on bluetooth - search and pair with "SelfieCom"

3. after sucessfully paired, LED indicator lights off.

(Android phones need to set volume key as capture function)

TIKTOK remote(Optional)

arrow key

play/pause/like

capture/record

After the remote is successfully connected with your phone , open TIKTOK app and use the arrow key to simulate finger sliding action.  
short press ① is play/pause  
double click ① is like  
short press ② is capture/record

if you find the capture button not functioning in TIKTOK camera, enter TIKTOK camera setting and turn on the volume key as capture function.

\* For iPhones, below settings are required before using tiktok remote.  
setting ➡ assessibility ➡ touch ➡ assistiveTouch [On]  
and lock the screen rotary as below:

Lock screen rotary

if it is still not functioning in Tiktok camera, hold and press ② , LED indicator lights on constantly, and use[up],[down],[left],[right] to adjust the icon/dot to appropriate postion at the same time.  
release ② button after it is done, LED lights off.

enter Tiktok camera setting

turn on this

PDF  
Adobe

## FCC Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

• Reorient or relocate the receiving antenna.

• Increase the separation between the equipment and receiver.

• Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

### RF Exposure Information

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.