


UNIVERSAL WIRELESS KEYPAD

GETTING STARTED

Locate the LEARN button on the garage door opener. *NOTE: Your garage door opener may look different.*

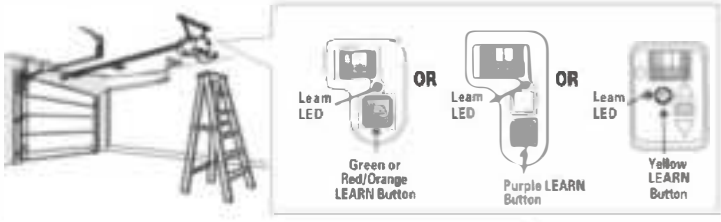

PROGRAM THE INITIAL PIN

Before You Begin:


Programming is time-sensitive

1 Write a 4-digit PIN# of your choice in steps 4 and 6.

2 Find and write your opener ID# from the list below to use in step 4.

Number of Button Press Needed	Compatible Brand	Type/Color of Smart/DIPswitch
1	Linear	MegaCode 1997-Current 318MHz
2	Chamberlain/LiftMaster/Craftsman	Orange/Red Button 1997-2005 390MHz
3	Chamberlain/LiftMaster/Craftsman	Purple Button 2005-Current 315MHz
4	Chamberlain/LiftMaster/Craftsman	Green Button 1993-1996 390MHz
5	Genie/overhead Door	Intellicode 2005-Current 315MHz
6	Genie/overhead Door	Intellicode 2005-Current 390MHz
7	Stanley	Security Code 1998-Current 310MHz
8	Chamberlain/LiftMaster/Craftsman	Yellow Button 2011-Current 310/315/390MHz
9	Wayne Dalton	Rolling Code 372.5MHz 1993- Current
10	Chamberlain/LiftMaster/Craftsman	9 Code Switch 1990-1992 390MHz
11	Chamberlain/LiftMaster/Craftsman	9 Code Switch 1990-1992 315MHz
12	Genie 12-Code	12 Code Switch 1985 390MHz
13	Linear 10-Code	Ez Code 10 Code Switch 300MHz
14	Chamberlain/LiftMaster/Craftsman	8 Code Switch 390MHz
15	Stanley Multi Code	10 Code Switch 310MHz
16	Genie 9-Code	9 Code Switch 390MHz
17	Linear Moor-O-Matic	8 Code Switch 310MHz
18	Chamberlain/LiftMaster/Craftsman	7 Code Switch 390MHz

3 Press and hold the * and # buttons until the keypad stops flashing

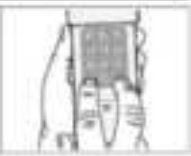

4 **IMPORTANT:** You have 10 seconds to complete this step. If the keypad light turns off before completing this step, go back to step 3




Enter your 4-digit PIN __ __ __ __, and press #.
Enter the opener ID __ __ __ __, and press #.

5 Press and quickly release the LEARN button on the garage door opener.



6 Enter your 4-digit PIN __ __ __ __, and press the 0 key
NOTE: For Genie and Overhead Door units, press the 0 key twice.

7 Test by entering your 4-digit PIN, then press and hold the 0 key until door activates

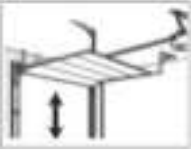


CHANGING AN EXISTING PIN

1. Enter the existing 4-digit PIN #, and press *
2. Enter a new 4-digit PIN # __ __ __ __, and press *
3. Test by entering your new 4-digit PIN # and press the 0 key

BATTERY


Replace the 2x AAA batteries when keypad light becomes dim or does not light up. Slide cover up, remove battery cover, and replace batteries.

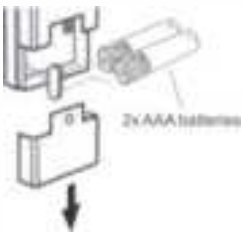

INSTALLATION

Install out of reach of small children at a minimum height of 5 feet (1.5 m) above floors, landings, steps or any other adjacent walking surface, and away from ALL moving parts of door. Secure keypad to a smooth surface. Mount the keypad out of the path of the moving garage door, but within sight of it (4" [10 cm] clearance is needed for the cover).

1. At the keypad cover bottom, pinch sides and firmly slide the cover from the keypad.
2. Remove the battery cover to show mounting holes.
3. Remove the battery and mount the keypad using screws provided.
4. Reassemble the battery cover and keypad cover.

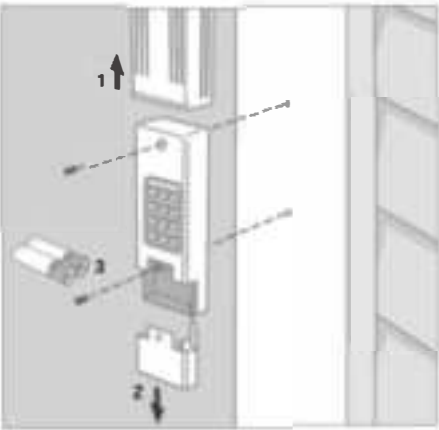

Please take attention that changes or modification not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference.
(2) This device must accept any interference received.