

User manual

Product Name: Remote Control

Model: GDR-39

This transmitter works for both 9 and 12 dip switch receivers.

1. Using your original transmitter remove the panel to identify the switch pattern. You can also match the switch pattern to the back of the operator hanging in your garage.
2. Remove the programming panel from your new transmitter.
3. Using a small tip tool (such as ballpoint pen) match the switch pattern to your new transmitter.
 - If your transmitter/operator has 9 switches ,from left to right, set the first 9 using the switch pattern and the last 3 to the OFF position
4. Replace the programming panel and test operation. Repeat these steps for any additional transmitters.

FCC Statement:

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.