



MUSIC WITHOUT LIMITS

TRAILGATOR 120 Bluetooth SPEAKER

USER MANUAL

MODEL:XS-S612PB

THANK YOU FOR CHOOSING MONSTER

Congratulations on your Rockin' Roller 4 MAX indoor/outdoor wireless speaker. Please take your time to explore all of the features and utilities we have built into this product.

We put all of our products through rigorous testing and quality control. We take great pride in presenting this product to you now. For your peace of mind, we offer a one-year limited warranty against manufacturing defects and workmanship. Please refer to the warranty section of the user manual for more details.

For more information on all of our products, please visit: MyMonsterAudio.com.

FOLLOW US:



@mymonsteraudio



@mymonsteraudio



/MyMonsterAudio

PACKAGE CONTENTS

Included with your Rockin' Roller 4 Max purchase:



AC Power Adapter

(Length: 1m)



User Manual & Quick Start Guide



Microphone


(Jack: 1/4"; Length: 2m)

TABLE OF CONTENTS


PRODUCT CONTROLS	1	FEATURES	
POWER & BATTERY		▪ Standby Mode	5
▪ Power/Charging	2	▪ Telescoping Handle	5
▪ USB Power Banks	2	TROUBLESHOOTING	6
		SPECIFICATIONS	7
AUDIO		IMPORTANT SAFETY INSTRUCTIONS	8
▪ Bluetooth Pairing	3	LIMITED WARRANTY	9
▪ ¼" Mic Inputs & Gain/Echo Controls	3	FCC WARNING STATEMENT	10
▪ AUX-IN (3.5 mm)	3		
▪ True Wireless System (TWS)	4		
▪ Bass/Treble Adjustment	4		
▪ FM Radio	4		
▪ Saving Radio Stations (FM)	5		
▪ Equalizer Presets (Bluetooth/AUX-IN ONLY)	5		

PRODUCT CONTROLS

 Control Panel

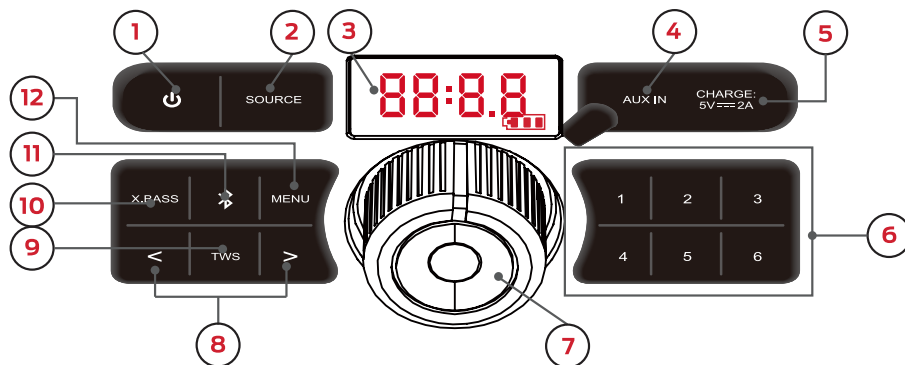

LED Display

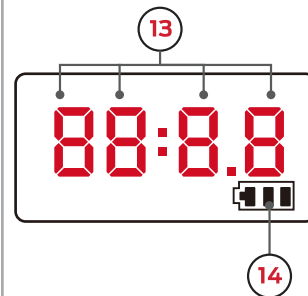 

Control Panel

- 1. STANDBY Button
- 2. SOURCE Button
- 3. LED Display
- 4. AUX IN
- 5. USB charger Port
- 6. NUMBER Buttons
- 7. VOLUME Knob
- 8. PREVIOUS/NEXT Buttons
- 9. TWS Button
- 10. X.BASS Button
- 11. BLUETOOTH Button

12. MENU Button

 
LED Display

- 13. SSD Display
- 14. BATTERY Display

Side Panel

- 15. POWER ON/OFF Switch
- 16. USB-C Charging Port
- 17. MIC 1/4" Input

Side Panel

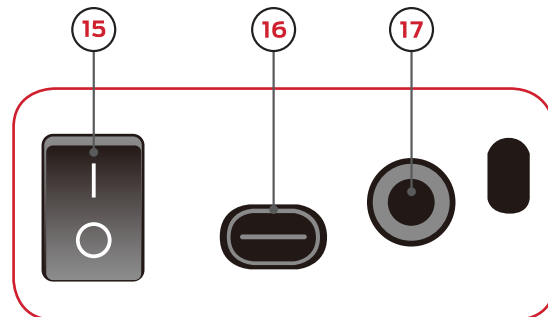


POWER & BATTERY

IMPORTANT: Before first use, charge for ~6 hours.


Power/Charging

 - Connect the USB-C port to an external power source using the included power adapter.

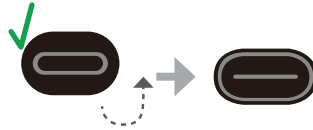


Full Charge – achieved in 4 hours while powered OFF
– achieved in 12 hours while powered ON.

 - Flip the switch UP to turn ON the speaker.
(“bl” will appear on the LED display. The speaker will connect to the last selected source.)
- Flip the switch DOWN to turn OFF the speaker.

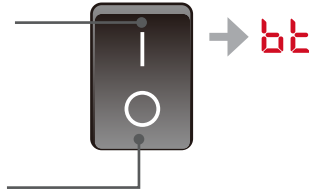

Battery

 - When the battery is fully charged.
- While the battery is charging.



The indicator is only active while the speaker is on.
– Indicator shows current battery level each time the speaker is turned ON.

USB Power Banks

- Connect up to two devices to the speaker via the 5V/1A USB ports to charge those devices from the speaker's internal battery.

(USB cable not included.)



USB ports are for charging ONLY
– they will not make audio connections.

AUDIO

Bluetooth Pairing

- 1** Place your mobile device within 3 feet of the speaker.



Make sure *Bluetooth* is enabled on your mobile device.



- 2** Press the **BLUETOOTH** button to set the speaker to Bluetooth mode.

(Press)



The speaker will automatically enter pairing mode.

*The speaker will make audible and visual **LED** confirmation.*



- 3** Select "MONSTER RR4MX" on your mobile device to pair with the speaker.



*The speaker will make audible confirmation and the *Bluetooth* icon will stop flashing.*



 
"Connected"



~30 feet max connection range after paired.
Moving devices outside this range may cause disruption or signal loss.

1/4" Mic inputs & Gain / Echo Controls

- Connect a microphone to the MIC ports with a standard 1/4 inch jack.

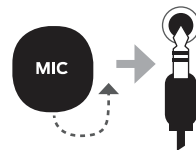

The device(s) will automatically transmit audio playback through the speaker in the current mode.

- Press **MENU** button and turn volume knob to increase their effect, and counter-clockwise to decrease their effect.

"Mic Volume"

77 10

(-)



(+)

"Mic Echo"

 
E 10



Devices plugged into the 1/4 inch ports will transmit audio playback in all modes/sources.

AUX-IN (3.5mm)

- Connect a music device to the AUX IN port with a standard 3.5 mm jack. The speaker will automatically change to AUX mode.

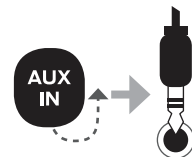

*Speaker will make audible and visual **LED** display confirmation.*

AUX

"AUX IN"

True Wireless System (TWS)

 
Wirelessly connect two Rockin' Roller 4 MAX speakers together.

- 1 Place two Rockin' Roller 4 MAX speakers within 10 feet of each other.




- 2 Connect your music device to one of the speakers via BLUETOOTH.

Leave the second speaker in BLUETOOTH mode without connecting to a device.

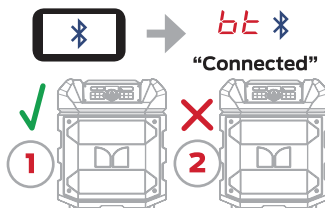

 - 3 Press the TWS pairing button on both speakers to activate TWS pairing. The speakers will automatically connect with each other.

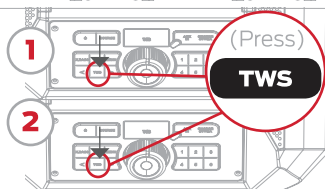

Speaker will make audible confirmation.

"Synchronized" TWS

To disconnect a speaker, press the TWS button.

(Press)

TWS



~30 feet max connection range after paired.
Moving devices outside this range may cause disruption or signal loss.

Bass/Treble Adjustment

- Press the MENU button to enter bass level mode.



- Press the MENU button to enter treble level mode.



- Turn the VOLUME knob clockwise to increase or counter-clockwise to decrease the bass/treble levels (-06 to 06).



FM Radio

- 1 Press the SOURCE button to change the speaker to FM RADIO.



Speaker will make audible and visual LED display confirmations.

- 2 Press the ARROW buttons to change radio frequency. Press and hold the ARROW buttons to scan for a station

(Press or Hold)



FEATURES

Saving Radio Stations (FM)

- Save the current radio station by pressing and holding one of the NUMBER BUTTONS (1-6).

(Hold)  106.9

The LED display will confirm the saved station (P-1, P-2, etc.)

P 1

Press the NUMBER KEY while in radio mode to go to the corresponding SAVED station.

(Press) 

Equalizer Presets (Bluetooth/AUX-IN ONLY)

- Press a NUMBER BUTTON (1-6) to change the speaker's equalizer settings.

Setting will show on the speaker's LED display.

E - 1

BUTTON	SETTING	LED
	FLAT	E-1
	JAZZ	E-2
	CLASSIC	E-3
	ROCK	E-4
	POP	E-5
	NORMAL	E-6

Standby Mode

- Press **STANDBY** button to put the speaker in standby mode.

(Press) 

LED indicators will shut off. Power icon will turn on.

OFF  

- Press **STANDBY** button to wake the speaker up from standby.

 
 
(Press) 



The speaker will automatically enter standby mode after ~15 minutes of inactivity or lack of connection. Standby mode can be manually enabled in any mode.

Telescoping Handle

- Pull the telescoping carry handle **UP** and away from the speaker to extend it.
- Press the **BUTTON** on the grip area to adjust the carry handle to a comfortable length.

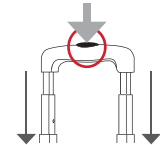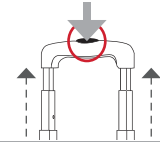

DO NOT use the carry handle when speakers are stacked. The handle is graded to only carry the weight of one Rockin' Roller 4 MAX

TROUBLESHOOTING

Speaker is not powering on	▪ Verify that the POWER switch is fully turned to the ON position. (see pg. 2) ▪ Ensure the speaker is not in STANDBY MODE . ▪ Make sure AC POWER adapter is fully inserted into the unit. (see pg.2)
Buttons are not responding	▪ Reset the speaker by turning the power OFF, and then back ON. (see pg. 2) ▪ Unplug the AC POWER adapter , then plug it back (see pg. 2)
No music is playing	▪ Make sure the speaker is set to the same source as your audio device. If you are playing audio via AUX cable, make sure the speaker is in AUX IN mode, etc. (see pg. 3-5) ▪ Make sure the VOLUME is high enough on your audio device as well as the speaker.
Bluetooth audio quality is poor	▪ Move your music device closer to the speaker. ▪ Remove objects that may be interfering with the wireless connection.
Bluetooth device is not pairing	▪ Verify that the speaker and your device have BLUETOOTH mode active. (see pg. 3) ▪ Make sure the speaker and/or your device is not already paired with another device. ▪ Check that the speaker is in pairing mode, (see pg. 3) ▪ Turn the speaker OFF, and then back ON. Press and hold the BLUETOOTH button to manually enter pairing mode, (see pg. 3)
Contact our support team for additional services	Call: 1-800-976-0677 Email: support@mymonsteraudio.com Hours of Operation: Monday – Friday: 7:00 am – 5:00 pm (PST) Saturday – Sunday: CLOSED

SPECIFICATIONS

General	
Bluetooth Version	5.0
Power Input	15v / 3A
Speaker Drivers	100W
THD + Noise	<10%
Cabinet Material	Plastic
Battery Capacity	12V 4500mAh
USB Bank Output	5V/2A
Dimensions (W x H x D)	14.5" x 17.7" x 10.8"
Weight	25.5 lbs

Operating Temperature	
Operating Temperature Range	32F° - 104F°
Operating Humidity Range	40~90% RH
Storage Temperature Range	-13F° to 158F°

IMPORTANT SAFETY INSTRUCTIONS

- 1) Read these instructions – All the safety and operating instructions should be read before this product is operated.
- 2) Keep these instructions – The safety and operating instructions should be retained for future reference.
- 3) Heed all warnings - All warnings on the appliance and in the operating instructions should be adhered to.
- 4) Follow all instructions – All operating and use instructions should be followed.
- 5) Do not use this apparatus near water.
- 6) Clean only with dry cloth.
- 7) Do not block any ventilation openings, install in accordance with the manufacturer's instructions.
- 8) Do not install near any heat sources such as radiations, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9) Do not defeat the safety purpose of the polarized or grounding plug. A polarized plug has two blades with one wider than the other. A grounding plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 10) Protected the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- 11) Only use attachments/accessories specified by the manufacturer.
- 12) Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart or rack is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
- 13) Unplug this apparatus during lightning storms or when unused for long periods of time.
- 14) Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- 15) Mains plug is used as the disconnect device, the disconnect device shall remain readily operable.
- 16) Do not install this equipment in a confined or building-in space such as a book case or similar unit, and remain a well ventilation conditions at open site. The ventilation should not be impeded by covering the ventilation openings with items, such as newspapers, table-cloth, curtains, etc.
- 17) No naked flame sources, such as lighted candles, should be placed on the apparatus.
- 18) Attention should be drawn to the environmental aspects of battery disposal.
- 19) The use of apparatus in moderate climate.
- 20) The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus.

WARNING: To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.

WARNING: The batteries shall not be exposed to excessive heat such as sunshine, fire or the like.

CAUTION: Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.

LIMITED WARRANTY

This Monster-branded product, marketed as new, in the original carton to the original purchaser ("Product"), is warranted by Russell Distribution Company, LLC against manufacturing defects in materials and workmanship for a limited warranty period of ninety (90) days for Labor and one (1) year for Parts. This Limited Warranty is conditioned upon proper use of Product by you, the Purchaser.

This Limited Warranty does not apply to store display products and product sold as a "marked down" special, in as is condition, "close outs", "liquidation and clearance sales", "open box", products missing accessories, or no fault found.

Proof of purchase in the form of a Bill of Sale, Receipt or Receipted Invoice is evidence the Product is within the limited warranty period. The Bill of Sale, Receipt or Receipted Invoice must be presented as a pre-condition to obtaining the limited warranty service.

This limited warranty begins on the original date of purchase and is valid only on Products purchased through authorized dealers and used in the United States, and Puerto Rico, by the original Purchaser. To receive warranty service, the Purchaser must first contact us for problem determination and service procedures. The original dated bill of sale, receipt or receipted invoice must be presented upon request as proof of purchase.

We will repair your product or if repairs cannot be made, we will replace it at no charge with the same or similar product. If the Product is defective as specified in this limited warranty during the limited warranty period, we may use new or remanufactured parts to repair the Product. All replaced parts and products become our property and must be returned to us. Replacement parts and products assume the remaining original limited warranty, or ninety (90) days, whichever is longer.

Product freight must be prepaid by you, the original Purchaser and shipped in either its original packaging or packaging affording an equal degree of protection. We will not be responsible for or obligated to replace damaged Products.

If the Product is received damaged, it is your responsibility as the consumer to file a claim against the carrier. We will only store the damaged Product for 30 days and reserve the right, in our sole discretion, to dispose of the damaged Product or ship it back to you at your expense after 30 days.

This limited warranty covers manufacturing defects in materials and workmanship encountered in normal, and except to the extent otherwise expressly provided for in this statement noncommercial use of this Product, and shall not apply to the

following, including, but not limited to: Damage which occurs in shipment; delivery and installation; applications and uses for which this Product was not intended; altered Product or serial numbers; cosmetic damage or exterior finish: accidents, abuse, neglect, fire, water, lightning or other acts of nature; use of products, equipment, systems, utilities, services, hardware, supplies, accessories, applications, installations, repairs, external wiring or connectors not supplied or authorized by us or the manufacturer, which damage this Product result in service problems: incorrect electrical line voltage, fluctuations and surges: customer adjustments and failure to follow operating instructions, cleaning, maintenance and environmental instructions that are covered and prescribed in the instruction book; reception problems and distortion related to noise, echo, interference or other signal transmission and delivery problems; burned-in images. Uninterrupted or error-free operation of the Product is not warranted.

THERE ARE NO EXPRESS OR IMPLIED WARRANTIES OTHER THAN THOSE LISTED AND DESCRIBED ABOVE, AND NO WARRANTIES WHETHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, SHALL APPLY AFTER THE EXPRESS WARRANTY PERIODS STATED ABOVE, AND NO OTHER EXPRESS WARRANTY OR GUARANTY GIVEN BY ANY PERSON, FIRM OR CORPORATION WITH RESPECT TO THIS PRODUCT SHALL BE BINDING ON US. REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS LIMITED WARRANTY IS YOUR EXCLUSIVE REMEDY AS THE CONSUMER. WE SHALL NOT BE LIABLE FOR ANY INCIDENTAL, OR CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT; EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED FOR THE DURATION OF THIS LIMITED WARRANTY THIS LIMITED WARRANTY SHALL NOT EXTEND TO ANYONE OTHER THAN THE ORIGINAL PURCHASER OF THIS PRODUCT, IS NONTRANSFERABLE AND STATES YOUR EXCLUSIVE REMEDY.

Some states do not allow limitations on how long an implied warranty lasts, or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you. This limited warranty gives you specific legal rights, and you may also have other rights, which vary from state to state. Any provision contained herein which is found contrary to state or local laws shall be deemed null and void and the remaining provisions shall continue in full force and effect.

To obtain warranty service, please contact technical support with questions

Phone: 1-800-976-0677 ▪ Email: support@mymonsteraudio.com

DO NOT return this product to the store. Visit: MyMonsterAudio.com

FCC Caution:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

To maintain compliance with FCC's RF Exposure guidelines, This equipment should be installed and operated with minimum distance between 20cm the radiator or your body: Use only the supplied antenna.

FCC ID: 2AAIN-TL120