

120克书纸3折4页后再对折  
折后尺寸: 100\*100mm

# White noise machine

- Relaxing Sound Machine with Mood Light -



USER GUIDE

MODEL NO.: SA16

## Timer Function

The default mode is uninterrupted playback, after activate the timer button, it will be:

1. On 30 minutes mode, countdown for 30 minutes playing.
2. On 60 minutes mode, countdown for 60 minutes playing.
3. On 90 minutes mode, countdown for 90 minutes playing.

## Using the Light

1. **White light: Six Gear Positions Brightness**  
Press the to turn the white light on.  
If you need adjust the brightness, in the white light mode, press again to choose the desired brightness level. The White light can be turned off by long press.
2. **Color light: 7-colors changing**  
Press the to select the color you want.  
Color transformation order: Red - Orange - Navy - Green - Blue - Coral - Seven Color Changing  
The color light can be turned off by long press.  
Tips: Both lights can be turned on by short press in standby mode.

## Product Function:

- White Noise Sounds:** Press to play white noise sounds. Press again to play the next white noise sound. There are 14 unique White Noise Sounds available.
- Nature Sound button:** Press to play nature sounds. Long press to turn off the sounds. There are 20 different nature sounds and ASMR sounds to choose from.  
\*Music Sequence: Thunder, Rain 1, Rain 2, Brook 1, Brook 2, Firewood, Summer night, Forest, Ocean Wave, Laundry, Flute, Tibet Bowl 1, Tibet Bowl 2, Meditation, 3D Ear clean, Eat Nuts, Eat candy, Eat Ice, Eat Potato Chips, Bottle tapping.
- Child:** Short Press to play sounds for the child. Long press to turn off the sounds. There are 6 different sounds to choose from.  
\* Music Sequence: Heartbeat, Shusha, Little Star Kevin Lullaby, Lullaby 2, Hash little baby.
- Timing Sleeping Setting:** choose uninterrupted work all night or use 30, 60 & 90 minutes timer.
- Warm White Light:** Six Adjustable Brightness Level.
- Seven colors mood changing light**

## Recharging the battery:

1. Plug the Type-C USB cable to the USB port.
2. The power indicator will light up when charging.
3. When the charging is finished, the charging light will disappear.

## Package Contents:


- \* 1 X Sound Machine (Built-in rechargeable battery)
- \* 1 X USB Charging Cable
- \* 1 X Owner's Manual

## Note:

Use 5V charging head available to connect the provided cable for charging the battery.

## Operation:

1. On/Off/ wireless speaker
2. Timer
3. Volume +/-
4. Warm light
5. Mood light
6. Sounds options
7. The USB port (5V 1A)
8. Earphone Jack

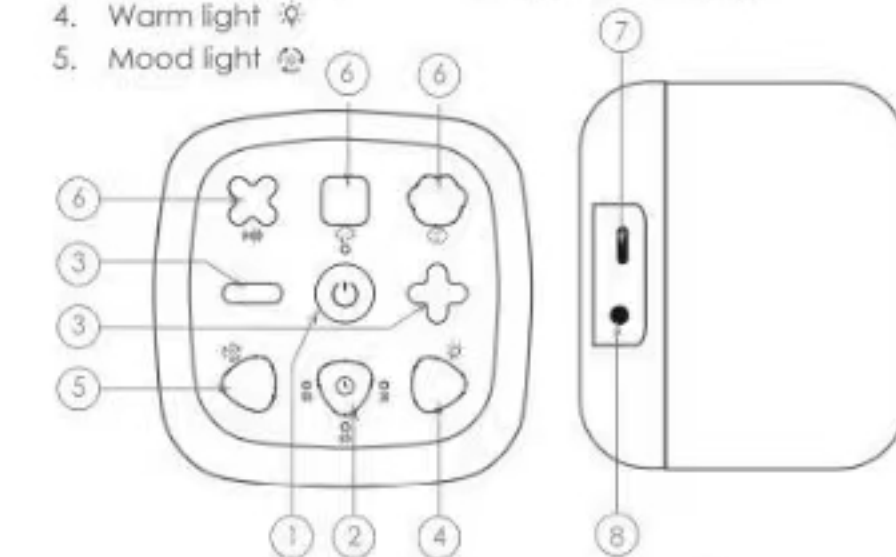

In nature sound music mode, short press On/OFF key enter the wireless speaker mode.

## Important Safeguards:

- \* To protect from electrical shock, do not immerse cord, plug or unit in water or other liquid. Care should be taken so that objects do not fall on and liquids are not spilled through openings in the unit.
- \* Do not operate with a damaged cord or plug, or the unit will be malfunctioned.
- \* The unit should keep away from heat sources such as direct sunlight, radiators, heat registers, stoves or other heat-producing appliances.
- \* To clean, gently wipe with a soft cloth moistened with warm water or mild detergents only, and then remove all moisture with a soft, dry cloth. Do not use harsh solvents or chemicals for cleaning.

## Preparatory steps

1. Unpack the product.
2. This machine is powered by the DC 5V USB port.
3. Connect the USB cable to the backside of the unit and connect into a 5V adapter.  
**(Please don't use 9V/12V/24V charger for this unit)**

## Listening to Nature Sounds

1. Press and hold "P" for 2 seconds.
2. Press relevant icon to select the sound you want to hear. You can turn the sounds off by long press the icon.
3. To adjust the volume, press the or to the desired level.
4. When finish listening to the sounds, you may turn them off by long-pressing the .

## Bluetooth Speaker

1. Press the ON/OFF key to turn on the speaker, if in bluetooth speaker mode: it will give a notification: bluetooth Speaker.
2. Go to mobile's setting page and pair the SA16, after connection, it will have a connected notification.
3. Enjoy the music from your mobile phone.
4. If you need to repair the speaker, long-press the Timer button until the power indicator LED flashes.



CE FCC RoHS

MODEL: SA16 MADE IN CHINA

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.