


Yealink

Ultra-elegant Gigabit IP Phone


SIP-T48S

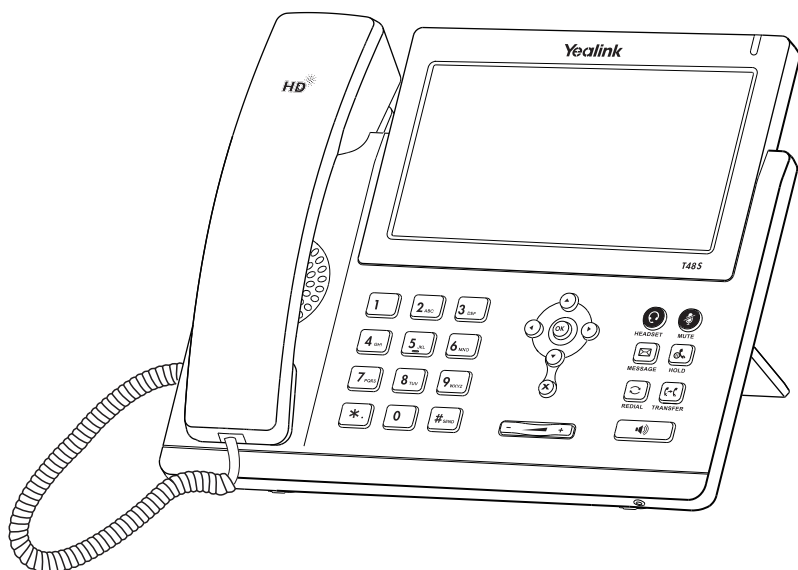

Quick Start Guide (V81.1)

Packaging Contents

The following items are included in your package. If you find anything missing, contact your system administrator.

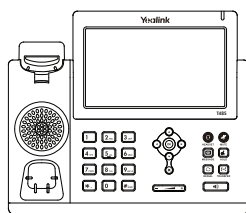

IP Phone



Handset



 
Handset Cord




Quick Start Guide




Ethernet Cable



Power Adapter
(Optional)

 

Stand

 


Wall Mount Bracket
(Optional)



Note: We recommend that you use the accessories provided or approved by Yealink. The use of unapproved third-party accessories may result in reduced performance.

Assembling the Phone

1. Attach the stand, as shown below:

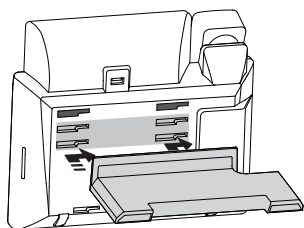



Desk Mount Method

 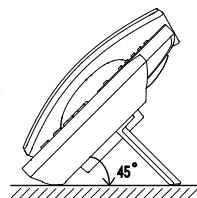

The two wall mount slots are plugged up by silica gels. You can pull out the silica gels when mounting your IP phone to a wall.

Note: You can also mount the phone to a wall. For more information on how to attach the wall mount bracket, refer to Yealink Wall Mount Quick Installation Guide for Yealink IP Phones.


2. Connect the handset and optional headset, as shown below:

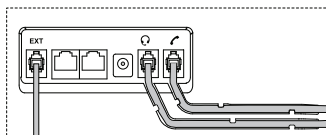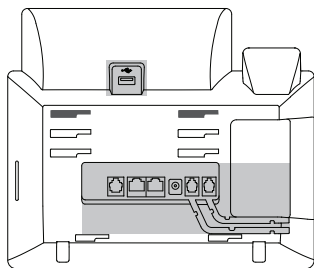

Wireless Headset Adapter EHS36

Note: The headset or wireless headset adapter EHS36 should be purchased separately.
The EXT port can also be used to connect the expansion module EXP40. For more information on how to use the EHS36 and EXP40, refer to Yealink EHS36 User Guide and Yealink EXP40 User Guide.


3. Connect the USB flash driver, as shown below:

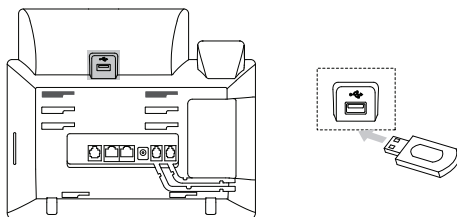

Note: The USB port can also be used to connect the Bluetooth USB dongle BT40 or Wi-Fi USB dongle WF40. The Bluetooth USB dongle BT40 or Wi-Fi USB dongle WF40 should be purchased separately. For more information on how to use the BT40 and WF40, refer to Yealink Bluetooth USB Dongle BT40 User Guide and Yealink Wi-Fi USB Dongle WF40 User Guide.

4. Connect the network and power, as shown below:

You have two options for network and power connections. Your system administrator will advise you which one to use.

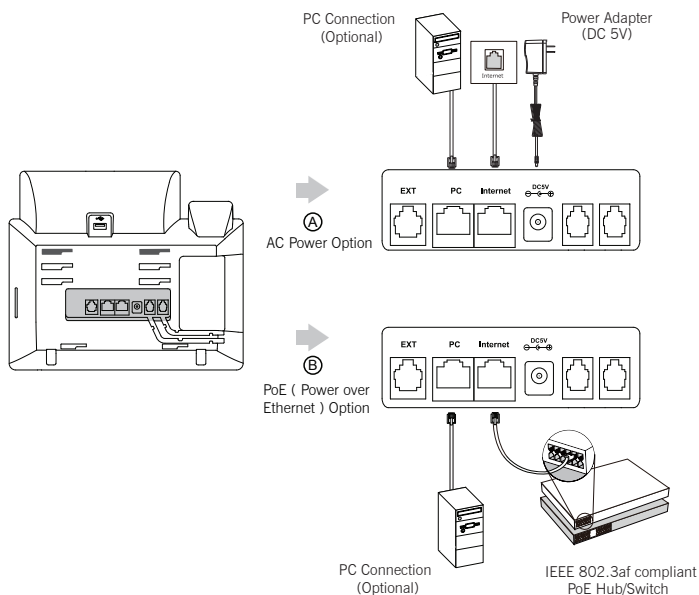

Note: The IP phone should be used with Yealink original power adapter (5V/2A) only. The use of the third-party power adapter may cause the damage to the phone.

If inline power (PoE) is provided, you don't need to connect the power adapter. Make sure the hub/switch is PoE-compliant.

Startup

After the IP phone is connected to the network and supplied with power, it automatically begins the initialization process. After startup, the phone is ready for use. You can configure the phone via phone user interface or web user interface.

Welcome
Initializing... Please wait

Configuring Your Phone

Configuring via web user interface

Accessing the web user interface:

1. Press the **OK** key when the phone is idle to obtain the IP address of the phone.
2. Open a web browser on your computer, enter the IP address into the address bar (e.g., "http://192.168.0.10" or "192.168.0.10") and then press the **Enter**.
3. Enter the user name (default: admin) and password (default: admin) in the login page and click **Confirm**.

Network Settings: Click on **Network->Basic->IPv4 Config**

You can configure the network settings in the following ways:

DHCP: By default, the phone attempts to contact a DHCP server in your network to obtain its valid network settings, e.g., IP address, subnet mask, gateway address and DNS address.

Static IP Address: If your phone cannot contact a DHCP server for any reason, you need to configure the IP address, subnet mask, gateway address, primary DNS address and secondary DNS address for the phone manually.

PPPoE: If you are using an xDSL modem, you can connect your phone to the Internet via PPPoE mode. Contact the ITSP for the PPPoE user name and password.

Note: The IP phone also supports IPv6, but IPv6 is disabled by default.

Wrong network settings may result in the inaccessibility of your phone and may have an impact on the network performance. Contact your system administrator for more information.

Account Settings: Click on **Account->Register->Account X** (X=1,2,3...15,16)

Parameters of the account:

Register Status:	It shows the register status of the current account.
Line Active:	You can select Enabled/Disabled to enable/disable the account.
Label:	It is shown on the LCD screen to identify the account.
Display Name:	It is shown as caller ID when placing a call.
User Name:	It is provided by ITSP for registration (required).
Register Name:	It is an authenticated ID for authentication provided by ITSP (required).
Password:	It is provided by ITSP for registration (required).
Server Host:	It is provided by ITSP for registration (required).

Register status icons on the LCD screen:



(Green) Registered



(Gray) Register Failed




(Green and Flashing) Registering


Note: Check with your system administrator if any error appears during the registration process or a specific configuration is required for your registration.

Configuring via phone user interface

Network Settings:

When the phone is idle, tap  -> **Advanced** (default password: admin)-> **Network->WAN Port/VLAN/Webserver Type/802.1x/VPN/LLDP/CDP/NAT** to configure the network.








Account Settings:

When the phone is idle, tap  -> **Advanced** (default password: admin)-> **Account** to configure the account.

Note: For more information on account parameters, refer to **Configuring via web user interface** above.

Using Your Phone

Navigating the Touch Screen

- To enter the main menu, tap .
- To return to the idle screen, tap .
- To go back to the previous menu, tap .
- To select a soft key, tap the soft key.
- To select an item, tap the item.
- To turn pages, tap  or  on the touch screen.
- To scroll through values in a pull-down list, press  or .

Entering and Updating Data

To enter data:

1. Tap the field you want to edit.
2. Tap the **IME** soft key to switch input modes.
3. Enter data using the keypad.
4. Tap the **Save** soft key.

To select a field option:

Tap the field name, and then tap the field's highlighted box. From the pull-down list, tap the desired option.


Basic Call Features

Placing a Call

Using the handset:

1. Pick up the handset.
2. Enter the number, and then tap **Send**.

Using the speakerphone:

1. With the handset on-hook, press .
2. Enter the number, and then tap **Send**.

Using the headset:

1. With the headset connected, press  to activate the headset mode.
2. Enter the number, and then tap **Send**.

Note: During a call, you can alternate between the headset, hands-free speakerphone and handset modes by pressing the **HEADSET** key, the **Speakerphone** key or by picking up the handset. Headset mode requires a connected headset.

Answering a Call

Using the handset:

Pick up the handset.

Using the speakerphone:

Press .

Using the headset:

Press .

Note: You can reject an incoming call by tapping the **Reject** soft key.

Ending a Call

Using the handset:

Hang up the handset or tap the **EndCall** soft key.



Using the speakerphone:

Press  or tap the **EndCall** soft key.



Using the headset:

Tap the **EndCall** soft key.

Redial

- Press  to enter the **Placed Calls** list, and then tap the desired entry.
- Press  twice when the phone is idle to dial out the last dialed number.

Call Mute and Un-mute



- Press  to mute the microphone during a call.
- Press  again to un-mute the call.

Call Hold and Resume

To place a call on hold:

Press  or tap the **Hold** soft key during an active call.



To resume the call, do one of the following:

- If there is only one call on hold, press  or tap the **Resume** soft key.
- If there is more than one call on hold, tap the call you want to resume, and then press  or tap the **Resume** soft key.




Call Transfer

You can transfer a call in the following ways:




Blind Transfer

1. Press  or tap the **Transfer** soft key during an active call. The call is placed on hold.
2. Enter the number you want to transfer to.
3. Press  or tap **Transfer**.

Semi-Attended Transfer

1. Press  or tap the **Transfer** soft key during an active call. The call is placed on hold.
2. Enter the number you want to transfer to, and then press .
3. Press  or tap **Transfer** when you hear the ring-back tone.

Attended Transfer

1. Press  or tap the **Transfer** soft key during an active call. The call is placed on hold.
2. Enter the number you want to transfer to, and then press .
3. Press  or tap **Transfer** when the second party answers.

Call Forward

To enable call forward:

1. When the phone is idle, tap  -> **Features**-> **Call Forward**.
2. Select the desired forward type:

Always Forward—Incoming calls are forwarded unconditionally.

Busy Forward—Incoming calls are forwarded when the phone is busy.

No Answer Forward—Incoming calls are forwarded if not answered after a period of time.

3. Enter the number you want to forward to. For **No Answer Forward**, tap the gray box of the **After Ring Time** field, and then tap the desired ring time to wait before forwarding.
4. Tap the **Save** soft key to accept the change.

Call Conference



1. Tap the **Conference** soft key during an active call. The call is placed on hold.
2. Enter the number of the second party, and then tap **Conference**.
3. Tap the **Conference** soft key again when the second party answers. All parties are now joined in the conference.
4. Tap the **EndCall** soft key to disconnect all parties.

Note: You can split the conference call into two individual calls by tapping the **Split** soft key.

Voice Message


 




Message waiting indicator on the idle screen indicates that one or more voice messages are waiting at the message center. The power indicator LED slowly flashes red.

To listen to voice messages:

1. Tap  and then tap **Connect**, or press .
2. Follow the voice prompts to listen to your voice messages.


Customizing Your Phone

Call History



1. When the phone is idle, tap , and then tap the desired call list on the left.
2. Tap  or , or press  or  to scroll to the desired page.
3. Tap  after the desired entry, and then you can do the following:
 - Tap **Send** to call the entry.
 - Tap **Add** to add the entry to the local directory.
 - Tap **Edit** to edit the phone number of the entry before placing a call.
 - Tap **Blacklist** to add the entry to the blacklist.
 - Tap **Delete** to delete the entry from the list.

Contact Directory



To add a contact:

1. When the phone is idle, tap , and then tap **All Contacts** on the left.
2. Tap **Add** to add a contact.
3. Enter a unique contact name in the **Name** field and contact numbers in the corresponding fields.
4. Tap the **Save** soft key to accept the change.

To edit a contact:




1. When the phone is idle, tap , and then tap **All Contacts** on the left.
2. Tap  after the desired contact.
3. Edit the contact information.
4. Tap the **Save** soft key to accept the change.

To delete a contact:

1. When the phone is idle, tap , and then tap **All Contacts** on the left.
2. Tap  after the desired contact, and then tap **Delete**.
3. Tap **OK** when the touch screen prompts "Delete selected item?".

Note: You can add contacts from call history easily. For more information, refer to **Call History** above.

Volume Adjustment

- Press  during a call to adjust the receiver volume of the handset/speakerphone/headset.
- Press  when the phone is idle or ringing to adjust the ringer volume.
- Press  to adjust the media volume in the corresponding screen.

About us

Founded in 2001, Yealink, a leading provider of VoIP Phone and IP communication solutions, has been focusing on VoIP products characterized by reliable quality, easy deployment and affordable price for more than a decade. Today, customers from over 140 countries rely on Yealink as the backbone of global collaboration to extend the value of network communications.

More about Yealink

Since 2001, Yealink has continued to develop state-of-the art, hi-tech VoIP communication terminals that include IP video phones, IP phones and USB phones. With a worldwide market in more than 140 countries, the company has also established a first-class international service network.

Our priorities are quality, functionality, ease-of-use, customer support and competitive pricing. To provide new solutions for the future in this fast-evolving sector, Yealink's large, talented and highly-experienced VoIP R&D team is totally committed to the pursuit of excellence.

To date, we have passed more than 80 interoperability tests and meet certification requirements set by leading VoIP system and platforms. Yealink works in close partnership with T-Mobile, Telefonica, Portugal Telecom and other leading telecommunication service providers.



YEALINK(XIAMEN) NETWORK TECHNOLOGY CO.,LTD.
Web: www.yealink.com
Addr: 309, 3th Floor, No.16, Yun Ding North Road, Huli
District, Xiamen City, Fujian, P.R. China
Copyright©2016Yealink Inc.All right reserved.

Federal Communication Commission Interference Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.