


START GUIDE


QUICK

ADVANCED PROGRAMMING




BUTTON OVERVIEW

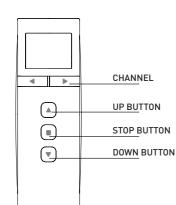


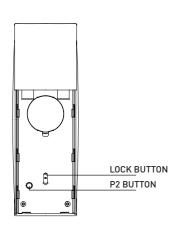

REPLACE BATTERY

 


 Remove cover from remote press gently in and down to disengage cover.



Install battery CR2450 with positive (+) side facing up.

 WALL MOUNTING



Use supplied fasteners and anchors to attach the base to wall.

HIDE SPARE CHANNELS



Press and hold both channel scroll buttons together until 15 appears on the screen.



to see (example 5) confirm by pressing stop

SELECTING A CHANNEL

STEP 1

 


Press left and right arrow; to scroll through channels as required.

STEP 2

READY FOR CONTROL


Now while the channel is active follow the control instructions.



if no button is pressed within 4 seconds, the channel selection will automatically be confirmed.

GROUP CONTROL

Channel "0" is pre-set to control ALL shades paired to your Muli-channel remote.

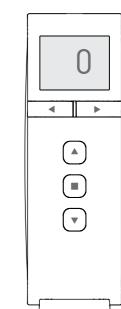

CONTROLLING A SHADE

CONTROL SHADE UP OR DOWN











While the channel is displayed press up or down to move shade accordingly

STOPPING THE SHADE







Press the stop button to stop shade at any point





scroll with the left arrow from ch 15 until you reach the last channel that you want Ch 1 -5 will only be visible


STEP 2. Press STOP on controller

MOTOR RESPONSE

BEEP


CREATE CUSTOM GROUPS

It is possible to copy one channel to another channel to create custom groups

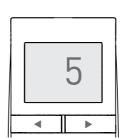

Select the channel you want to transfer

 
STEP 1. Press P2 on existing controller





BEEP

 STEP 2. Press P2 again on existing



MOTOR RESPONSE

Step 3 to be completed

 
within

4 seconds of Step 2



STEP 3. Press P2 on new controller

Select the channel on the new controller



MOTOR RESPONSE



 




 
DISABLE LIMIT SETTING

This mode is intended to be used after all shade programming is completed. User Mode will prevent accidental or unintended changing of limits.


> Push switch to lock or unlocked position







LCD displays "L" when locked

 

LCD displays "U" when locked

SET A FAVORITE POSITION

Repeating these steps after creating a favorite position will delet it.

Move shade to desired position by pressing **UP** or **DOWN** on the remote.





 






STEP 1. Press P2 on controller

OR



MOTOR RESPONSE









STEP 3. Press STOP on controller



 \triangle



BEEP



