 



1.6 User Manual

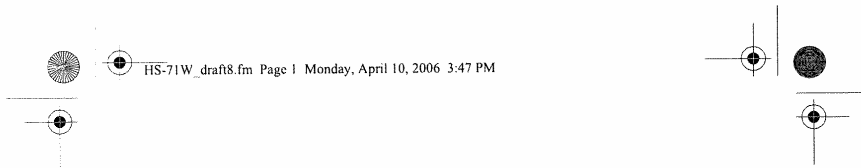

Nokia Bluetooth Headset BH- 501 User Guide



 9249883
Issue 1 EN

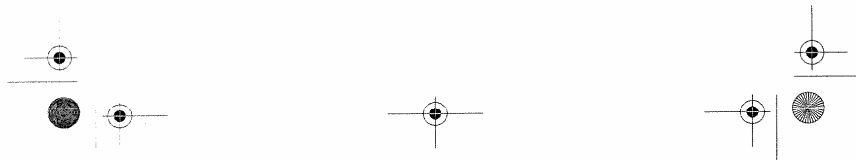

HS-71W_draft8.fm Page 2 Monday, April 10, 2006 3:47 PM

DECLARATION OF CONFORMITY

We, NOKIA CORPORATION declare under our sole responsibility that the product HS-71W is in conformity with the provisions of the following Council Directive: 1999/5/EC. A copy of the Declaration of Conformity can be found at http://www.nokia.com/phones/declaration_of_conformity/.

CE 0197

The crossed-out wheeled bin means that within the European Union the product must be taken to separate collection at the product end-of-life. Do not dispose of these products as unsorted municipal waste.

© 2006 Nokia. All rights reserved.

Reproduction, transfer, distribution or storage of part or all of the contents in this document in any form without the prior written permission of Nokia is prohibited.

Nokia and Nokia Connecting People are registered trademarks of Nokia Corporation. Other product and company names mentioned herein may be trademarks or tradenames of their respective owners.

Bluetooth is a registered trademark of Bluetooth SIG, Inc.

Nokia operates a policy of continuous development. Nokia reserves the right to make changes and improvements to any of the products described in this document without prior notice.

Under no circumstances shall Nokia be responsible for any loss of data or income or any special, incidental, consequential or indirect damages howsoever caused.

The contents of this document are provided "as is". Except as required by applicable law, no warranties of any kind, either express or implied, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose, are made in relation to the accuracy, reliability or contents of this document. Nokia reserves the right to revise this document or withdraw it at any time without prior notice.

The availability of particular products may vary by region. Please check with the Nokia dealer nearest to you.

Unauthorized changes or modifications to this device may void the user's authority to operate the equipment.

Export Controls

This device may contain commodities, technology or software subject to export laws and regulations from the US and other countries. Diversion contrary to law is prohibited.

9249883 / Issue 1 EN

HS-71W_draft8.fm Page 3 Monday, April 10, 2006 3:47 PM

Contents

1. Introduction	4	3. Basic use	9
Bluetooth wireless technology	4	Place the headset over the ears	9
2. Get started	5	Adjust the volume	9
Chargers and batteries	5	Call handling	9
Charge the battery	5	Listen to music	10
Switch the headset on or off	6	Clear the settings	10
Pair the headset	7	4. Battery information	11
Pair with a phone that has		Care and maintenance	12
a compatible music player feature	7	FCC notice	13
Pair with a phone and			
a music player	7		
Disconnect the headset	8		
Reconnect the headset	8		

HS-71W_draft8.fm Page 4 Monday, April 10, 2006 3:47 PM

Introduction

1. Introduction

You can use the Nokia Bluetooth Headset BH-501 to listen to music with your compatible music player and make and answer calls with your compatible mobile phone. The music player can be the music player feature of your phone or a separate music playing device.

Read this user guide carefully before using the headset. Read also the user guide for your phone, which provides important safety and maintenance information, and the user guide for your music playing device. Keep the headset out of reach of small children.

Bluetooth wireless technology

The headset can be connected to a compatible mobile phone or music player that supports Bluetooth wireless technology. This technology makes it possible to connect compatible communication devices without cables. In a Bluetooth connection, the headset and the other device should be within 10 meters (30 feet) of each other. Connections can be subject to interference from obstructions, such as walls, or other electronic devices.

This headset is compliant with Bluetooth Specification 1.2 supporting the following profiles: Headset Profile 1.1, Handsfree Profile 1.0, and Advanced Audio Distribution Profile 1.0. Check with the manufacturers of other devices to determine their compatibility with this device.

There may be restrictions on using Bluetooth technology in some locations. Check with your local authorities or service provider.

HS-71W_draft8.fm Page 5 Monday, April 10, 2006 3:47 PM

Get started

2. Get started

The headset contains the following parts:

- Volume down key (1)
- Volume up key (2)
- Charger socket (3)
- Indicator light (4)
- Multifunction key (5)
- Microphone (6)

Before using the headset, you must charge the battery and pair the headset with a compatible phone. If your phone does not have a music player feature, you also need to pair the headset with your music player.



Note: Parts of the headset are magnetic. Metallic materials may be attracted to the headset. Do not place credit cards or other magnetic storage media near the headset, because information stored on them may be erased.

Chargers and batteries

Check the model number of any charger before use with this device. The headset is intended for use with the AC-3, AC-4, and DC-4 chargers.



Warning: Use only chargers approved by Nokia for use with this particular enhancement. The use of any other types may invalidate any approval or warranty, and may be dangerous.

For availability of approved enhancements, please check with your dealer. When you disconnect the power cord of any enhancement, grasp and pull the plug, not the cord.

Charge the battery

This headset has an internal, nonremovable, rechargeable battery. Do not attempt to remove the battery from the device as you may damage the headset.

HS-71W_draft8.fm Page 6 Monday, April 10, 2006 3:47 PM

Get started

1. Connect the charger to a wall outlet.
2. Connect the charger cable to the headset.

The indicator light is red during charging. If the indicator light is not red, check the charger connection. If charging does not start, disconnect the charger, plug it in again, and retry.

Charging the battery fully may take up to 3 hours. When the battery is fully charged, the indicator light turns blue.

3. Disconnect the charger from the wall outlet and headset.

The fully charged battery has power for up to 7,5 hours of talktime and music playing time, and up to 150 hours of standby time. However, the times may vary when used with different mobile phones or other compatible Bluetooth devices, usage settings, usage styles, and environments.

When the battery is running out of power, the headset sounds a beep each minute, and the indicator light flashes red. Recharge the battery.

Switch the headset on or off

To switch on, press and hold the multifunction key until you hear a beep and the indicator light starts to flash blue. To connect the headset to the paired phone or music player that you have last used with it, press the multifunction key. For more information, see Reconnect the headset on page 8.

To switch off, press and hold the multifunction key until you hear a long beep.

HS-71W_draft8.fm Page 7 Monday, April 10, 2006 3:47 PM

Get started

Pair the headset

Pair with a phone that has a compatible music player feature

If your phone has a compatible music player feature, you can use the headset to make and answer calls and to listen to music from the phone.

 
1. Switch on your phone.
2. Ensure that the headset is off. If it is on, switch it off.
3. Press and hold the multifunction key until the indicator light alternately flashes blue and red.
4. Activate the Bluetooth feature on the phone, and set the phone to search for Bluetooth devices. See the user guide of your phone for instructions.
5. Select the headset (Nokia BH-501) from the list of found devices.
6. Your phone should ask for a Bluetooth passcode. Enter the passcode (0000) on your phone. In some phones you may need to make the Bluetooth connection separately after pairing. You only need to pair the headset with your phone once.

 
If the pairing is successful and the headset is connected with your phone, the indicator light of the headset flashes blue slowly.

Pair with a phone and a music player

If your phone does not have a compatible music player feature, you can separately pair the headset with your phone and a compatible music player. After pairing and connecting the headset with your phone, do as follows:

1. Switch off the headset.
2. Switch on the music player.
3. Press and hold the multifunction key until the indicator light alternately flashes blue and red.
4. Follow the pairing instructions in the user guide for your music player. When the music player asks for a device to pair, select Nokia

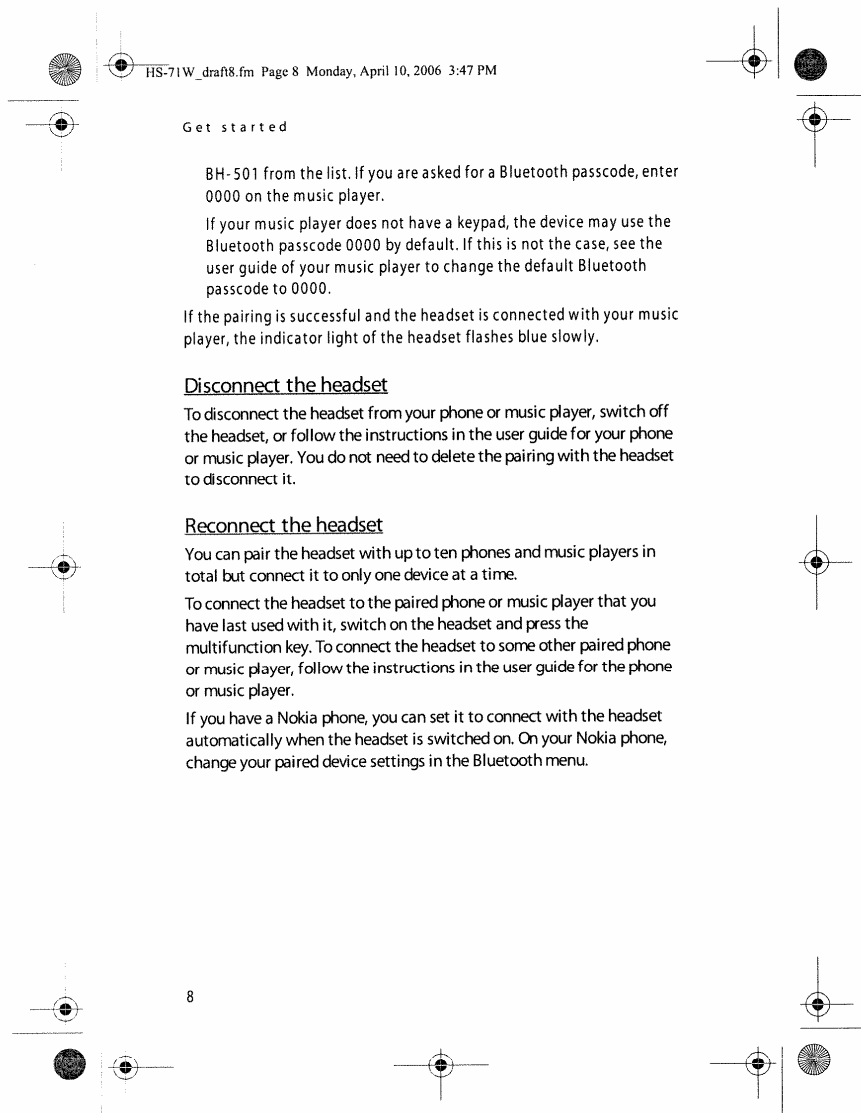

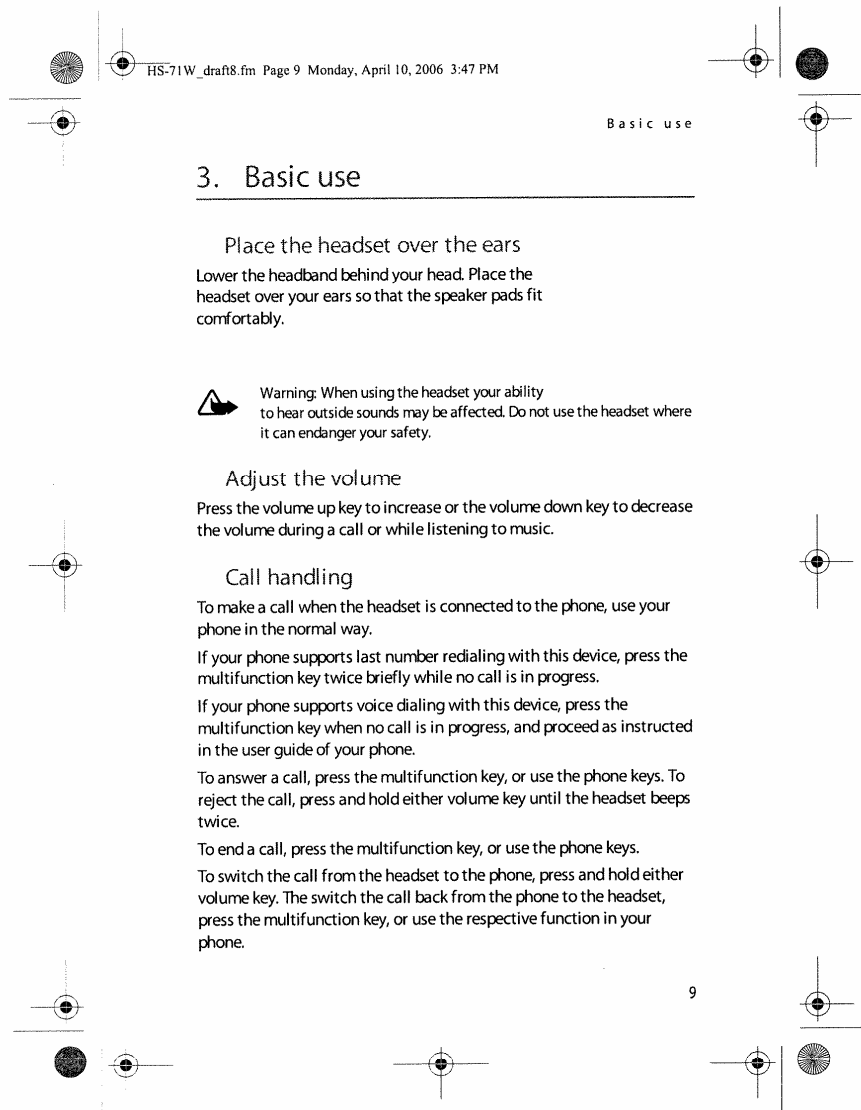

HS-71W_draft8.fm Page 10 Monday, April 10, 2006 3:47 PM

Basic use**Listen to music**

To listen to music, the headset must be connected to a phone that has a compatible music player feature or to a separate music player.

When the headset is connected to a phone but not to a music player, the headset can only be used to make and answer calls if the phone does not have a compatible music player feature.

The available music functions depend on your music player.

If you answer or make a call while listening to the music player, the music is paused until you end the call.

To start and control the music playback, use the keys in your music player. For details, see the user guide for your music player.



Warning: Listen to music at a moderate level. Continuous exposure to high volume may damage your hearing.

Clear the settings

To clear the pairing and volume settings, switch off the headset, and press and hold either volume key until the indicator light starts to alternately flash blue and red. Press and hold the volume key until the headset beeps twice. Recharge the headset for a few seconds.

HS-71W_draft8.fm Page 11 Monday, April 10, 2006 3:47 PM

Battery information

4. Battery information

Your device is powered by a rechargeable battery. The full performance of a new battery is achieved only after two or three complete charge and discharge cycles. The battery can be charged and discharged hundreds of times, but it will eventually wear out. Recharge your battery only with Nokia approved chargers designated for this device.

Unplug the charger from the electrical plug and the device when not in use. Do not leave the device connected to a charger, since overcharging may shorten the battery lifetime. If left unused, a fully charged battery will lose its charge over time.

Use the battery only for its intended purpose. Never use any charger or battery that is damaged.

Leaving the device in hot or cold places, such as in a closed car in summer or winter conditions, will reduce the capacity and lifetime of the battery. Always try to keep the battery between 15°C and 25°C (59°F and 77°F). A device with a hot or cold battery may not work temporarily, even when the battery is fully charged. Battery performance is particularly limited in temperatures well below freezing.

HS-71W_draft8.fm Page 13 Monday, April 10, 2006 3:47 PM

FCC notice

FCC notice

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: 1. This device may not cause harmful interference; and 2. This device must accept any interference received, including interference that may cause undesired operation. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: Reorient or relocate the receiving antenna. Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or an experienced radio/TV technician for help. NOTE: FCC Radiation Exposure Statement: This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter. NOTE: Changes or modifications not expressly approved by Nokia could void the user's authority to operate the equipment.