

TRUE WIRELESS EARBUDS



USER GUIDE

TURNING ON YOUR EARBUDS

METHOD 1: Remove your earbuds from the charging case.

METHOD 2: If the earbuds are not inside the charging case or are turned off, touch and hold the RIGHT or LEFT earbud for 4 seconds until the blue LEDs flicker and you hear battery percentage.

TURNING OFF YOUR EARBUDS

METHOD 1: Place your earbuds back in the charging case.

METHOD 2: Touch and hold your earbuds for 5 seconds until you hear “Power OFF.”

BLUETOOTH PAIRING INSTRUCTIONS

FIRST: Remove both earbuds from the charging case. They will auto-pair to each other.

SECOND: Keep the earbuds within 10m of your smart device (for Bluetooth pairing only). Enable your device's Bluetooth function from its Settings menu. Select “[RT62](#)” from the Bluetooth device list to pair the earbuds to your device. Once paired, you will hear “Device Connected.” Your [RT62 earbuds](#) are now ready to use!

SINGLE EARBUD USAGE

Each earbud can be used independently.

CALLING/MUSIC

ANSWER/END CALLS

Touch the RIGHT or LEFT earbud 2 times.

REJECTING A CALL

Touch and hold the RIGHT or LEFT earbud for 2 seconds or until you hear a prompt sound.

PLAY/PAUSE

Touch the RIGHT or LEFT earbud 2 times.

NEXT SONG

Touch the RIGHT earbud 3 times.

REWIND/PREVIOUS SONG

Touch the LEFT earbud 3 times.

VOICE ASSISTANT

Touch and hold the RIGHT or LEFT earbud for 2 seconds or until you hear a prompt sound to active the Voice Assistant/Siri function. This function may not work for all devices.

CHARGING THE [RT62](#)

Make sure to fully charge the earbuds prior to the first use.

CHARGING THE CASE

Plug the standard USB-C charging cable into the port on the case, and connect the USB head to a USB power source, such as an AC wall adapter or a computer. The LED indicator will flash green while the case is charging. Once the case is fully charged, the LED will illuminate solid green.

CHARGING THE EARBUDS

When the earbuds are low in power, you will hear "Battery Low." Place the earbuds into their respective slots in the charging case. They will automatically begin to charge. The LEDs will turn solid red while charging. The LED on the bottom of the case will turn white then turn off after 4 seconds. Once the earbuds are fully charged, the LEDs on the earbuds will turn off.

IMPORTANT SAFEGUARDS

- Do not use this unit for anything other than its intended use.
- Keep the unit away from heat sources, direct sunlight, humidity, water or any other liquid.
- Do not expose the device to extremely high or low temperatures, as it may damage the battery.
- Do not operate the unit if it has been wet or moist to prevent against electric shock and/or injury to yourself and damage to the unit.
- Do not use this unit if it has been dropped or damaged in any way.
- Repairs to electrical equipment should only be performed by a qualified electrician. Improper repairs may place the user at serious risk.
- Keep this unit out of reach of children.
- This unit is not a toy.

SPECIFICATIONS

Bluetooth Technology: Version 5.3

Battery (Earbuds): 35mAh (x2); 3.7V

Battery (Charging Case): 500mAh; 3.7V

Input Power Supply: 5V/0.4A

Earbuds Charging Time: approx. 1.5 hr.

Charging Case Time: approx. 2 hrs.

Music Playback Time: approx. 6 hrs.

Frequency: 20Hz – 20KHz

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device and its antenna(s) must not be co-located or operation in conjunction with any other antenna or transmitter.

Radiation Exposure Statement

The device has been evaluated to meet general RF exposure requirement in portable exposure condition without restriction.