

## **G680 User Manual**

**Dear customer,**

**Thank you for purchasing the outdoor Bluetooth speaker G680. To ensure correct operation, please read this user manual carefully before operation.**

### **Important Safety Instructions**

- ◆ Do not use the speaker in special cold and hot environments.
- ◆ Please avoid the speaker dropping or hitting with a hard object, it may cause other hardware damage.
- ◆ Take care when charging the speaker, excessive prolonged charging will damage the battery lifetime. Charge the speaker to full capacity when using for the first time.
- ◆ When battery low, the indicator light will flash and voice prompt “battery low”, please charge speaker in time.
- ◆ If does not use this speaker for long time, please charge at least once within one month, in order to prevent the lithium battery from causing and damaging because of excessive consumption.
- ◆ Adjust the volume to appropriate level to avoid disturbing others.

### **Features**

- **Bluetooth 5.0 stereo music**

- **Aux-in**

**Work as the external speaker by connecting to the audio source of computer, mobile, PSP/MP3/MP4 etc.**

- **USB Flash Disk Music playing**

**Support MP3/WAV/WMA/FLAC/APE music format, capacity up to 32G**

- **EQ effect adjustment, with bass enhancement**

- **Power bank function**

- **Voice guide**

**The speaker will prompt the working mode and status for easy operation.**

- **Support light show,with different light themes**

- **With battery capacity display**

## Technical Data

**Bluetooth Version:** 5.0 ATS2853

**Speaker Output:** 40+10W

**Voltage:** DC 5V 2A

**Frequency response :** 60Hz - 20KHz

**Driver:** 79mm\*79mm woofer\*2 + 36mm tweeter\*2 + passive radiator\*2

**Built-in Battery:** 7.4V 6600mAh (6pcs 3.7V 2200 mAh battery )

**Water Resistance:** IPX7

 
**Size:** 310x142x137mm

**Net Weight:** 2.4kg (Speaker only)

## Package Contents

Bluetooth Speaker, Type-c Cable, User Manual


## Slot and Keys

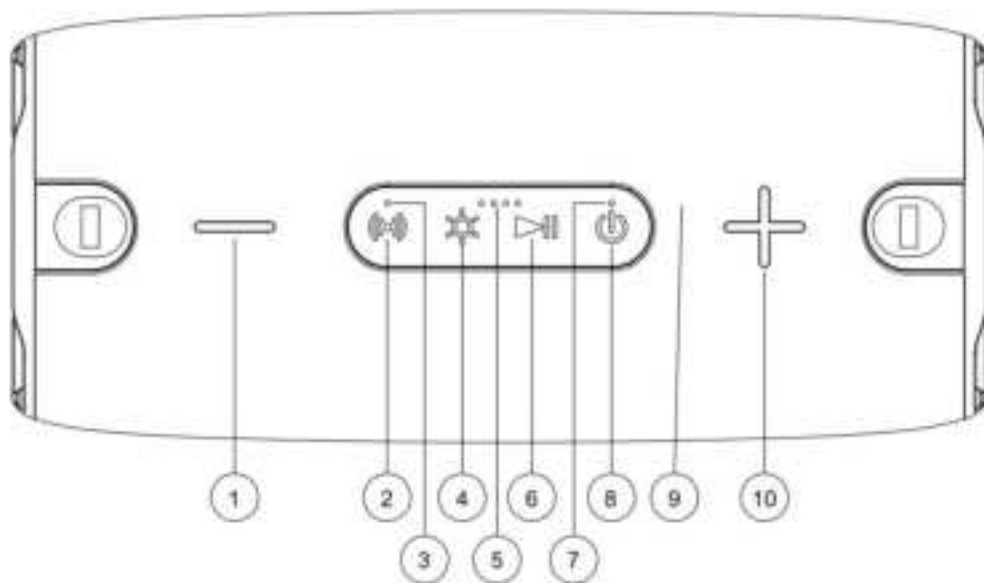

1. 

Short press: Increase the volume

Long press: Next track / Next channel

2. 

Short press: Enter the Bluetooth pairing mode

Double press: Enter/Exit TWS mode

 
Long press: Disconnect the Bluetooth pairing / Reconnect the Bluetooth pairing

3.  (Bluetooth indicator)

4. 

Short press: Change LED mode

Long press: Enter voice assistant (e.g. SIRI )

5.  (Battery capacity indicator)

6. 

Short press: Play / Pause

Double press: Change EQ

Short press when incoming call: Answer the call

Short press when on a call: End call

Long press when incoming call: Reject the call

7.  (TWS indicator)

8. 

Long press: Power on / off

Short press: Switch the mode

&

 
In stand-by mode - Double-press: enable power bank feature

In stand-by mode - Short press: disable power bank feature

9. 


Short press: Decrease the volume

Long press: Previous track / Previous channel

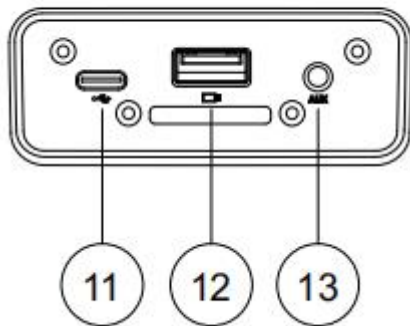


9.  (Charging Slot)

12.  (USB Slot / Power Bank Slot)



13.  (AUX In Jack)


## Operation Instructions

### 1. Power on/off



Long press  button to power on/off the speaker.  
Each time to power on the speaker, The default working mode is Bluetooth mode.

### 2. Bluetooth Mode


 
- 1) Short press the  button to enter the Bluetooth mode.
- 2) Turn on the Bluetooth of your phone, search for nearby devices. The **G680** will be found on your mobile pairing list, please connect it. When connected, the speaker Bluetooth indicator will stop twinkle and in Blue.
- 3) Please turn on your phone's music player, and speaker will play the selected music.
- 4) The speaker will pair with the latest used Bluetooth device automatically. Long press the  button to disconnect the current Bluetooth connection. Then other Bluetooth devices can find and pair with the speaker.

5) Short press  and  buttons to forget all the paired devices.

### 3. TWS (True Wireless Stereo) function (only works in Bluetooth mode)


- 1) Power on 2pcs G680 (ensure both speakers are in Bluetooth waiting to pair status).
- 2) Double press the  button on either one speaker to enter the TWS pairing mode
- 3) Once two speakers paired, the two speakers' TWS indicator constant in orange. The speaker Bluetooth indicator flashing in blue is the master speaker, the other one Bluetooth indicator light off is the slave speaker.
- 4) Use your phone to pair the master speaker G680, and play Bluetooth music on both speakers.
- 5) Long press the  button on either one speaker to disconnect the TWS pairing.

### 4. USB Music Playing

Inserting the USB Flash Disk into the speaker, short press the  button to enter the USB mode. Short press  button to play the USB music.


**Please Note:** The USB Flash Disk supports memory up to 32G, and support the audio format at MP3, WMA, WAV, APE, FLAC.

### 5. Aux in Mode

Use the 3.5mm audio cable included to connect the speaker to an audio source (PC, MP3/MP4, mobile phone). Short press the  button to switch and the speaker will play the music from the audio source.

### 6. Power Bank

Please connect the speaker's USB slot to the mobile phone / other digital devices' charging jack via the USB cable. speaker can charge these digital device, with voltage at

5V, max output current at 2A. 

The power bank indicator also is in white when it is charging other devices.

## 7. Intelligent power saving function

Under Bluetooth mode, if the speaker is waiting to pair for more than 10 minutes, the speaker will be automatically powered off.

**Note:** Please long press  button again to power on the speaker

## 8. Charging function

Three low battery warnings when the battery is only 20%, 10% and when the machine is turned off. Please charge the battery via a USB adaptor immediately. During charging, the LED battery capacity indicator is flashing one by one. When fully charged, the fourth LED indicator will be on in white.

### **Note:**

*Please use the good quality adaptor to charge the speaker.*

*We suggest use the adaptor specification at 5V/2A*

*When speaker with low battery capacity, please charge the speaker immediately*

*The speaker can be charged by different charging current, if using the computer to charge the speaker, as the current only at 500 mA, the charging time will be very long.*

## Troubleshooting



### **1. What should I do if the speaker can not pair with the Bluetooth device and play music accordingly?**

(1) Please check the specification/ the manual of the Bluetooth device (your mobile or computer), and check if the device can support the A2DP stereo audio transmission. If yes, please turn on the A2DP stereo mode.

(2) Ensure the speaker is under the Bluetooth pairing status, if there are many Bluetooth devices nearby, the G680 will not easy to be found. Please turn off other Bluetooth devices.

### **2. What should I do if the speaker get stuck and all the button can not work.**

The speaker's inner system may be wrong with some inappropriate operation. Please try

to long press  and  buttons Factory reset to reset the speaker's software.

**FCC Statement**

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: Reorient or relocate the receiving antenna.

.Increase the separation between the equipment and receiver.

.Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

.Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment. RF Exposure Information

The device was evaluated to meet general RF exposure requirements. This equipment should be installed and used with a minimum distance of 0 mm between the radiator and your body.