



Dual lens 2-in-1 Vehicle Blackbox DVR

USER MANUAL

Thank you very much for purchasing our car dash cam!

Disclaimer:

1. Please read the set-up and usage instructions carefully before operation.
2. You should not set/install this dash cam at a place that would obstruct or reduce a driver's view. Make sure your usage comply with pertinent vehicle codes of your state, province, territory or country.
3. You should post the required notices of recordation to occupants inside the vehicle, if voices or other information/signal pertaining to in-vehicle activities will be recorded.
4. You should not change the dash cam's setting or mode of operation when the vehicle is in motion.
5. You should not leave the dash cam in a visible spot when no one is inside the vehicle, to avoid attracting break-ins to steal the unit or other property.
6. You should avoid extended exposure of the dash cam to direct sunlight or

extreme temperatures (either high or low temperature) which tend to degrade or damage the unit and its normal functionality.

7. You should examine, check and verify the dash cam at least every 6 months, including the memory card, to ensure the video reception and recording are working properly. For each use, you should verify that the dash cam unit, the visible lights and the audible sounds are working normally. If there are signs of non-operation or malfunction, you should immediately seek to replace the product and check to see if the product is covered under any applicable warranty.

8. The dash cam unit may have additional functionality, such as transmission and recordation of audible or GPS signal or other identification information. If you have privacy concerns about these functions, make sure you follow the instruction to disable these functions.

9. You should use the dash cam unit in the way it is intended. You should not

use the dash cam unit in a way that would be illegal or that tends to physically damage the unit, or tend to cause danger to the safe operation of the vehicle or the occupants.

10. THIS DEVICE SHOULD NOT BE ADJUSTED BY THE DRIVER WHILE DRIVING. IN THE EVENT OF AN ACCIDENT, DEVICE MAY DISLODGE AND BECOME UNSAFE FOR PASSENGERS.

Note :

- This user manual will detail how to use, operation, technical specifications and precautions. Before use, please read this manual thoroughly and fully understand, Please keep this manual, we hope our products can meet your needs and long-term service to you!

Using this product, enjoying the real high quality life.

- This manual in the printing process, the machine because of the appearance, software or hardware repair process leads to the same part of the manual operation of non-conformance, the Company has maintained the final interpretation!

- Do not put the machine into the damp working condition, this machine have no waterproof function, so please make the machine no pour water or exposed to rain water.

- Do not try open the shell or try repair by yourself, if the accessories for this

machine have any problem, please do to the professional maintenance station to repair.

- Do not use the thrill chemical substance, clean solvent or cleaner to clean this machine, please use the moist soft cloth to clean.

- Do not use this machine under the condition that the dust and high density, to avoid affecting the video.

- Please protect the environment, don't discard this machine randomly; do not throw this machine into fire, otherwise will have an explosion.

8. Please pay attention to clean the lens surface, use the moist soft cloth clean the lens then use, to avoid the video is not so good.

Tips:

1. Outdoor use Please avoid high temperature and direct sun exposure.


2. Please use original accessories.

3. Please do not disassemble the product.

Content Guide

Product Structure	7
Product Installation Guide	9
Product Precautions	9
Product Specifications	11
App Operation Instructions	13
GPS Player Software Installation and using Instructions	14
FAQ	15

Product Illustration

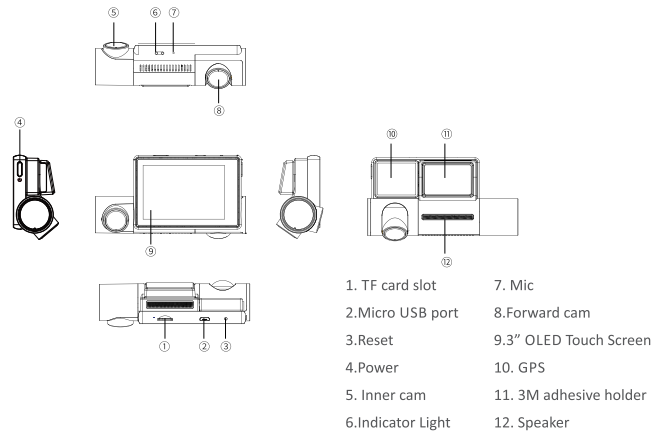

2.Keys and Functions

Key	Function	Instruction
TF card slot	TF Card	TF card support max to 128GB, C10.
Micro USB port	Charging USB storage Web camera	Connect to PC by USB cable, we can check video/photo and charge/ as the web camera for PC Connect to the charger, camera will turn on to record and charging
Reset	Reset	When device crashes, shot press here to reboot
Power	Turn on/off device Turn on/off WiFi	Press to turn on device. Press and hold for 3 seconds to turn off device. Press to turn on/off Wi-Fi when device standby.

Product Installation Guide

1.Turn off the car engine

2.Insert the TF card into the card slot of dash cam

【Attention】 Please use high-speed SD card (Class10 or above, capacity is not less than 8GB, max to 128GB, and to format the SD card with the machine or PC before using)

3.Fix the dash cam on the windscreen of your car

4. Insert the car charger into the car cigarette lighter, and please use the standard car charger.

5. Connect the dash cam USB interface to the car charger with a charging extension cable.

【Attention】 Pave the cable alongside the edge of windshield.

7. Adjust the lens position to ensure that the lens are level with the ground.

8. Start the engine and check whether the machine is installed correctly.