



EXTREME IN-LINE SKATER OPERATING INSTRUCTIONS

To = ITS

Ath = Rota Chan

Im = Wow Wee - Anta.


HAND CONTROLLER OPERATION:

JOYSTICK CONTROL:


The twin joysticks on the remote control unit give the In-Line Skater maximum maneuverability. The red LED lights up when controls are activated to indicate power source.

Please refer to diagram:


In-Line Skater.
Instruction sheet

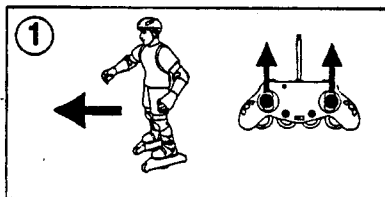


1. Push both sticks forward to skate forwards.

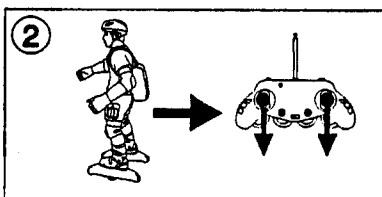


2. Pull both sticks back to skate backwards.

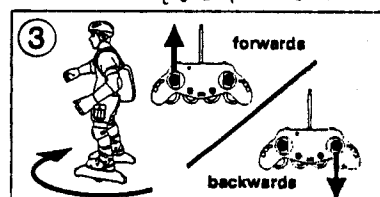


3. Turning clockwise. To skate forwards in a wide clockwise circle push the left stick forwards. To skate backwards in a wide clockwise circle pull the right stick back.

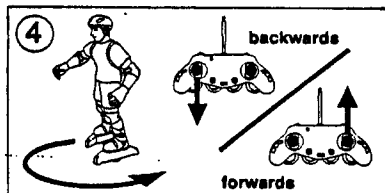

4. Turning anti-clockwise. To skate backwards in a wide anti-clockwise circle pull the left stick back to skate forwards in a wide anti-clockwise circle push the right stick forwards.

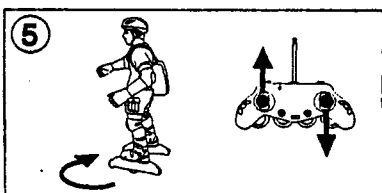



5. Push the left stick forwards and the right stick backwards at the same time and the skater will spin on the spot clockwise.

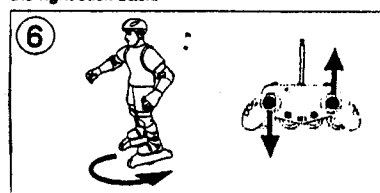


6. Push the right stick forwards and the left stick backwards at the same time and the skater will spin on the spot anti-clockwise.

FUNCTION BUTTONS :


Press the preprogrammed action buttons for smooth In-Line action!

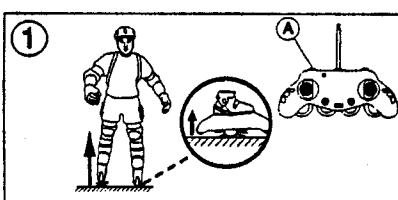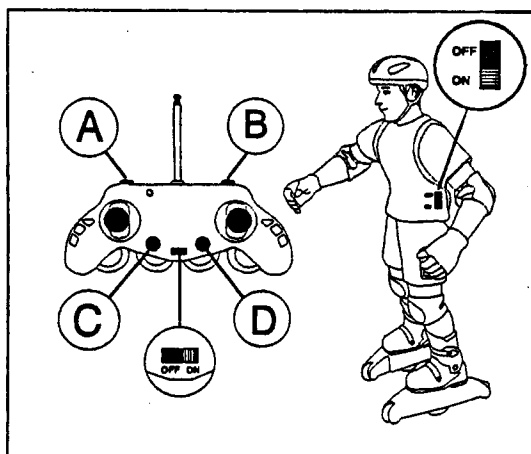

1. Press button A to raise right leg.

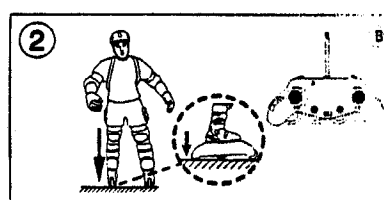

2. Press button B to lower right leg.

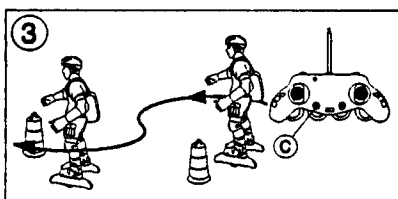

3. Press button C to slalom skate forwards.



4. Press button D to slalom skate backwards.







EXTREME IN-LINE SKATER OPERATING INSTRUCTIONS

P2/3

CONTENT :

1. In-Line Skater action figure.
2. Slalom cones x 5.
3. Remote control unit.

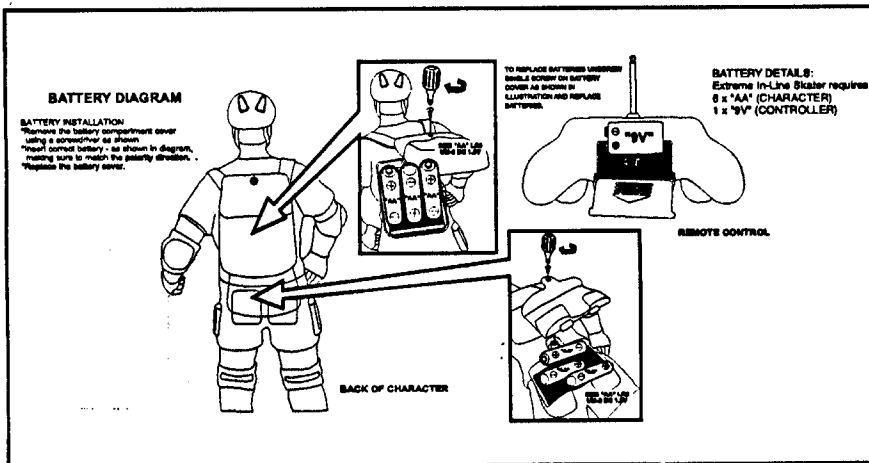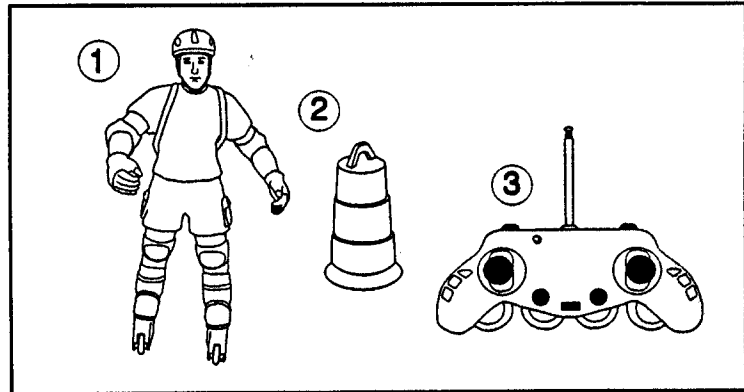

IMPORTANT BATTERY INFORMATION

- *Do not mix old and new batteries.
- *Do not mix alkaline, standard (Carbon zinc) or rechargeable (nickel-cadmium) batteries.
- *Rechargeable batteries not recommended.
- *Batteries should be replaced by adults because of small parts.

Batteries are to be inserted with correct polarity.

Non-rechargeable batteries are not to be recharged. Only batteries of the same or equivalent type as recommended are to be used. Exhausted batteries are to be removed from the toy. The supply terminals are not to be short-circuited.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- ☐ Reorient or relocate the receiving antenna.
- ☐ Increase the separation between the equipment and receiver.
- ☐ Connect one equipment into an outlet on a circuit different from that to which the receiver is needed.
- ☐ Consult the dealer or an experienced radio/TV technician for help.

Manufactured and Distributed by:
 © 2000 Wow-Wee Inc. 4480 Cote-de-Liesse
 T.M.R. Quebec H4N 2R1
 All rights reserved.

Made in China.

Wow-Wee Int'l., Unit 301 C,
 82 Granville Rd. T.S.T. East, Kowloon, H.K.

<http://www.wowwee.com>



Warning : Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.