 


CATALOGUE

01 How to wear headphones correctly	5
02 Product Introduction	9
03 Touch Operation	12
04 Item list	21
05 Warranty Statement	24

 
Welcome toMINISO  
Wireless Earphones

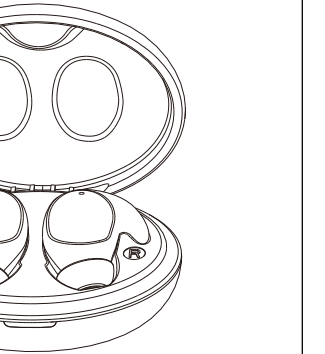

Take out and pair it

When using for the first time, take out the left and right earphones at the same time. When the white light and blue light of the earphones flash alternately, the earphones will enter the automatic pairing mode.


How to wear headphones correctly

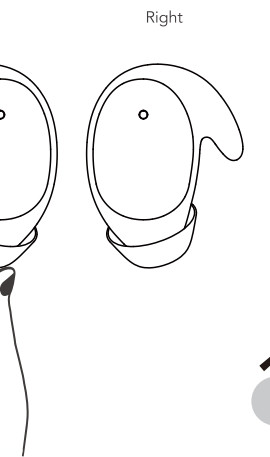


1



 2


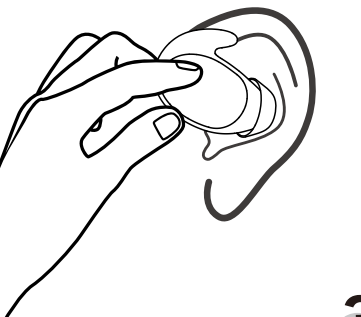


3

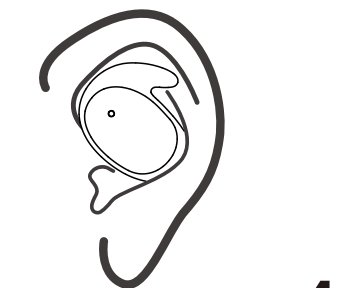 

4

  Product Description

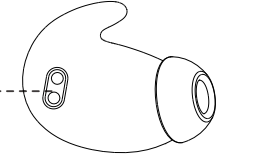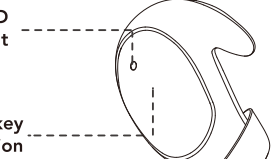


Specification of Product

Model of Product:MS153  
Version: V5.4  
Effective Distance: Approx. 10m  
Speaker Diameter:  $\phi$ 6mm  
Impedance:16 $\Omega$   
Frequency Respinse: 20Hz-20KHz  
Microphone Sensitivity: -42dB $\pm$ 1dB  
Earphone Input: 5V $\approx$ 25mA  
Charging Case Input: 5V $\approx$ 300mA  
Earphone Battery Capacity: 25mAh  
Charging Case Battery Capacity: 300mAh  
Duration: Approx. 5H (Earphone)  
Earphone Charging Time: Approx.1.5H  
Charging Time of the Charging Case: Approx.1.5H


Touch Operation

Connect with Bluetooth device

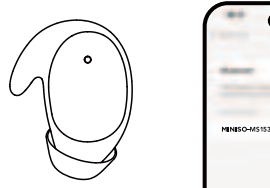

Open the Bluetooth settings option of the Bluetooth device to be paired, enter the options and find the Bluetooth pairing name of the headset "MINISO-MS153". Click the pairing name to pair.

Indicator Light Description

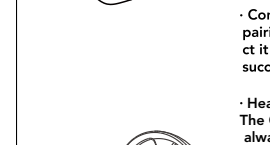


LED Display light

Multi function key touch position

Charging Contacts

Once Press

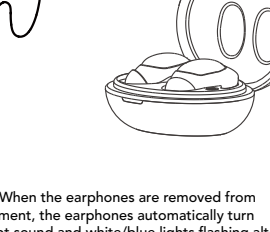

Automatic power on: When the earphones are removed from the charging compartment, the earphones automatically turn on with a "DU" prompt sound and white/blue lights flashing alternately


Manual power on: Press and hold the headphone touch button for 3 seconds to turn on the device, accompanied by a "DU" prompt sound and alternating flashing white/blue lights

Automatic shutdown: When the earphones are turned on and placed in the charging compartment, they automatically shut down

Manual shutdown: touch button for 5 seconds to shut down, accompanied by a "DU" prompt sound and a white light flashing 3 times to turn off. When connecting left and right, manually shut down any headphone and both sides will shut down simultaneously.

Note: After powering on, if it is not paired with a Bluetooth device for 3 minutes, it will automatically shut down. Exceeded the effective connection distance and did not connect to the Bluetooth device, it will automatically power off after 3 minutes.

Double Press

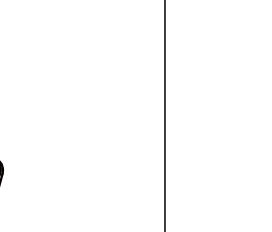


Music mode

Double press the right ear: Volume up

Double press the left ear: Volume decreases

Long Press

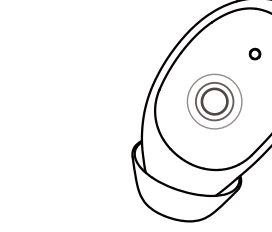


Wake up voice assistant

When using both ears, press and hold the left ear multi-function button for 2 seconds to activate the voice assistant. When using one earphone, press and hold the left (or right) earphone for 2 seconds to activate the voice assistant

Phone mode

Press and hold the left (or right) ear multi-function button for 1.5 seconds: call rejection

Triple Press

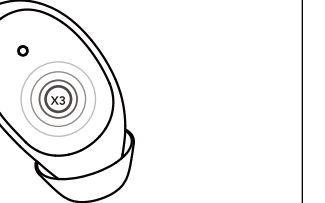


Music mode

Triple press on the left ear: Previous song

Triple press on the right ear: next song

Clear Bluetooth pairing history

When both ears cannot be paired, you need to clear all connected devices and click the left and right earphones 5 times at the same time.

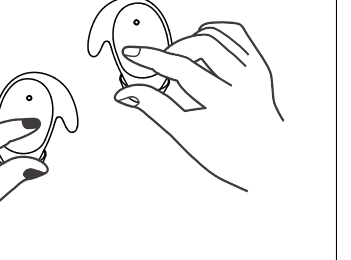


Wireless pairing mode

1. Off State Press and hold for 3 seconds to power on the device and enter the pairing state. After the pairing is successful, the host white/blue indicator blinks alternately, the secondary ear indicator is off, and a beep tone is played.

2. When the left and right earphones have pairing records, they will automatically connect back when they are turned on.

Switch between game mode and music mode (Binaural operation)

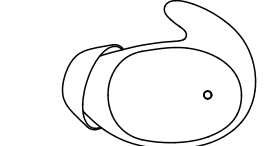

Game mode


Press and hold the multi-function button on the right ear for 1.5 seconds

Music mode


Press and hold for 1.5 seconds

Note 1: When using one earphone, you cannot switch between game mode and music mode.  
Note 2: The factory setting defaults to music mode

Item list

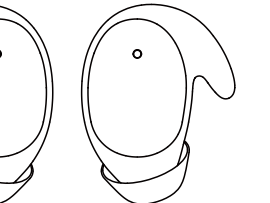


Headphones \*1

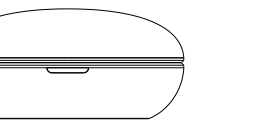

Charging case \*1

 Instruction \*1

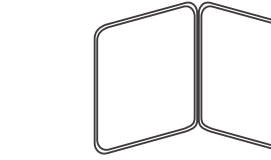

Charging cable \*1

FCC ID: 2BHJR-MS153

FCC Warning:  
Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.  
This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:  
(1) This device may not cause harmful interference, and  
(2) This device must accept any interference received, including interference that may cause undesired operation.  
Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:  
-Reorient or relocate the receiving antenna.  
-Increase the separation between the equipment and receiver.  
-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.  
-Consult the dealer or an experienced radio/TV technician for help.

RF warning for Portable device:  
The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

US REP

Company name: REP America LLC  
Address: 1942 Broadway St, STE 114C, Boulder, CO 80302, United States  
Contact Person: Ben Xu  
Email: d.zeng@rep-europe.de  
ContactPhone: (719) 201-3314

Warranty statement

MINISO product warranty card

Product number	name	SN number	Purchase date
User info	telephone	address	Invoice number
Sales unit information	name	(stamp)	address
	telephone		

The above guarantee does not apply to the following situations

- The validity period of the three guarantees has exceeded;
- Altering of the warranty cards and product code do not match the product itself;
- Failure of damages caused by misuse, abuse or improper transportation, use, maintenance or storage;
- Failure of damages caused by force majeure (such as earthquake, war, fire, etc) or accident;
- Zipper and tower buddies are damaged due to excessive force;
- Off-line or tear caused by overloading;
- Any damage caused by sharp objects;
- Products with signs of burn damage or water logging;
- Damage caused by unauthorized dismantling and modification;
- Aging, discoloration, wear, cracking and other losses that occur during normal use of the product;
- If the product's original logo or label is changed or damaged, this warranty will be invalid.

The completeness and appearance of the product and accompanying materials are not covered by the warranty. You should inspect the product on site when receiving it and raise objections to any discrepancies.

MINISO Product service policy

If you encounter a problem, please contact our customer service to solve it.

After-sales email: 7@hifi-earphone.com

FC RoHS CE

Warranty Policy

Disclaimer:  
This manual does not come with any form of warranty position expression or other implication. The products, specifications and information mentioned in this manual are for reference only, and the content will be updated on the website at any time without prior notice.

Electronic devices: To avoid the effects of electromagnetic interference or configuration incompatibility, please turn off your Bluetooth device in accordance with regulations in places with clear instructions.

Civil Aviation: After boarding the plane, please turn off your Bluetooth headset according to the flight attendant's instructions. It is strictly prohibited to use Bluetooth headsets during flight to avoid interference with the aircraft communication system.

Safety matters:  
Placement: It is recommended that when you are not using the Bluetooth headset, place it in a place where it will not be squeezed. Squeezing may cause damage to the product or personal injury.

Children: Do not let children play with Bluetooth headsets. Some of the small parts are detachable and may be swallowed and cause danger.

After the product is used and scrapped, do not throw the product into a fire. The waste should be disposed of in strict accordance with the garbage classification. Please use this product reasonably and correctly to avoid causing certain injuries and environmental damage.

During the use of headphones, due to long distances, obstacles in the middle, or a series of interferences such as other radio signals, Bluetooth signals, WiFi signals, etc., the headphones are used when listening to music, watching videos, playing games, etc., there will be occasional lags, voice out-of-sync or disconnection. If this happens, please reconnect the headphones or stay away from interference.

When charging, please use a charging device with an output voltage of DC 5V/1A. You must choose a charging device from a regular manufacturer that has obtained CCC safety certification. Do not use a fast-charging charger to avoid excessive battery load, which may cause the battery is damaged. Do not charge continuously for longer than the specified charging time. Do not use it while charging to avoid damage.

Guidelines for safe and effective use

Note: Please read this information first before using your Bluetooth headset.

This product contains a built-in rechargeable battery. It is prohibited to hit, squeeze, puncture, or short-circuit the battery. If there are abnormal phenomena such as excessive temperature, deformation, bulging, or leakage, please stop using it. Do not expose the battery to open flames or sunlight. Do not use the battery after it has been immersed in water or in high-temperature or high-pressure environments such as the sun heaters, or stoves. After using the earphones, do not place the earphones in a humid, dusty, oily smoke, steam, direct sunlight or other high-temperature and high-pressure environment to avoid damage to the earphones and battery. The battery can be charged and discharged for a limited number of times and will eventually age. If the battery is used abnormally, it can be replaced with a new one. However, do not replace the battery by yourself. If the battery is not replaced properly, there is a risk of explosion. It can only be replaced by an after-sales service provider of the same or equivalent type. battery usage.

After the product is used and scrapped, do not throw the product into a fire. The waste should be disposed of in strict accordance with the garbage classification. Please use this product reasonably and correctly to avoid causing certain injuries and environmental damage.

During the use of headphones, due to long distances, obstacles in the middle, or a series of interferences such as other radio signals, Bluetooth signals, WiFi signals, etc., the headphones are used when listening to music, watching videos, playing games, etc., there will be occasional lags, voice out-of-sync or disconnection. If this happens, please reconnect the headphones or stay away from interference.

When charging, please use a charging device with an output voltage of DC 5V/1A. You must choose a charging device from a regular manufacturer that has obtained CCC safety certification. Do not use a fast-charging charger to avoid excessive battery load, which may cause the battery is damaged. Do not charge continuously for longer than the specified charging time. Do not use it while charging to avoid damage.

Important safety tips

Except for the operation methods specifically marked in the manual, please do not attempt to disassemble or replace any parts in the product.

 
This product contains a built-in rechargeable battery. It is prohibited to hit, squeeze, puncture, or short-circuit the battery. If there are abnormal phenomena such as excessive temperature, deformation, bulging, or leakage, please stop using it. Do not expose the battery to open flames or sunlight. Do not use the battery after it has been immersed in water or in high-temperature or high-pressure environments such as the sun heaters, or stoves. After using the earphones, do not place the earphones in a humid, dusty, oily smoke, steam, direct sunlight or other high-temperature and high-pressure environment to avoid damage to the earphones and battery. The battery can be charged and discharged for a limited number of times and will eventually age. If the battery is used abnormally, it can be replaced with a new one. However, do not replace the battery by yourself. If the battery is not replaced properly, there is a risk of explosion. It can only be replaced by an after-sales service provider of the same or equivalent type. battery usage.

After the product is used and scrapped, do not throw the product into a fire. The waste should be disposed of in strict accordance with the garbage classification. Please use this product reasonably and correctly to avoid causing certain injuries and environmental damage.

During the use of headphones, due to long distances, obstacles in the middle, or a series of interferences such as other radio signals, Bluetooth signals, WiFi signals, etc., the headphones are used when listening to music, watching videos, playing games, etc., there will be occasional lags, voice out-of-sync or disconnection. If this happens, please reconnect the headphones or stay away from interference.

When charging, please use a charging device with an output voltage of DC 5V/1A. You must choose a charging device from a regular manufacturer that has obtained CCC safety certification. Do not use a fast-charging charger to avoid excessive battery load, which may cause the battery is damaged. Do not charge continuously for longer than the specified charging time. Do not use it while charging to avoid damage.

Enjoy the company of MINISO

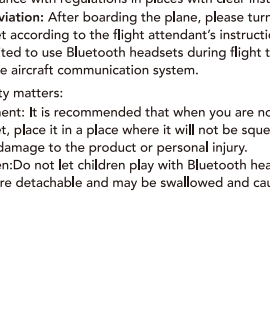

Copyright©2024 MINISO Group affiliated companies and its licensors. All rights reserved

Creating sound to live with