


# 正面


# 反面

# 纸规

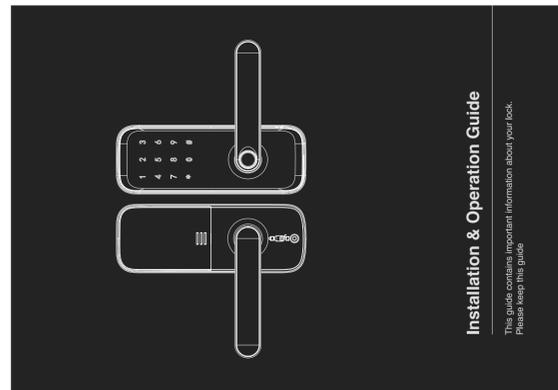

Installation & Operation Guide  
This guide contains important information about your lock.  
Please keep this guide.


## Overall

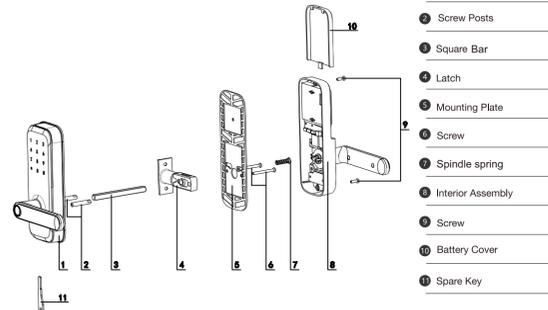

- 1 Exterior Assembly
- 2 Screw Posts
- 3 Square Bar
- 4 Latch
- 5 Mounting Plate
- 6 Screw
- 7 Spindle spring
- 8 Interior Assembly
- 9 Screw
- 10 Battery Cover
- 11 Spare Key

## Restore to Factory Default Settings

The default Master Code is 123456. It is required that you change it to a code of your own before programming.  
1. Open and unlock the door.  
2. Find a paper clip, put it into the hole at the bottom, long press for 5 seconds until the lock voice prompts "Please enter the password 000 #".

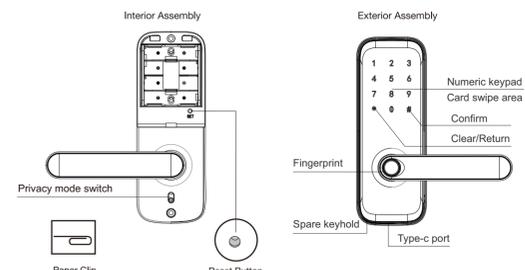

△ The lock has been reset successfully. All entered information has been deleted.

## Adjustable Latch Backset

1. TO CONVERT BACKSET FROM 2-3/8" (60mm) TO 2-3/4" (70mm)




2. TO CONVERT BACKSET FROM 2-3/4" (70mm) TO 2-3/8" (60mm)




## Installation Guide


1 PREPARE THE DOOR AND CHECK DIMENSIONS (with the TEMPLATE)

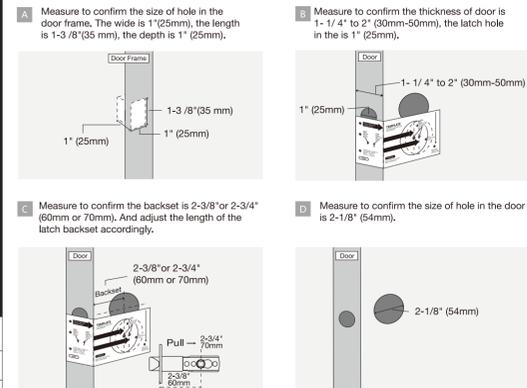


2 INSTALL THE LATCH AND STRIKE PLATE

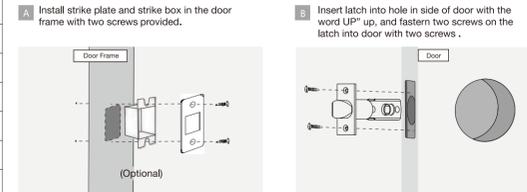


3 ADJUST HANDLE ACCORDING TO THE DOOR OPENING DIRECTION

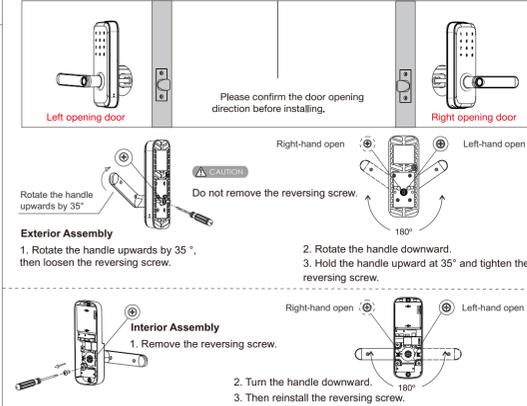

4 INSTALL THE SCREW POSTS AND EXTERIOR ASSEMBLY

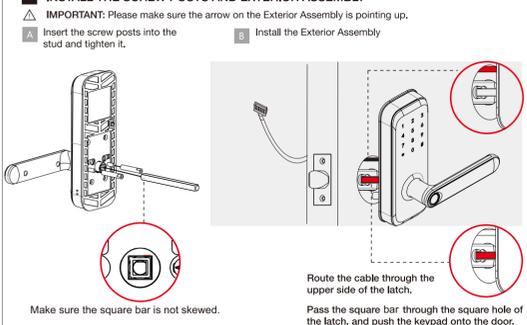

5 INSTALL THE INTERIOR ASSEMBLY AND BATTERY COVER

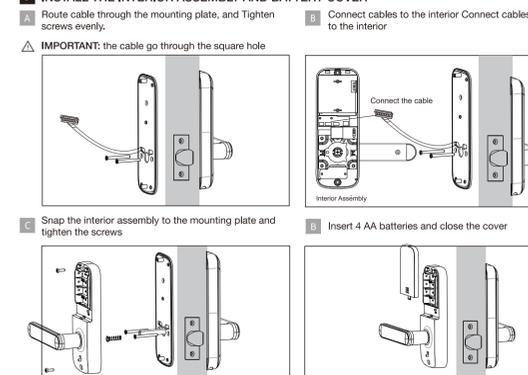

## Quick Set Up

△ The factory status of the product is in experience mode, and the lock can be unlocked without verifying the master info. Please set your master info as soon as possible.

1. THE "\*"KEY  
To clear the key/back key, when entering the password, click to clear the previous input.

 
 
 
 
2. THE "#KEY  
Confirm key or enter menu function key, press it as the doorbell when there is no input.

3. MASTER INFO  
The administrator's fingerprint, password, or IC card. Required for programming and feature settings. It can also be used to unlock.

4. USERS INFO  
Fingerprints, passwords, and IC cards of non administrators. Can only be used for unlocking.

5. ANTI-PEEPING FUNCTION  
When unlocking with a password, User can prevent pin code exposure to strangers by entering random digits before and after the pin code.

6. When you enter the wrong button, you can press \* clear it. If you do not enter any buttons within 10 seconds, the system will exit the programming mode, and you can attempt programming procedure again.





△ When the passage mode is turned on, it will remain unlocked until the correct unlocking information is input again.

## TUYA App Setup




## How to connect the app

Download and install the TUYA APP, register and log in

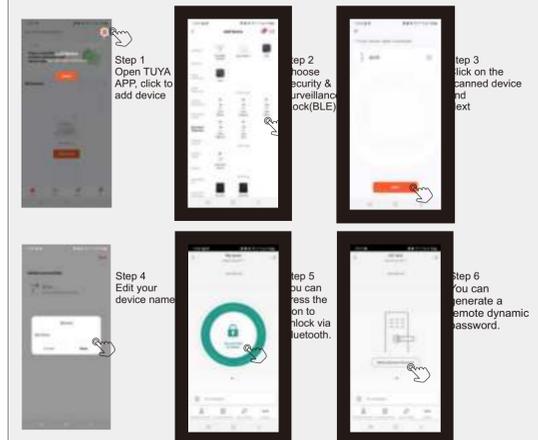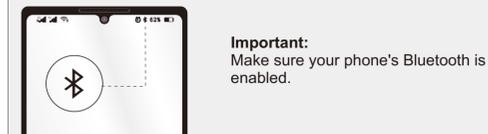


## Mini Smart Gateway (Optional)

Users can connect the device to the Internet via a smart mini-gateway for remote control through your application.  
Note: Mini Smart Gateway can only be configured on 2.4GHz network.

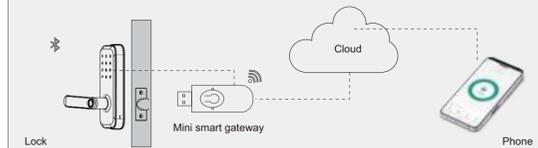


\*Optional, please consult your local seller for details.

## Privacy mode description

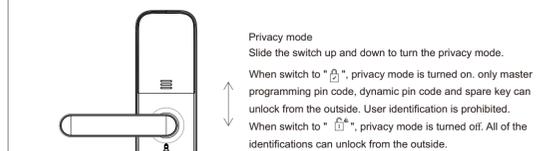

- 1. If passage mode is turned on, it will be turned off automatically when privacy mode switched on.
- 2. When privacy is turned on, passage mode cannot set on both of the lock and APP.

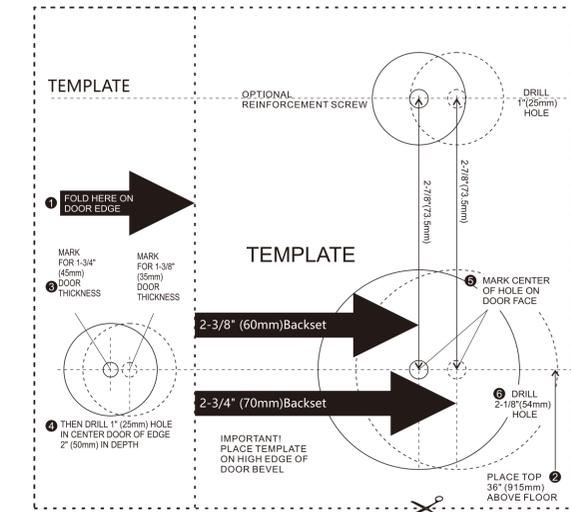

FCC Warning:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.