pages 1 & 2 pages 3 & 4 cover



## **Package Contents:**

- · Wireless Headphones
- · USB Charging Cable
- 3.5 mm Audio Cable Instruction Manual
- Specifications:

New Foldable Bluetooth Headphone Bluetooth version: Bluetooth V5.3 Chipset:JL7003

Battery capacity: 200mAh Play time: up to 15-20 Hours Standby time: 500H Charging time: 2H Use distance: 10m Speaker: 40mm

Frequency response: 20Hz-22KHz

# **Operation Guide**



1: Power on/off

Long press 3 seconds to turn on Long press 3 seconds to turn off

2: Play/Pause music When listening to music.

Tap Power switch once to play or pause the music.

3. Previous /Next Song When listening to music

Volume reduction key to go to previous song.



Quick double tap Volume plus key to go to next song



# 4. Volume -/+

Tap: Volume plus key once to decrease the volume



Tap: Volume plus key once to increase the volume



5: Answer/Hang up When there is an incoming call.

Tap: Power switch once to answer the call. Tap: Power switch once again to end the call

# Reject:

When there is an incoming call.

Long press Power switch for 2 seconds

6: Voice assistant

Quick double tap Power switch key to activate voice assistant.

# Operation Guide

Indicator USB Type-C Charge Port Light



AUX Port Microphone

Getting Started: Before using this device, fully charge it. Charging instructions can be found on page 6.

Do not wear the headphones while setting up, the voice prompt is loud. Press and hold the Power button until the indicator LED flashes red and blue

## Pairing

- 1. Go to Bluetooth® Settings on your mobile device.
- 2. Turn Bluetooth® ON, on your device. 3. On your Bluetooth® device, select
- "iHome TX-21" from the list of available devices.
- 4. When the headphones search for a cellphone and wait for a connection, red and blue lights flash repeatedly.

The light is off when the headphone is connected to the cellphone successfully

## Bluetooth® Functions

- · Long press the Power button to turn the headphones on or off. Note: Once they are paired, the headphones will recognize your device, it is not necessary to set up the pairing again.
- Short press the Play / Pause button to play or pause. Long press the button to power on or off.

When a phone call is incomming short press Play / Pause to answer, long press to reject the incomming call.

### 3.5 mm Cable

The cable allows for headphone use when power or Bluetooth® are not available. You will need to use your device to control the playback

# Troubleshooting

### Headphones do not pair with device:

- 1. Turn the headphones off.
- 2. Restart your device.
- 3. Turn the headphones on
- 4. Try pairing again.

pages 5 & 6 pages 7 & 8 back

### Headphone buttons do not work:

1. Turn the headphones off, and then hack on again

If any of these problems persist, the headphones may need to be charged. Charging instructions can be found on page 6.

If charging and re-pairing does not solve the issue, you may have a defective device, please see the warranty information on page 9.

# Charging

Fully charge the headset before using

- 1. Connect the USB Type-C charging cable to the charging port on the bottom of the left earcun
- 2. Plug the cable into a standard USB 5V/1A or higher power output.

When you plug the headphones into a charging mechanism, the indicator LED will glow solid red. This means the internal battery is being charged.

When the indicator LED light turns to solid blue, this means the headphones are fully charged and ready to use.

3. When fully charged, unplug the charging cable from the power source.

# Warnings

- . Do not use this unit for anything other than its intended use.
- . Do not puncture, throw, drop, bend, or modify
- · Do not throw this product into fire or water · Do not short-curcuit the battery with any metal or metallic objects
- . Do not expose this product to corrosive liquids such as salt water.
- · Do not operate the unit if it has been wet or moist to prevent against electric shock and/or injury to yourself and damage to the unit.
- . Do not allow children to play with this product as it is not a toy, and may present a choking hazard.
- · Avoid leaving your device in direct sunlight, such as on the dashboard, console, or seat of a vehicle · Do not leave your device, or use your device, in any area where the temperature is likely to drop below 32°F, or may exceed 140°F, such as inside a
- closed vehicle on a hot day. · Repairs to electrical equipment should only be performed by a qualified electrician. Improper repairs may place the user at serious risk.
- · Protect your hearing by always listening at a safe level. Prolonged use at elevated volumes may affect your hearing capacity and could result in hearing loss.
- . To avoid damage to the headphones, please only
- . In order to ensure the battery life, charge normally at least once a month.

## FCC FCC ID: 2AHN6-AUBO201

This device complies with Part 15 of the ECC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the ECC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- · Recrient or relocate the receiving antenna
- · Increase the separation between the equipment and receiver
- · Connect the equipment into an outlet on a circuit different from that to which the receiver
- · Consult the dealer or an experienced radio/TV

Caution: Any changes or modifications not to operate the equipment

## Warranty

Bytech NY INC. warrants this product to be materially free from defects and workmanship to the original purchaser for a period of 12 months from the original purchase date, Bytech responsibility with regard to this limited warranty shall be limited solely to repair or replacement at its option, of any product which fails during normal consumer use. This warranty does not extend to damage or failure which results from misuse. neglect, accident, alteration, abuse, improper installation or maintenance, At any time during the 12 months period following the purchase, the product fails due to defects in material or workmanship, return the defective product (with freight prepaid) with proof of purchase.

Bytech NY Inc 2585 West 13street Brooklyn NY 11223 (718) 449-3700 www.bytechintl.com



©2023 BYTECH NY INC. Brooklyn, NY 11223 iHome is a registered trademark of SDI Technologies Inc., used under license. Bluetooth is a registered trademark of Bluetooth SIG Inc. All other brands are registered trademarks of their respective companies. Actual products may differ slightly, images are for illustrative purposes only.

HM-AU-BO-201-OvrEar Hdphns TX-21 Manual I Revised on: December 26th, 2023 Black ink only, thin glossy paper, accordion fold, 5 sheets front & back