



Model#: 2IHKB2014B0L2

MULTI-DEVICE **WIRELESS** KEYBOARD
WITH BUILT-IN CRADLE FOR SMARTPHONES AND TABLETS



Specifications

- * 2.4GHz + Bluetooth 5.1
 - * Material: 85% ABS + 15 % metal
 - * Size: L12.8 x W6.38 x H0.72 (In)
 - * Dock size: L11.25 x W0.47 (In), able to support tablet less than these sizes
- * Weight: 1.46 lb (Without battery)
 - * 84 key
 - * Key life: 10 million time
 - * Power: 2*AAA battery
 - * Compatible with mac and windows

How to Set Up

Keyboard has a mode switch button to switch between Bluetooth mode and 2.4GHz mode freely.

- * Put keyboard on/off button to “on”, then to press BT/2.4G mode switch to switch Keyboard to 2.4G or BT connection.
- * When keyboard is not in use, please turn the keyboard power on/off button to “off” to save battery power

Bluetooth mode connection:

- 1.Press BT/2.4G model button to select “BT”
- 2.Long press Fn+1 or Fn+2 until the Bluetooth LED indicator flashes (BT1 is blue LED flashing, BT2 is green LED flashing)

BT 1 and BT 2 switch:

- * Short press to switch between two Bluetooth channels;

FN+ 3: Re-Pair 2.4G nano receiver with Keyboard:

- * If your nano receiver is failed to connect with computer, press and hold these two buttons for 3 seconds, 2.4GHz light indicator on the top right corner starts flashing, then plug nano receiver to pair with keyboard again. After paired successfully, 2.4GHz light indicator stops flashing.

Keyboard F1 - F12 functional keys:

WINDOWS SYSTEM

KEYS	FUNCTIONS	KEYS	FUNCTIONS
FN+ F1	Return	FN+ F7	Previous music
FN+ F2	Email	FN+ F8	Play/Pause
FN+ F3	Search	FN+ F9	Next Music
FN+ F4	Cut	FN+ F10	Mute
FN+ F5	Copy	FN+ F11	Volume-
FN+ F6	Paste	FN+ F12	Volume+
FN+ SL	Lock computer	Q/W/E	Switch systems

ANDROID SYSTEM

KEYS	FUNCTIONS	KEYS	FUNCTIONS
F1	Return	F7	Previous music
F2	Email	F8	Play/Pause
F3	Search	F9	Next Music
F4	Cut	F10	Mute
F5	Copy	F11	Volume-
F6	Paste	F12	Volume+
SL	Lock screen	Q/W/E	Switch systems

MAC SYSTEM

KEYS	FUNCTIONS	KEYS	FUNCTIONS
F1	Brightness-	F7	Previous music
F2	Brightness+	F8	Play/Pause
F3	Search	F9	Next Music
F4	Cut	F10	Mute
F5	Copy	F11	Volume-
F6	Paste	F12	Volume+
SL	Lock screen	Q/W/E	Switch systems

When the battery is in low battery, the battery LED indicator will flash.
Please replace battery appropriately.

FCC Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of

the following measures:
Reorient or relocate the receiving antenna.
Increase the separation between the equipment and receiver.
Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
Consult the dealer or an experienced radio/TV technician for help.
CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the product.

Health and Safety Warnings

Use of a mouse or keyboard may be linked to serious injuries or disorders.
As in many activities, when using a computer you may experience occasional discomfort in various parts of your body. However, do not ignore symptoms such as persistent or recurring discomfort, pain, throbbing, aching, tingling, numbness, burning sensation or stiffness. Promptly see a qualified doctor, even if symptoms occur when you are not working at your computer.

There is general consensus among researchers that there may be many factors linked to the occurrence of these symptoms, including overall health, stress, physical condition and how a person positions and uses his or her body during work and other activities (including the use of a keyboard or mouse). The amount of time a person spends performing an activity may also be a factor.

If you have questions about how your own lifestyle, activities or physical condition may be related to these symptoms, see a qualified health professional.

Warning Improper setup, use and care of this product can increase the risk of serious injury death or device damage. Read and keep this guide and all other printed guides for future reference. For updated guides or replacements go to golifeworks.com

Do Not Attempt Repairs. Do not attempt to take apart, open, repair, service or modify the device(s). Doing so may risk electric shock or other hazard. Evidence of any attempt to open or modify the device, including any peeling, puncture or removal of labels, will void the Limited Lifetime Warranty.

Tips and Troubleshooting

Troubleshooting

- Ensure the USB is connected to your computer. If it is, try connecting it to a different USB port.
- Restart your computer.

单黑单面印刷，展开尺寸：393X190mm,折合尺寸：131X190mm

