

说明书装订成册, 尺寸：210X143mm

100g铜版纸 四色印刷



AIWA
Edison, NJ 08817
1-800-592-9541
www.aiwa.us.com

© 2024 Aiwa Acquisitions LLC. All rights reserved. AIWA and associated marks are owned by Aiwa Acquisitions and used under license. Keep all relevant information for future reference.

The Bluetooth® word mark and logos are registered trademarks owned by the Bluetooth SIG, Inc. and any use of such marks by Sakar International is under license.



User's Manual

Item: AI7012

IMPORTANT SAFETY PRECAUTIONS

- 1. READ AND FOLLOW ALL INSTRUCTIONS. HEED ALL WARNINGS .
- 2. Do not use device near water.
- 3. Clean only with dry cloth.
- 4. Do not block any ventilation openings.
- 5. Keep external objects away at a minimum distance of 4 inches around the device for sufficient ventilation.
- 6. The ventilation should not be impeded by covering the ventilation openings with items, such as newspapers, table-cloths, curtains, etc.
- 7. No naked flame sources, such as lighted candles, should be placed on or next to the device.
- 8. Do not operate near any heat sources such as radiators, heat registers, stoves, or other devices (including amplifiers) that produce heat.
- 9. Only use attachments/accessories specified by the manufacturer.
- 10. Unplug this device during lightning storms or when unused for a long period of time.
- 11. This appliance shall not be exposed to dripping or splashing water and that no object filled with liquids such as vases shall be placed on or next to the device.
- 12. Upon completion of any service or repairs to this product, ask the service technician to perform safety checks.
- 13. Object and Liquid Entry - Never push objects of any kind into this product through openings as they may touch dangerous voltage points or short-out parts that could result in a fire or electric shock. Never spill liquid of any kind on the product.
- 14. Damage Requiring Service - Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions:
 - a) If liquid has been spilled, or objects have fallen into or onto the product.
 - b) If the product has been exposed to rain or water.
 - c) If the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions as an improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to its normal operation.
 - d) If the product has been dropped or damaged in any way.
 - e) When the product exhibits a distinct change in performance.
- 15. Disconnect plugs completely from sockets.
- 16. Do not expose batteries to excessive heat.
- 17. Excessive sound pressure from earphones and headphone can cause hearing loss.
- 18. Dispose batteries properly based on local laws and regulations.
- 19. Plugs as disconnect devices.

FOLLOW THE ADVICE BELOW FOR SAFE OPERATIONS ON PROTECTION AGAINST LASER ENERGY EXPOSURE:

- As the laser beam used in this compact disc player is harmful to the eyes, do not attempt to disassemble the casing.
- Stop operation immediately if any liquid or solid object falls into the cabinet.
- Do not touch the lens or poke at it. If you do, you may damage the lens and the player may not operate properly.
- Do not place objects that are not a suitable disc inside the CD compartment. The laser diode will stay ON while the CD door is kept open. Do not keep the CD compartment door open.
- If the device is unused for a long period of time, make sure that all power sources are disconnected from the device. Remove all batteries from the battery compartment.
- This device employs a laser. The use of controls or adjustment or performance of procedures other than those specified here may result in exposure to hazardous radiation.
- This device should not be adjusted or repaired by anyone except qualified service personnel.

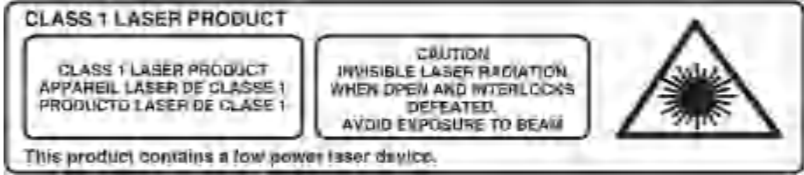


TABLE OF CONTENTS

INTRODUCTION	3
WHAT'S INCLUDED	3
SPECIFICATIONS	3
YOUR BOOMBOX	4-5
POWERING YOUR BOOMBOX	6
WIRED CONNECTION	7
AUDIO CONTROL	8
BLUETOOTH	9
PLAYING FROM CD	10
PLAYING FROM USB/MicroSD	11
PROGRAM/REPEAT	12
LISTENING TO CASSETTE TAPES	13
LISTENING TO THE RADIO	14
RECORDING TO USB AND MicroSD	15-16
CONNECTING HEADPHONES	17
CONNECTING MICROPHONES	18
TROUBLESHOOTING	19
CARE AND MAINTENANCE	20
FCC STATEMENT	21
WARRANTY	22

INTRODUCTION

Thank you for purchasing your AIWA Backtrack Retro Boombox. You can use your boombox with most smartphones and Bluetooth devices to stream music or play cassette tapes or CDs. To get the best results, please read this manual first before using your boombox.

WHAT'S INCLUDED


- Backtrack Retro Boombox
- AC Power Cable
- User's Manual

SPECIFICATIONS


- Bluetooth Range: 10 Meters
- Power: 40W Peak Total
- AUX-IN & Headphone Jack: 3.5mm/ 1/8"
- Supported Disc Format: CD/CD-R/CD-RW
- Optional Battery Type: Eight 1.5 V UM-1/D/R20 (Not Included)

YOUR BOOMBOX

Front View

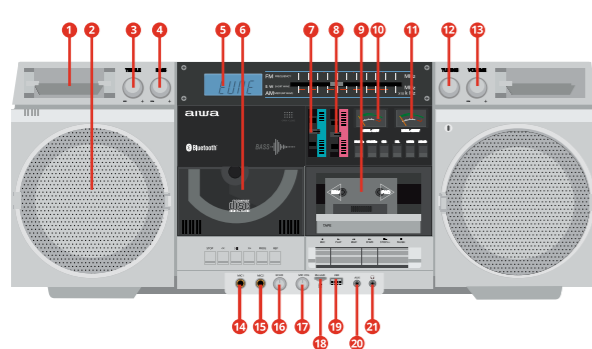


1. Tweeter
2. Woofer
3. Treble Adjustment Knob
4. Bass Adjustment Knob
5. Display
6. CD Door (Push)
7. Source and On/Off Switch
8. FM/AM Band Switch
9. Cassette Tape Door
10. Left Sound Level Meter
11. Right Sound Level Meter
12. Tuning Adjustment Knob
13. Volume Adjustment Knob
14. Microphone 1 Input
15. Microphone 2 Input
16. Echo Control Knob
17. Microphone Volume Adjustment Knob
18. MicroSD Socket
19. USB port
20. Aux IN Jack
21. Headphone Output Jack

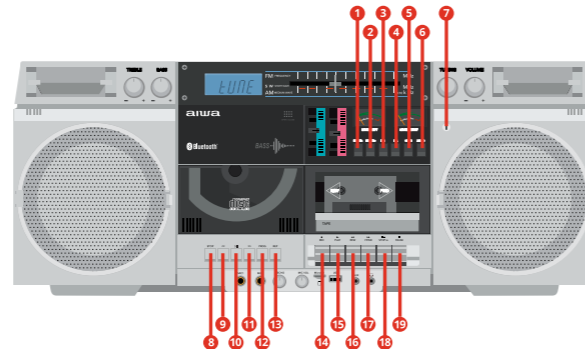

1. Previous Folder Button
2. Next Folder Button
3. Record Button
4. Delete Button
5. Mode Switch Button (BT <-> USB/SD)
6. Bass Boost Button
7. Cassette Internal Recording Microphone
8. Stop Button
9. Previous Track/Rewind Button
10. Play/Pause Button
11. Next Track/Fast-forward Button
12. Programming Button
13. Repeat Button
14. Cassette Record Button
15. Cassette Play Button
16. Cassette Rewind Button
17. Cassette Fast-forward Button
18. Cassette Stop/Eject Button
19. Cassette Pause Button

YOUR BOOMBOX (CONT.)

Back View

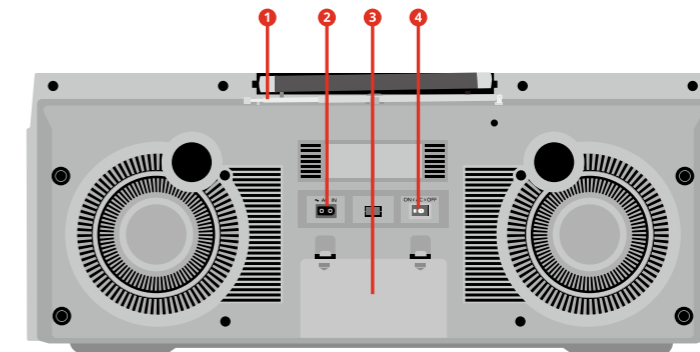

1. FM Rod Antenna
2. AC IN Socket
3. Battery Door
4. Power Switch


POWERING YOUR BOOMBOX

Inserting Batteries

If you want to use your boombox wirelessly, insert eight 1.5 V UM-1/D/R20 batteries (not included) into the battery compartment at the back of your boombox. To insert, first push the battery compartment cover downward to remove it. Then, insert the eight 1.5 V UM-1/D/R20 batteries with the correct polarity (+,-) as displayed in the battery compartment.

Using the AC Cable

Alternatively, you can power your boombox using the included AC Power cable. Insert one end of the AC Power cable into the AC IN Socket on your device, then plug the other end into a suitable power outlet.

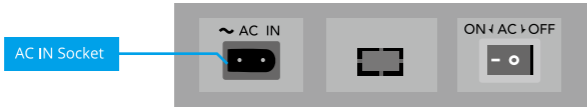

Powering ON/OFF

If the device is operating through the included AC Cable, to power ON, set the power switch located on the back of the device to ON. To turn the device OFF, set the power switch to OFF.

If the device is operating through inserted batteries, set the function switch to Tape to conserve batteries.



WIRED CONNECTION

The Aux/Line Input can be connected to the Line or Headphone output of a suitable music player, TV, etc.

Connecting to an External Playback Device

1. Plug one end of a 3.5mm Audio Jack cable (not supplied) into the AUX IN jack.
2. Connect the other end of the cable to the audio output of the external device.
3. Set the function switch to the BT/AUX/USB/SD position to enable playing audio from the connected device.
4. Aux Takes priority over BT or USB/SD when the Aux socket is used.

AUDIO CONTROL

In most modes, the following audio functions are available:

Volume
Adjust the volume with the Volume Adjustment knob.

Bass
-Adjust the treble with the Treble Adjustment knob.
-Adjust the bass with the Bass Control knob.

X-Bass
-You can boost the bass further by pressing the X-BASS button. If the bass boost is active, “BASS” is shown on the display.
-Press the X-BASS button again to deactivate bass boost. When disabled, “BASS” is no longer shown on the display.

BLUETOOTH

- Connecting Bluetooth Device for the First Time**
- 1. Set the Function Switch to the BT/AUX/USB/SD position.
 - 2. Activate the Bluetooth function on your external device.
 - 3. The Boombox’s display will flash “PAIR” when it enters pairing mode.
 - 4. Connect to the device listed as “AIWA Backtrack” on your external Bluetooth device.
 - 5. Pairing is successful when the boombox’s display shows “BT” continuously without flashing.



Disconnect from Bluetooth
If you want to disconnect from Bluetooth, turn Bluetooth OFF on your external device or set the function switch to another position. Alternatively, you can press and hold the Play/pause button

NOTE: External devices that have already paired once are connected automatically when powered ON and Bluetooth is enabled.

Bluetooth Controls

Playback of tracks, volume, and special functions can be controlled from both your external device and the boombox. What functions are available depends on your external device and the software used.


Volume Adjustment Knob	Decrease or increase the volume. Make sure that the volume on the external device is set loud enough for an adequete imput signal.
▶	Start or pause playback.
<< / >>	Press and hold the Previous Track button to go to the previous song in the track. Press and hold the Next Track button to go to the next song in the track.

PLAYING FROM CD

Regular CDs and CDs with MP3 files on them can be played.

Set the function switch to the CD position.

Inserting a CD

- Press the  OPEN/CLOSE on the top right of the CD compartment to open the cover.
- The CD compartment opens forward, and “OP” will appear on the display.
- Insert a CD, label side up, on the spindle in the middle of the CD compartment.
- Press lightly on the CD compartment to seat it securely on the spindle.
- Close the CD compartment by gently pressing the compartment cover. The CD will begin to roate and show on the display. The CD will begin to rotate. The name of the CD will be shown on the display.

NOTE: If no readable disc has been inserted, the display will show “NO”. When this occurs, press the Stop button. Wait until the CD stops rotating, then open the CD compartment and remove the CD.

PLAYING FROM USB/MICROSD

Inserting a USB Stick

- Plug the USB stick into the USB port.
- Set the function switch to the BT/AUX/USB/SD position.
- Select USB mode on the display by pressing the MODE button.
- The boombox will immediately play the first track inside the USB.

NOTE: USB devices cannot be charged through the USB port.

Inserting MicroSD Card

- Plug the MicroSD card into the MicroSD port.
- Set the function switch to BT/AUX/USB/SD mode.
- Select CARD mode on the display by pressing the MODE button.
- The boombox will immediately play the first track inside the MicroSD card.

Starting/Pausing/Stopping Playback

- Press the Play/pause button to start and stop the currently playing track.
- Use the Stop button to stop playback completely.

Track Selection/Rewind/Fast-forward

- Press the Previous Track button to return to the previous track. Press the Next Track button to skip to the next track.
- Press and hold the Rewind button to rewind. Press and hold the Fast-forward button to fast-forward.

Selecting Folders

- When you play MP3 files, they can be stored in various folders on your connected device. To select a folder to play from, follow the following steps.
- Stop playback with the Stop button.
 - To change folders on an MP3 storage device, press the FOLDER- or FOLDER+ button. The selected folder's number will be displayed.
 - Select the desired track with the Previous and Next Track buttons.
 - Start playback in the selected folder with the Play/pause button.

NOTE: Not all storage media are compatible with the boombox. Depending on compatibility, certain functions may be limited or disabled.

NOTE: The MODE button under the VU meters can be used to switch between BT and USB and/or SD modes if a USB or SD is plugged in.