

# **Preliminary Feature Operation for Casio 2-Line Cordless Phone with Caller ID (MHS-2), And Casio 1-Line Cordless Phone with Caller ID (MHS-5)**

**Revision:** 0.3

**Date:** Mar. 31, 2000

**Author:** Frank Yang-Hsin LIN

**Reviewed:** \_\_\_\_\_

**Approved:** \_\_\_\_\_

**Copy To:** \_\_\_\_\_

**TECOM CO., LTD**  
**23, R&D Road 2**  
**Science-Based Industrial Park**  
**Hsin-Chu Taiwan R.O.C.**

**Version and Amendment Records**

| <b>Version #</b> | <b>Description</b>                                | <b>Date</b>   |
|------------------|---------------------------------------------------|---------------|
| 0.01             | 1. Preliminary Operation Manual                   | Jan. 27, 2000 |
| 0.02             | 1. Modify the mistakes and add the MHS-2 function | Feb. 24, 2000 |
| 0.3              | 1. Modify the programming item                    | Mar. 31, 2000 |
|                  |                                                   |               |
|                  |                                                   |               |
|                  |                                                   |               |
|                  |                                                   |               |

## TABLES OF CONTENT

|                                                              |           |
|--------------------------------------------------------------|-----------|
| <b>I. INTRODUCTION .....</b>                                 | <b>7</b>  |
| 1. Becoming Familiar with Your Wireless System .....         | 7         |
| 2. The Features .....                                        | 7         |
| <b>II. INDICATIONS.....</b>                                  | <b>8</b>  |
| 1. Lamp Cadence.....                                         | 8         |
| 2. Indicator on the Base unit (For MHS-5 Base) .....         | 8         |
| 3. Indicators on the Base unit (For MHS-2 Base).....         | 8         |
| 4. Icons on the Handset unit .....                           | 9         |
| 4.1 CO Line Status.....                                      | 9         |
| 4.2 Other Status .....                                       | 9         |
| <b>III. PROGRAMMING ( HANDSET UNIT ONLY) .....</b>           | <b>10</b> |
| 1. Summary of the Programming and Function Codes.....        | 10        |
| 1.1 Programming Codes .....                                  | 10        |
| 1.2 Function Codes .....                                     | 10        |
| 2. Programming the System Security Code on the Handset ..... | 11        |
| 3. Handset ID Setting .....                                  | 11        |
| 4. CO Line Ring Programming .....                            | 11        |
| 5. Ringer Type Programming.....                              | 12        |
| 6. FLASH Time Programming .....                              | 12        |
| 7. Tone/Pulse Mode Programming .....                         | 13        |
| 8. Hold Reminder Time Programming .....                      | 13        |
| 9. LIU (Line In Use) Enable/Disable Programming .....        | 14        |
| 10. Line Select Enable/Disable Programming .....             | 14        |
| 11. Privacy Enable/Disable Programming .....                 | 15        |
| 12. First Line Select Programming .....                      | 15        |
| 13. Ringer Level Programming .....                           | 16        |
| 14. Handset Reset programming.....                           | 16        |
| <b>IV. PROGRAMMING ( MHS-2 BASE UNIT ONLY) .....</b>         | <b>18</b> |
| 1. Summary of the Programming.....                           | 18        |
| 2. Programming the System Security Code on the Base .....    | 18        |
| 3. CO Line Ring Programming .....                            | 18        |
| 4. Tone/Pulse Mode Programming .....                         | 19        |
| 5. LIU (Line In Use) Enable/Disable Programming .....        | 19        |
| 6. Line Select Enable/Disable Programming.....               | 20        |
| 7. Privacy Enable/Disable Programming .....                  | 20        |
| 8. First Line Select Programming .....                       | 21        |
| 9. Date/Time Programming .....                               | 21        |

|                                                                          |           |
|--------------------------------------------------------------------------|-----------|
| <b>10. Hold Reminder Time Programming .....</b>                          | <b>22</b> |
| <b>11. FLASH Time Programming .....</b>                                  | <b>23</b> |
| <b>12. Ringer Type Programming.....</b>                                  | <b>23</b> |
| <b>13. Ringer Level Programming .....</b>                                | <b>23</b> |
| <b>14. Base Reset programming .....</b>                                  | <b>24</b> |
| <b>V. INSTALLATION ( MHS-5 ONLY ).....</b>                               | <b>25</b> |
| <b>1. Configuration .....</b>                                            | <b>25</b> |
| <b>2. System Security Code Programming .....</b>                         | <b>25</b> |
| <b>VI. BASIC OPERATION ( HANDSET UNIT ONLY ).....</b>                    | <b>26</b> |
| <b>1. Standby Mode.....</b>                                              | <b>26</b> |
| 1.1 Handset Link with the "Idle" Base Unit.....                          | 26        |
| 1.2 Handset Link with the "Busy" Base Unit.....                          | 26        |
| 1.3 Handset Can Not Link with the Base Unit.....                         | 26        |
| <b>2. Making Outside Line Call .....</b>                                 | <b>26</b> |
| 2.1 Making An Outgoing Call by Manual Dialing.....                       | 27        |
| 2.2 End An Outgoing Call .....                                           | 27        |
| <b>3. Answering Call .....</b>                                           | <b>27</b> |
| <b>4. Last Number Redial (LNR) .....</b>                                 | <b>28</b> |
| 4.1 Making An Outgoing Call by LNR.....                                  | 28        |
| 4.2 Making An Outgoing Call by LNR with Pre-Dialing .....                | 28        |
| <b>5. Placing an Outside Call on Hold .....</b>                          | <b>29</b> |
| 5.1 Placing an Outside Call on Hold .....                                | 29        |
| 5.2 Hold Reminder .....                                                  | 29        |
| 5.3 Hold Recall Ring .....                                               | 29        |
| <b>6. Retrieve a Line on Hold .....</b>                                  | <b>29</b> |
| <b>7. Making an Intercom Call.....</b>                                   | <b>30</b> |
| 7.1 If the Called Party is Idle and Access-able .....                    | 30        |
| 7.2 If the Called Party is Busy and Access-able .....                    | 30        |
| 7.3 If the Called Party is in DND (Ringer Off) Mode and Access-able..... | 31        |
| 7.4 If the Called Party is UN-Accessible by Intercom Path Busy.....      | 31        |
| 7.5 If the Called Party is an Illegal Number .....                       | 31        |
| 7.6 Page All Handsets.....                                               | 31        |
| <b>8. Answering an Incoming Intercom Call.....</b>                       | <b>32</b> |
| <b>9. Conference Call.....</b>                                           | <b>32</b> |
| 9.1 Two CO Lines Conference Call.....                                    | 32        |
| <b>10. Transferring CO Call.....</b>                                     | <b>33</b> |
| 10.1 Transferring a Call.....                                            | 33        |
| 10.2 Transferring Recall : .....                                         | 33        |
| <b>11. FLASH Function .....</b>                                          | <b>34</b> |
| <b>12. PAUSE Function .....</b>                                          | <b>34</b> |
| <b>13. TONE Function .....</b>                                           | <b>35</b> |
| <b>14. DND Function.....</b>                                             | <b>36</b> |

|                                                                          |           |
|--------------------------------------------------------------------------|-----------|
| 14.1 Setting DND Mode.....                                               | 36        |
| 14.2 Canceling the DND Mode. ....                                        | 36        |
| <b>15. MUTE Function .....</b>                                           | <b>36</b> |
| <b>16. Out Of Range Warning .....</b>                                    | <b>37</b> |
| 16.1 Handset Walks Back to the Base Unit.....                            | 37        |
| 16.2 Handset Keeps Walking Out From the Base Unit .....                  | 37        |
| <b>17. Battery Low Warning .....</b>                                     | <b>38</b> |
| <b>18. Complete with Headset .....</b>                                   | <b>38</b> |
| <b>19. Volume Control .....</b>                                          | <b>38</b> |
| <b>VII. BASIC OPERATION (MHS-2 BASE UNIT ONLY) .....</b>                 | <b>39</b> |
| <b>1. Standby Mode.....</b>                                              | <b>39</b> |
| <b>2. Making Outside Line Call .....</b>                                 | <b>39</b> |
| 2.1 Making An Outgoing Call .....                                        | 39        |
| <b>3. Answering Call .....</b>                                           | <b>39</b> |
| <b>4. End An Outgoing Call.....</b>                                      | <b>40</b> |
| <b>5. Last Number Redial (LNR) .....</b>                                 | <b>40</b> |
| 5.1 Making An Outgoing Call by LNR.....                                  | 40        |
| 5.2 Making An Outgoing Call by LNR with Pre-Dialing .....                | 40        |
| <b>6. Placing an Outside Call on Hold .....</b>                          | <b>40</b> |
| 6.1 Placing an Outside Call on Hold .....                                | 40        |
| 6.2 Hold Reminder .....                                                  | 41        |
| 6.3 Hold Recall Ring .....                                               | 41        |
| <b>7. Retrieve a Line on Hold .....</b>                                  | <b>41</b> |
| <b>8. Page All Handsets.....</b>                                         | <b>41</b> |
| <b>9. Making an Intercom Call.....</b>                                   | <b>41</b> |
| 9.1 If the Called Party is Idle and Access-able .....                    | 41        |
| 9.2 If the Called Party is Busy and Access-able .....                    | 42        |
| 9.3 If the Called Party is in DND (Ringer Off) Mode and Access-able..... | 42        |
| 9.4 If the Called Party is UN-Accessible by Intercom Path Busy.....      | 42        |
| 9.5 If the Called Party is an Illegal Number .....                       | 42        |
| <b>10. Answering an Incoming Intercom Call.....</b>                      | <b>43</b> |
| <b>11. Conference Call .....</b>                                         | <b>43</b> |
| 11.1 Two CO Lines Conference Call.....                                   | 43        |
| <b>12. Transferring CO Call.....</b>                                     | <b>44</b> |
| 12.1 Transferring a Call.....                                            | 44        |
| 12.2 Transferring Recall : .....                                         | 44        |
| <b>13. FLASH Function .....</b>                                          | <b>44</b> |
| <b>14. PAUSE Function .....</b>                                          | <b>45</b> |
| <b>15. TONE Function .....</b>                                           | <b>45</b> |
| <b>16. MUTE Function .....</b>                                           | <b>45</b> |
| <b>17. Volume Control .....</b>                                          | <b>45</b> |
| <b>VIII. DIRECTORY OPERATION ( HANDSET UNIT ONLY ).....</b>              | <b>46</b> |

|                                                                         |           |
|-------------------------------------------------------------------------|-----------|
| 1. Storing the Information into Directory .....                         | 46        |
| 2. Reviewing the Information from Directory .....                       | 47        |
| 3. Dialing Information from Directory .....                             | 47        |
| 4. Editing Information from Directory .....                             | 48        |
| 5. Removing All Information From Directory .....                        | 48        |
| 6. Removing one Information From Directory .....                        | 49        |
| <b>IX. DIRECTORY OPERATION ( MHS-2 BASE UNIT ONLY ) .....</b>           | <b>50</b> |
| 1. Storing the Information into Directory .....                         | 50        |
| 2. Reviewing the Information from Directory .....                       | 50        |
| 3. Dialing Information from Directory .....                             | 51        |
| 4. Editing Information from Directory .....                             | 51        |
| 5. Removing All Information From Directory .....                        | 52        |
| 6. Removing one Information From Directory .....                        | 52        |
| <b>X. ONE-TOUCH SPEED DIAL OPERATION ( MHS-2 BASE UNIT ONLY ) .....</b> | <b>54</b> |
| 1. Storing the Information into One-Touch Speed Dial .....              | 54        |
| 2. Reviewing the Information from One-Touch Speed Dial .....            | 54        |
| 3. Dialing Information from One-Touch Speed Dial .....                  | 55        |
| 4. Editing Information from One-Touch Speed Dial .....                  | 55        |
| 5. Removing one Information From One-Touch Speed Dial .....             | 56        |
| <b>XI. CALLER ID OPERATION ( HANDSET UNIT ONLY ) .....</b>              | <b>58</b> |
| 1. Caller ID Call Back Dialing method .....                             | 58        |
| 1.1 Programming the Dialing Method .....                                | 58        |
| 1.2 Programming the Area Code .....                                     | 58        |
| 1.3 Erasing the Area Code .....                                         | 59        |
| 2. Ringing Line Caller ID Function .....                                | 59        |
| 2.1 View the Caller ID Information Between Ringing Calls .....          | 60        |
| 3. Caller ID Data Base Function .....                                   | 61        |
| 3.1 Enter the CID Data Base Retrieve Mode .....                         | 61        |
| 3.2 Delete All Callers from the Caller Data Base .....                  | 61        |
| 3.3 Scroll the Calls in the CID Data Base .....                         | 62        |
| 3.4 View the Completed Caller Information .....                         | 62        |
| 3.5 Dial Back for the Caller on the Display .....                       | 63        |
| 3.6 Delete a Caller from the Caller Data Base .....                     | 64        |
| 3.7 Store a Caller Number into the Directory Memory .....               | 64        |
| 3.8 Leave the CID Data Base Retrieve Mode .....                         | 65        |
| 4. Caller ID on Call Waiting ( Type II Call ID ) .....                  | 65        |
| <b>XII. CALLER ID OPERATION ( MHS-2 BASE UNIT ONLY ) .....</b>          | <b>67</b> |
| 1. Caller ID Call Back Dialing method .....                             | 67        |
| 1.1 Programming the Dialing Method .....                                | 67        |
| 1.2 Programming the Area Code .....                                     | 67        |
| 1.3 Erasing the Area Code .....                                         | 68        |

---

|                                                                |           |
|----------------------------------------------------------------|-----------|
| <b>2. LCD Icon for Caller ID Function .....</b>                | <b>68</b> |
| <b>3. Ringing Line Caller ID Function .....</b>                | <b>68</b> |
| 3.1 View the Caller ID Information Between Ringing Calls ..... | 69        |
| <b>4. Caller ID Data Base Function .....</b>                   | <b>69</b> |
| 4.1 Enter the CID Data Base Retrieve Mode.....                 | 69        |
| 4.2 Delete All Callers from the Caller Data Base .....         | 69        |
| 4.3 Scroll the Calls in the CID Data Base.....                 | 70        |
| 4.4 Dial Back for the Caller on the Display .....              | 70        |
| 4.5 Delete a Caller from the Caller Data Base.....             | 71        |
| 4.6 Store a Caller Number into the Directory Memory .....      | 71        |
| 4.7 Store a Caller Number into the One-Touch Speed Dial.....   | 72        |
| <b>5. Caller ID on Call Waiting ( Type II Call ID ) .....</b>  | <b>72</b> |

## **I. INTRODUCTION**

### **1. Becoming Familiar with Your Wireless System**

The system consists of one base unit and up to sixty wireless handsets. The base unit provides four voice (RF) channels for Intercom or outside calling by any wireless handset.

### **2. The Features**

The system provides many features such as:

**2 CO line Capacity. (MHS-5 only with 1 CO line capacity)**

**15 \* 2 LCD with icons (MHS-2 Base Unit Only)**

**12 \* 2 LCD with icons**

**Tone/Pulse Dialing.**

**Directory. (80 Numbers and name)**

**Speed Dialing (12 Numbers and name, MHS-2 Base Unit Only)**

**Last Number Redial (LNR).**

**Intercom calling.**

**Conference.**

**Call Transfer.**

**Hold.**

**Flash.**

**Pause.**

**Do Not Disturb (DND).**

**Ringer On/Off control.**

**Ringer Level Control.**

**Volume Level Control.**

**Headset Compatibility.**

**Caller ID. (50 Caller ID)**

**PS: The second line features described in this manual may not apply to MHS-5 model.**



## II. INDICATIONS

### 1. Lamp Cadence

|         |                                                                                              |
|---------|----------------------------------------------------------------------------------------------|
| Dark    | solid dark                                                                                   |
| Lit     | solid lit                                                                                    |
| Slowest | 1sec off, 1sec on repeatedly.                                                                |
| Slow    | 0.5sec off, 0.5sec on repeatedly.                                                            |
| Fast    | 0.125sec off, 0.125sec on, repeatedly.                                                       |
| Flick1  | 0.125sec off, 1.875sec on, repeatedly.                                                       |
| Flick2  | 0.125sec off, 0.125sec on, 0.125sec off, 1.625sec on, repeatedly.                            |
| Flick3  | 0.125sec off, 0.125sec on, 0.125sec off, 0.125sec on, 0.125sec off, 1.125sec on, repeatedly. |

### 2. Indicator on the Base unit (For MHS-5 Base)

-- POWER: indicates the AC power and the Base unit status.

|         |                                                                                                                                                      |
|---------|------------------------------------------------------------------------------------------------------------------------------------------------------|
| Dark:   | The AC power lost.                                                                                                                                   |
| Slow:   | 0.5sec on, 0.5sec off, repeatedly.<br>Within power on 15 seconds, waiting to receive the new S.S.C. period,<br>Base unit in S.S.C. Programming mode. |
| Fast:   | 0.125sec on, 0.125sec off, repeatedly.<br>The S.S.C. is empty in the Base unit.                                                                      |
| Lit:    | Base unit is in idle mode.                                                                                                                           |
| Flick1: | Base unit is in normal operation.                                                                                                                    |
| Flick2: | Base unit is in charge mode.                                                                                                                         |
| Flick3: | Base unit is in busy mode.                                                                                                                           |

### 3. Indicators on the Base unit (For MHS-2 Base)

The LED on the Faceplate Top

|       |                                                     |
|-------|-----------------------------------------------------|
| Lit:  | Normal operation.                                   |
| Slow: | CO Ring, Transfer Ring, Recall Ring, Intercom Ring. |

Page LED

|       |                                 |
|-------|---------------------------------|
| Dark: | Intercom Idle.                  |
| Slow: | Base receives an intercom ring. |

|                        |                                                                 |
|------------------------|-----------------------------------------------------------------|
| Flick1:                | Base unit is in use the intercom trunk.                         |
| Lit:                   | Handset units are in use the intercom trunk.                    |
| Speaker LED            |                                                                 |
| Dark:                  | Idle mode.                                                      |
| Lit:                   | Speakerphone mode.                                              |
| Headset LED            |                                                                 |
| Dark:                  | Idle mode.                                                      |
| Lit:                   | Headset mode.                                                   |
| Line1/Line2 Red LEDs   |                                                                 |
| Dark:                  | CO line is idle.                                                |
| Slow:                  | CO line is ringing.                                             |
| Fast:                  | Handset unit user holds the CO line.                            |
| Lit:                   | Handset unit user uses the CO line.                             |
| Line1/Line2 Green LEDs |                                                                 |
| Dark:                  | CO line is idle.                                                |
| Slow:                  | Base receives a transfer call, or a CO line “hold recall ring”. |
| Fast:                  | Base unit holds the CO.                                         |
| Lit:                   | Base unit user uses the CO line.                                |

#### 4. Icons on the Handset unit

The LCD of the handset is 2\*15 dot matrix with some icons. There are 2 CO line icons to show the CO line status on the LCD. They have many different combinations to show the line status, including Idle, Ring, Talk, Hold, Transfer Ring, ... etc. And battery power status.

##### 4.1 CO Line Status

For all 2 CO Lines status. There are 3 different icons on each CO line. They are “Handset”, “Ring”, and “Ring Off” icons

Ring Off Icon: (I) For the CO line is programmed to the “Ring Off” mode.

Handset Icon: (I) Off: CO Line is idle.  
(II) On: CO Line is in use.  
(III) Flash: CO Line is held.

Ring Icon: (I) Off: CO Line doesn’t ring.  
(II) Flash: CO Line is ringing.

Handset and Ring Icons: (I) Both Flash: Transfer Ring or Recall Ring

##### 4.2 Other Status

The other icon is for battery low status.

Battery Icon: For the battery power status.

### III.PROGRAMMING ( HANDSET UNIT ONLY)

#### 1. Summary of the Programming and Function Codes

##### 1.1 Programming Codes

There are some programming parameters on the handset, and here are the operation and the list.

. Standby, the LCD displays:

|                            |
|----------------------------|
| <b>R i n g : M i d</b>     |
| <b>I D : 1 1</b>           |
| <b>&lt; i c o n s &gt;</b> |

Note: 1. "Ring": Ringer volume that may be Low, Mid, Hi or DND.  
2. "ID": Identification Number of the handset.  
3. <icons>: Icons for the status of CO lines, and battery.

. Press [PRG] and then enter the programming items, you may press the [ ▲ ]/[ ▼ ] to select the item you want to change

1. System Security Code (S.S.C.)
2. Register Programming
3. Handset ID Programming.
4. CO Line Ring Programming.
5. Handset Ring Type Programming.
6. Hold-Reminder Time Programming.
7. FLASH Time Programming.
8. Tone/Pulse Mode Programming.
9. Caller ID Area Code Dialing Method Programming (Refer to the Caller ID Operation)
10. LIU (Line In Use) Enable/Disable Programming
11. Line Select Enable/Disable Programming
12. Privacy Enable/Disable Programming
13. First Line Select Programming
14. Ringer Level Programming
15. Handset RESET Programming.

##### 1.2 Function Codes

There are some function access codes on the handset, here is the summary.

For more details, please refer to the following paragraphs.

Each time you press the [ FCN ] will form a function access key by followed function access code [ 1/4/7/\* ].

. Standby, press [FCN]

|                            |
|----------------------------|
| <b>R i n g : M i d</b>     |
| <b>I D : 1 1</b>           |
| <b>&lt; i c o n s &gt;</b> |

The symbol " " indicates [FCN] key prompt

|           |                                                                    |
|-----------|--------------------------------------------------------------------|
| [FCN] [1] | DELETE code, to delete the SPEED/CID list memory, or CID area Code |
| [FCN] [4] | DND code, to activate Do Not Disturb feature                       |
| [FCN] [7] | PAUSE code, to insert a delay during digits                        |
| [FCN] [*] | CONFERENCE code, to bridge 3-way conference call                   |

## 2. Programming the System Security Code on the Handset

. Standby, press [PRG] and the LCD displays:

|                            |
|----------------------------|
| <b>M E M</b>               |
| <b>&lt; i c o n s &gt;</b> |

. Press [▲]/[▼] to select the item to set the system security code

|                            |
|----------------------------|
| <b>S e c . C o d e</b>     |
| <b>( E m p t y )</b>       |
| <b>&lt; i c o n s &gt;</b> |

Or

|                            |
|----------------------------|
| <b>S e c . C o d e</b>     |
| <b>1 2 3 4 5 6</b>         |
| <b>&lt; i c o n s &gt;</b> |

- |               |                                  |
|---------------|----------------------------------|
| 1. MEM :      | Programming start prompt         |
| 2. Sec.Code : | Sec.Code programming mode prompt |
| 3. (Empty) :  | Sec.Code is not programmed       |
| 4. 123456 :   | The Sec.C code already exists.   |

. Enter [ # ] to enter the changing mode, and then,

. Enter [ 1/2/3/4/5/6/7/8/9/0/\*/#/PAUSE/FLASH ] 6 digits for new S.S.Code, say 775141. The LCD will display:

|                            |
|----------------------------|
| <b>S e c . C o d e</b>     |
| <b>7 7 5 1 4 1</b>         |
| <b>&lt; i c o n s &gt;</b> |

. Press [OFF], or [PRG], or [▲]/[▼] to confirm and quit the new setting or change to the other programming.

## 3. Handset ID Setting

. Standby, press [PRG]

. Press [▲]/[▼] to select the item to enter the handset ID programming and the LCD will display:

|                            |
|----------------------------|
| <b>H a n d s e t I D</b>   |
| <b>1 1</b>                 |
| <b>&lt; i c o n s &gt;</b> |

Or

|                            |
|----------------------------|
| <b>H a n d s e t I D</b>   |
| <b>1 5</b>                 |
| <b>&lt; i c o n s &gt;</b> |

- |                 |                                |
|-----------------|--------------------------------|
| 1. Handset ID : | Programming handheld ID mode   |
| 2. ID:11 :      | The default handset ID number  |
| 3. ID:15 :      | The original handset ID number |

. Enter [ # ] to enter the changing mode, and then,

. Enter [ 11 - 70 ] 2 digits intercom station number. Default '11'.

For example: we enter the new [ 1 ] [ 2 ] handset ID number

|                            |
|----------------------------|
| <b>H a n d s e t I D</b>   |
| <b>1 2</b>                 |
| <b>&lt; i c o n s &gt;</b> |

. Press [OFF], or [PRG], or [▲]/[▼] to confirm and quit the new setting or change to the other programming.

## 4. CO Line Ring Programming

You may program each the CO line incoming call will ring or not on your handset. Default all the 2 CO lines will ring.

. Standby, press [PRG].

. Press [▲]/[▼] to select the item to select the line you want to program, say CO1

|               |               |
|---------------|---------------|
| L 1           | R i n g       |
| O n           | ( # : c h g ) |
| < i c o n s > |               |

or

|               |               |
|---------------|---------------|
| L 1           | R i n g       |
| O f f         | ( # : c h g ) |
| < i c o n s > |               |

1. L1 Ring : You are programming CO line#1 ring On/Off.

2. On/Off : The current setting is On/Off.

. Press [#] to toggle the CO line ringing On/Off status. The LCD will display:

|               |               |
|---------------|---------------|
| L 1           | R i n g       |
| O f f         | ( # : c h g ) |
| < i c o n s > |               |

or

|               |               |
|---------------|---------------|
| L 1           | R i n g       |
| O n           | ( # : c h g ) |
| < i c o n s > |               |

1. L1 Ring : You are programming CO line#1 ring On/Off.

2. Off/On : Disable/Enable CO1 ring.

. Press [OFF], or [PRG], or [▲]/[▼] to confirm and quit the new setting or change to the other programming.

## 5. Ringer Type Programming

You may select one of the four types ringer sound on your handset. Default is the type 1.

. Standby, press [PRG].

. Press [▲]/[▼] to select the ringer type programming mode. The LCD will display:

|               |               |
|---------------|---------------|
| R i n g       | T y p e       |
| 1             | ( # : c h g ) |
| < i c o n s > |               |

1. Ring Type : Ringer type.

2. 1 : The old programmed type

. Press [#] to select the new ringer type you prefer.

Each time you change, there is a new ringer type sounds for your reference.

For example, if we select [2], the LCD will display:

|               |               |
|---------------|---------------|
| R i n g       | T y p e       |
| 2             | ( # : c h g ) |
| < i c o n s > |               |

1. Ring Type : Ringer type.

2. 2 : Type 2

. Press [OFF], or [PRG], or [▲]/[▼] to confirm and quit the new setting or change to the other programming.

## 6. FLASH Time Programming

You may program the FLASH time duration as your service need.

. Standby, press [PRG]

. Press [▲]/[▼] to select the FLASH Time programming mode. The LCD will display:

|   |   |   |   |   |   |   |   |   |   |   |   |
|---|---|---|---|---|---|---|---|---|---|---|---|
| F | l | a | s | h |   | T | i | m | e |   |   |
| 6 | 0 | 0 | m | s | ( | # | : | c | h | g | ) |
|   | < | i | c | o | n | s | > |   |   |   |   |

1. Flash Time : Flash time programming mode
2. 0.6 Sec. : Programmed FLASH time

. Press [#] to select the new FLASH time selection: 600/375/275/100ms

|   |   |   |   |   |   |   |   |   |   |   |   |
|---|---|---|---|---|---|---|---|---|---|---|---|
| F | l | a | s | h |   | T | i | m | e |   |   |
| 2 | 7 | 5 | m | s | ( | # | : | c | h | g | ) |
|   | < | i | c | o | n | s | > |   |   |   |   |

. Press [OFF], or [PRG], or [▲]/[▼] to confirm and quit the new setting or change to the other programming.

Note: When any handset changes its Flash Time, the other handsets are automatically changed to the same universal Flash time setting.

## 7. Tone/Pulse Mode Programming

You may program your phone to be a Tone or Pulse dialing phone.

. Standby, press [PRG].

. Press [▲]/[▼] to select the Tone/Pulse programming mode.

|   |   |   |   |   |   |   |   |   |   |   |   |
|---|---|---|---|---|---|---|---|---|---|---|---|
| T | o | n | e | / | P | u | l | s | e |   |   |
| T | o | n | e |   | ( | # | : | c | h | g | ) |
|   | < | i | c | o | n | s | > |   |   |   |   |

or

|   |   |   |   |   |   |   |   |   |   |   |   |   |
|---|---|---|---|---|---|---|---|---|---|---|---|---|
| T | o | n | e | / | P | u | l | s | e |   |   |   |
| P | u | l | s | e |   | ( | # | : | c | h | g | ) |
|   | < | i | c | o | n | s | > |   |   |   |   |   |

1. Tone/Pulse : You are programming Tone/Pulse.
2. Tone or Pulse: The current setting is Tone/Pulse.

. Press [#] to toggle between the Tone and Pulse modes. The LCD will display:

|   |   |   |   |   |   |   |   |   |   |   |   |   |
|---|---|---|---|---|---|---|---|---|---|---|---|---|
| T | o | n | e | / | P | u | l | s | e |   |   |   |
| P | u | l | s | e |   | ( | # | : | c | h | g | ) |
|   | < | i | c | o | n | s | > |   |   |   |   |   |

or

|   |   |   |   |   |   |   |   |   |   |   |   |
|---|---|---|---|---|---|---|---|---|---|---|---|
| T | o | n | e | / | P | u | l | s | e |   |   |
| T | o | n | e |   | ( | # | : | c | h | g | ) |
|   | < | i | c | o | n | s | > |   |   |   |   |

1. Tone/Pulse : You are programming Tone/Pulse mode.
2. Pulse or Tone: Changed to Pulse/Tone Mode.

. Press [OFF], or [PRG], or [▲]/[▼] to confirm and quit the new setting or change to the other programming.

## 8. Hold Reminder Time Programming

Default: 30 seconds.

. Standby, press [PRG].

. Press [▲]/[▼] to select the Hold Reminder Time programming mode. The LCD will display:

|   |   |   |   |   |   |   |   |   |   |   |   |
|---|---|---|---|---|---|---|---|---|---|---|---|
| H | o | l | d |   | R | e | m | i | n | d |   |
| 3 | 0 | S | e | c | ( | # | : | c | h | g | ) |
|   | < | i | c | o | n | s | > |   |   |   |   |

1. Hold Remind : Hold Reminder Time programming mode
2. 30 Sec. : Programmed Reminder Time.

. Press [#] to select the Hold Reminder Time setting.  
For example, disable the function of Hold Reminder. The LCD will display:

|   |   |   |   |   |   |   |   |   |   |
|---|---|---|---|---|---|---|---|---|---|
| H | o | l | d | R | e | m | i | n | d |
| O | f | f |   | ( | # | : | c | h | g |
|   |   |   |   | < | i | c | o | n | s |
|   |   |   |   |   |   |   |   |   | > |

. Press [OFF], or [PRG], or [▲]/[▼] to confirm and quit the new setting or change to the other programming.

## 9. LIU (Line In Use) Enable/Disable Programming

You may program the LIU detection function enable or disable. Default the LIU function is enable.

. Standby, press [PRG], press [▲]/[▼] to select this item.

|   |   |   |   |   |   |   |   |   |
|---|---|---|---|---|---|---|---|---|
| L | I | U | D | e | t | e | c | t |
| O | n |   |   | ( | # | : | c | h |
|   |   |   |   |   |   |   |   | g |
|   |   |   |   | < | i | c | o | n |
|   |   |   |   |   |   |   |   | s |
|   |   |   |   |   |   |   |   | > |

or

|   |   |   |   |   |   |   |   |   |
|---|---|---|---|---|---|---|---|---|
| L | I | U | D | e | t | e | c | t |
| O | f | f |   | ( | # | : | c | h |
|   |   |   |   |   |   |   |   | g |
|   |   |   |   | < | i | c | o | n |
|   |   |   |   |   |   |   |   | s |
|   |   |   |   |   |   |   |   | > |

1. LIU Detect : You are programming the LIU function On/Off.
2. On/Off : The current setting is On/Off.

. Press [#] to toggle the LIU function On/Off status. The LCD will display:

|   |   |   |   |   |   |   |   |   |
|---|---|---|---|---|---|---|---|---|
| L | I | U | D | e | t | e | c | t |
| O | f | f |   | ( | # | : | c | h |
|   |   |   |   |   |   |   |   | g |
|   |   |   |   | < | i | c | o | n |
|   |   |   |   |   |   |   |   | s |
|   |   |   |   |   |   |   |   | > |

or

|   |   |   |   |   |   |   |   |   |
|---|---|---|---|---|---|---|---|---|
| L | I | U | D | e | t | e | c | t |
| O | n |   |   | ( | # | : | c | h |
|   |   |   |   |   |   |   |   | g |
|   |   |   |   | < | i | c | o | n |
|   |   |   |   |   |   |   |   | s |
|   |   |   |   |   |   |   |   | > |

1. LIU Detect : You are programming the LIU function On/Off.
2. Off/On : Disable/Enable LIU function.

. Press [OFF], or [PRG], or [▲]/[▼] to confirm and quit the new setting or change to the other programming.

## 10. Line Select Enable/Disable Programming

You may program the Auto Line Select function enable or disable. Default the function is disable.  
The user off-hooks the handset, the ringing CO line will be picked up when the function is on.

. Standby, press [PRG], press [▲]/[▼] to select this item.

|   |   |   |   |   |   |   |   |   |   |
|---|---|---|---|---|---|---|---|---|---|
| L | i | n | e | S | e | l | e | c | t |
| O | n |   |   | ( | # | : | c | h | g |
|   |   |   |   |   |   |   |   |   | ) |
|   |   |   |   | < | i | c | o | n | s |
|   |   |   |   |   |   |   |   |   | > |

or

|   |   |   |   |   |   |   |   |   |   |
|---|---|---|---|---|---|---|---|---|---|
| L | i | n | e | S | e | l | e | c | t |
| O | f | f |   | ( | # | : | c | h | g |
|   |   |   |   |   |   |   |   |   | ) |
|   |   |   |   | < | i | c | o | n | s |
|   |   |   |   |   |   |   |   |   | > |

1. Line Select: You are programming the Auto Line Select function On/Off.
2. On/Off : The current setting is On/Off.

. Press [#] to toggle the selection. The LCD will display:

|               |               |
|---------------|---------------|
| L i n e       | S e l e c t   |
| O f f         | ( # : c h g ) |
| < i c o n s > |               |

or

|               |               |
|---------------|---------------|
| L i n e       | S e l e c t   |
| O n           | ( # : c h g ) |
| < i c o n s > |               |

1. Line Select: You are programming the Auto Line Select function On/Off.
2. Off/On : Disable/Enable Auto answer.

. Press [OFF], or [PRG], or [▲]/[▼] to confirm and quit the new setting or change to the other programming.

## 11. Privacy Enable/Disable Programming

You may program the Privacy function enable or disable. Default the function is disable.  
The other user can join the conversation easily when you are talking the CO line and this function is off.

. Standby, press [PRG], press [▲]/[▼] to select this item.

|               |               |
|---------------|---------------|
| P r i v a c y |               |
| O n           | ( # : c h g ) |
| < i c o n s > |               |

or

|               |               |
|---------------|---------------|
| P r i v a c y |               |
| O f f         | ( # : c h g ) |
| < i c o n s > |               |

1. Privacy : You are programming the Privacy function On/Off.
2. On/Off : The current setting is On/Off.

. Press [#] to toggle the selection. The LCD will display:

|               |               |
|---------------|---------------|
| P r i v a c y |               |
| O f f         | ( # : c h g ) |
| < i c o n s > |               |

or

|               |               |
|---------------|---------------|
| P r i v a c y |               |
| O n           | ( # : c h g ) |
| < i c o n s > |               |

1. Privacy : You are programming the Privacy function On/Off.
2. Off/On : Disable/Enable Privacy function.

. Press [OFF], or [PRG], or [▲]/[▼] to confirm and quit the new setting or change to the other programming.

## 12. First Line Select Programming

You may program the First Line Select function. Default the function is L1.

. Standby, press [PRG], press [▲]/[▼] to select this item.

|               |               |
|---------------|---------------|
| F i r s t     | L i n e       |
| L 1           | ( # : c h g ) |
| < i c o n s > |               |

or

|               |               |
|---------------|---------------|
| F i r s t     | L i n e       |
| L 2           | ( # : c h g ) |
| < i c o n s > |               |

1. First Line : You are programming the First Line function.
2. L1/L2 : The current setting is L1/L2.



. Press [#] to toggle the Selection. The LCD will display:

|               |   |   |   |   |   |   |   |         |
|---------------|---|---|---|---|---|---|---|---------|
| F             | i | r | s | t | L | i | n | e       |
| L             | 2 |   |   |   | ( | # | : | c h g ) |
| < i c o n s > |   |   |   |   |   |   |   |         |

or

|               |   |   |   |   |   |   |   |         |
|---------------|---|---|---|---|---|---|---|---------|
| F             | i | r | s | t | L | i | n | e       |
| L             | 1 |   |   |   | ( | # | : | c h g ) |
| < i c o n s > |   |   |   |   |   |   |   |         |

1. First Line : You are programming the First Line function.
2. Off/On : Disable/Enable CO1 ring.

. Press [OFF], or [PRG], or [▲]/[▼] to confirm and quit the new setting or change to the other programming.

### 13. Ringer Level Programming

You may select one of the three ringer level sound on your handset. Default is the middle.

. Standby, press [PRG].

. Press [▲]/[▼] to select the ringer level programming mode. The LCD will display:

|               |   |   |   |   |   |   |   |         |
|---------------|---|---|---|---|---|---|---|---------|
| R             | i | n | g | L | e | v | e | l       |
| M             | i | d |   |   | ( | # | : | c h g ) |
| < i c o n s > |   |   |   |   |   |   |   |         |

1. Ring Level : Ringer level.
2. Mid : The old programmed level

. Press [#] to change the ringer level to Low/Mid/Hi. Each time you change, there is a new ringer level sounds for your reference. For example, if we change to Hi level, the LCD will display:

|               |   |   |   |   |   |   |   |         |
|---------------|---|---|---|---|---|---|---|---------|
| R             | i | n | g | L | e | v | e | l       |
| H             | i |   |   |   | ( | # | : | c h g ) |
| < i c o n s > |   |   |   |   |   |   |   |         |

1. Ring Level : Ringer Level.
2. Hi : Ringer level is Hi

. Press [OFF], or [PRG], or [▲]/[▼] to confirm and quit the new setting or change to the other programming.

### 14. Handset Reset programming

You may RESET the handset and clear all the programmed data, all the parameters will back to the default values.

- S.S.Code: Empty
- Ringer Volume: Middle level
- Handset ID: 11
- CO Ring Assign: Both 2 lines will ring
- Ring Type: Type 1
- Hold-Reminder Time: 30 seconds

. Standby, press [PRG]

. Press the [▲]/[▼] to select the RESET programming mode. The LCD will display:

|               |   |   |   |   |   |   |   |   |
|---------------|---|---|---|---|---|---|---|---|
| R             | e | s | e | t | ? |   |   |   |
| P             | R | G | : | r | e | s | e | t |
| < i c o n s > |   |   |   |   |   |   |   |   |

--- "Reset ?" : Handset RESET prompt.

. Press [PRG] again, and a confirmation signal to indicate the successful programming. The LCD will display:

|                            |
|----------------------------|
| <b>M E M    O K !</b>      |
| <b>R e s e t</b>           |
| <b>&lt; i c o n s &gt;</b> |

1. MEM OK! :      Programming end & OK prompt.
2. Reset:            Reset programming mode prompt.

. After 15 seconds, the handset will back to standby mode automatically, and the display shows:

|                            |
|----------------------------|
| <b>R i n g : M i d</b>     |
| <b>I D : 1 1</b>           |
| <b>&lt; i c o n s &gt;</b> |

## IV. PROGRAMMING ( MHS-2 BASE UNIT ONLY)

### 1. Summary of the Programming

There are some programming parameters on the base unit, and here are the operation and the list.

. Press [PROGRAM] and then enter the programming items.

Rotate the Data Dial to select the item you want to change

1. System Security Code (S.S.C.)
2. CO Line Ring Programming.
3. Tone/Pulse Mode Programming.
4. LIU (Line In Use) Enable/Disable Programming
5. Line Select Enable/Disable Programming
6. Privacy Enable/Disable Programming
7. First Line Select Programming
8. Date/Time Programming
9. Caller ID Area Code Dialing Method Programming (Refer to the Caller ID Operation)
10. Date/Time Programming
11. Hold-Reminder Time Programming.
12. FLASH Time Programming.
13. Ring Type Programming.
14. Ringer Level Programming
15. Base RESET Programming.

### 2. Programming the System Security Code on the Base

. Standby, press [PROGRAM] and the LCD displays:

|               |
|---------------|
| P r o g r a m |
|---------------|

. Rotate the Data Dial to select the item to set the system security code

|                         |
|-------------------------|
| S e c u r i t y C o d e |
| ( E m p t y )           |

Or

|                         |
|-------------------------|
| S e c u r i t y C o d e |
| 1 2 3 4 5 6             |

1. Program : Programming start prompt
2. Security Code : Security Code programming mode prompt
3. (Empty) : Security Code is not programmed
4. 123456 : The Security Code already exists.

. Press the center of the Data Dial to select this item,

. Enter [ 1/2/3/4/5/6/7/8/9/0/\*/#/PAUSE/FLASH ] 6 digits for new S.S.Code, say 775141. The LCD will display:

|                         |
|-------------------------|
| S e c u r i t y C o d e |
| 7 7 5 1 4 1             |

. Press the center of Data Dial to accept the new security code.

### 3. CO Line Ring Programming

You may program each the CO line incoming call will ring or not on your handset. Default all the 2 CO lines will ring.

. Standby, press [PROGRAM]

- . Rotate the Data Dial to select the item to set the system security code

L 1 R i n g  
O n

or

L 1 R i n g  
O f f

1. L1 Ring : You are programming CO line#1 ring On/Off.
2. On/Off : The current setting is On/Off.

- . Press the center of the Data Dial to select this option
- . Rotate the dial to select either ON or Off. The LCD will display:

L 1 R i n g  
< O f f >

or

L 1 R i n g  
< O n >

1. L1 Ring : You are programming CO line#1 ring On/Off.
2. Off/On : Disable/Enable CO1 ring.

- . Press the center of the Data Dial to accept.

#### 4. Tone/Pulse Mode Programming

You may program your phone to be a Tone or Pulse dialing phone.

- . Standby, press [PROGRAM]
- . Rotate the Data Dial to select the Tone/Pulse programming mode.

T o n e / P u l s e  
T o n e

or

T o n e / P u l s e  
P u l s e

1. Tone/Pulse : You are programming Tone/Pulse.
2. Tone or Pulse: The current setting is Tone/Pulse.

- . Press the center of the Data Dial to select this option
- . Rotate the dial to select from the Tone and Pulse modes. The LCD will display:

T o n e / P u l s e  
< P u l s e >

or

T o n e / P u l s e  
< T o n e >

- . Press the center of the Data Dial to accept.

#### 5. LIU (Line In Use) Enable/Disable Programming

You may program the LIU detection function enable or disable. Default the LIU function is enable.

- . Standby, press [PROGRAM]
- . Rotate the Data Dial to select this item.

L I U D e t e c t  
O n

or

|                                                 |
|-------------------------------------------------|
| <b>L I U     D e t e c t</b><br><b>   O f f</b> |
|-------------------------------------------------|

1. LIU Detect :     You are programming the LIU function On/Off.
2. On/Off :        The current setting is On/Off.

- . Press the center of the Data Dial to select this option
- . Rotate the dial to select from the LIU function On/Off status. The LCD will display:

|                                                        |
|--------------------------------------------------------|
| <b>L I U     D e t e c t</b><br><b>&lt; O f f &gt;</b> |
|--------------------------------------------------------|

or

|                                                      |
|------------------------------------------------------|
| <b>L I U     D e t e c t</b><br><b>&lt; O n &gt;</b> |
|------------------------------------------------------|

1. LIU Detect :     You are programming the LIU function On/Off.
2. Off/On :        Disable/Enable LIU function.

- . Press the center of the Data Dial to accept.

## 6. Line Select Enable/Disable Programming

You may program the Auto Line Select function enable or disable. Default the function is disable.  
The user off-hooks the handset, the ringing CO line or an idle CO line will be picked up when the function is on.

- . Standby, press [PROGRAM]
- . Rotate the Data Dial to select this item.

|                                                 |
|-------------------------------------------------|
| <b>L i n e     S e l e c t</b><br><b>   O n</b> |
|-------------------------------------------------|

or

|                                                   |
|---------------------------------------------------|
| <b>L i n e     S e l e c t</b><br><b>   O f f</b> |
|---------------------------------------------------|

1. Line Select :     You are programming the Auto Lien Select function On/Off.
2. On/Off :        The current setting is On/Off.

- . Press the center of the Data Dial to select this option
- . Rotate the dial to change the selection. The LCD will display:

|                                                          |
|----------------------------------------------------------|
| <b>L i n e     S e l e c t</b><br><b>&lt; O f f &gt;</b> |
|----------------------------------------------------------|

or

|                                                        |
|--------------------------------------------------------|
| <b>L i n e     S e l e c t</b><br><b>&lt; O n &gt;</b> |
|--------------------------------------------------------|

1. Line Select :     You are programming the Auto Lien Select function On/Off.
2. Off/On :        Disable/Enable Auto answer.

- . Press the center of the Data Dial to accept.

## 7. Privacy Enable/Disable Programming

You may program the Privacy function enable or disable. Default the function is disable.  
The other user can join the conversation easily when you are talking the CO line and this function is off.

- . Standby, press [PROGRAM]
- . Rotate the Data Dial to select this item.

|                                       |
|---------------------------------------|
| <b>P r i v a c y</b><br><b>   O n</b> |
|---------------------------------------|

or

|                      |
|----------------------|
| <b>P r i v a c y</b> |
|----------------------|

**O f f**

1. Privacy : You are programming the Privacy function On/Off.
2. On/Off : The current setting is On/Off.

- . Press the center of the Data Dial to select this option
- . Rotate the dial to change the selection. The LCD will display:

**P r i v a c y**  
**< O f f >**

or

**P r i v a c y**  
**< O n >**

1. Privacy : You are programming the Privacy function On/Off.
2. Off/On : Disable/Enable Privacy function.

- . Press the center of the Data Dial to accept.

## 8. First Line Select Programming

You may program the First Line Select function. Default the function is L1.

- . Standby, press [PROGRAM]
- . Rotate the Data Dial to select this item.

**F i r s t L i n e**  
**L 1**

or

**F i r s t L i n e**  
**L 2**

1. First Line : You are programming the First Line function.
2. L1/L2 : The current setting is L1/L2.

- . Press the center of the Data Dial to select this option
- . Rotate the dial to change the selection. The LCD will display:

**F i r s t L i n e**  
**< L 2 >**

or

**F i r s t L i n e**  
**< L 1 >**

1. First Line : You are programming the First Line function.
2. Off/On : Disable/Enable CO1 ring.

- . Press the center of the Data Dial to accept.

## 9. Date/Time Programming

You may set the calendar by your base unit. Default is: 00:00AM Jan. 01, 2000

- . Standby, press [PROGRAM]
- . Rotate the Data Dial to select this item.

**Y e a r & D a t e**  
**2 0 0 0 0 1 / 0 1**

- . Press the center of the Data Dial to select this option.
- . Rotate the dial to change the year. The LCD will display:

**Y e a r & D a t e**

|   |   |   |   |   |   |   |   |   |   |   |
|---|---|---|---|---|---|---|---|---|---|---|
| < | 2 | 0 | 0 | 1 | > | 0 | 1 | / | 0 | 1 |
|---|---|---|---|---|---|---|---|---|---|---|

- . Press the center of the Data Dial to select the year.
- . And rotate the dial to select the month option.
- . Press the center of the Data Dial to select this option.
- . Rotate the dial to change the month. The LCD will display:

|   |   |   |   |   |   |   |   |   |   |   |
|---|---|---|---|---|---|---|---|---|---|---|
| Y | e | a | r | & | D | a | t | e |   |   |
| 2 | 0 | 0 | 1 | < | 1 | 2 | > | / | 0 | 1 |

- . Press the center of the Data Dial to select the month.
- . And rotate the dial to select the date option.
- . Press the center of the Data Dial to select this option.
- . Rotate the dial to change the date. The LCD will display:

|   |   |   |   |   |   |   |   |   |   |   |   |
|---|---|---|---|---|---|---|---|---|---|---|---|
| Y | e | a | r | & | D | a | t | e |   |   |   |
| 2 | 0 | 0 | 1 |   | 1 | 0 | / | < | 2 | 5 | > |

- . Press the center of the Data Dial to accept.

Then, rotate the Data Dial to select the time setting.

|   |   |   |   |   |   |   |  |  |  |  |
|---|---|---|---|---|---|---|--|--|--|--|
| T | i | m | e |   |   |   |  |  |  |  |
| 0 | 0 | : | 0 | 0 | A | M |  |  |  |  |

- . Press the center of the Data Dial to select this option.
- . Rotate the dial to change the hour. The LCD will display:

|   |   |   |   |   |   |   |   |   |  |  |
|---|---|---|---|---|---|---|---|---|--|--|
| T | i | m | e |   |   |   |   |   |  |  |
| < | 0 | 3 | > | : | 0 | 0 | P | M |  |  |

- . Press the center of the Data Dial to select the hour. The AM/PM will be changed automatically.
- . And rotate the dial to select the minute option.
- . Press the center of the Data Dial to select this option.
- . Rotate the dial to change the minute. The LCD will display:

|   |   |   |   |   |   |   |   |   |  |  |
|---|---|---|---|---|---|---|---|---|--|--|
| T | i | m | e |   |   |   |   |   |  |  |
| 0 | 3 | : | < | 4 | 5 | > | P | M |  |  |

- . Press the center of the Data Dial to select the minute.

## 10. Hold Reminder Time Programming

Default: 30 seconds.

- . Standby, press [PROGRAM]
- . Rotate the Data Dial to select the Hold Reminder Time programming mode. The LCD will display:

|   |   |   |   |   |   |   |   |   |   |   |
|---|---|---|---|---|---|---|---|---|---|---|
| H | o | l | d |   | R | e | m | i | n | d |
| 3 | 0 | S | e | c | . |   |   |   |   |   |

1. Hold Remind : Hold Reminder Time programming mode
2. 30 Sec. : Programmed Reminder Time.

- . Press the center of the Data Dial to select this option
- . Rotate the dial to select from the Tone and Pulse modes. The LCD will display:

|   |   |   |   |   |   |   |   |   |   |   |
|---|---|---|---|---|---|---|---|---|---|---|
| H | o | l | d |   | R | e | m | i | n | d |
| < | O | f | f | > |   |   |   |   |   |   |

- . Press the center of the Data Dial to accept.

## 11. FLASH Time Programming

You may program the FLASH time duration as your service need.

- . Standby, press [PROGRAM]
- . Rotate the Data Dial to select the FLASH Time programming mode. The LCD will display:

|                               |
|-------------------------------|
| <b>F l a s h      T i m e</b> |
| <b>6 0 0      m s</b>         |

- 1. Flash Time :      Flash time programming mode
- 2. 0.6 ms. :      Programmed FLASH time

- . Press the center of the Data Dial to select this option
- . Rotate the dial to select from the FLASH time: 600/375/275/100ms

|                               |
|-------------------------------|
| <b>F l a s h      T i m e</b> |
| <b>&lt; 2 7 5 &gt; m s</b>    |

- . Press the center of the Data Dial to accept.

Note: When the base unit changes its Flash Time, the other handsets are automatically changed to the same universal Flash time setting.

## 12. Ringer Type Programming

You may select one of the four ringer types sound on your base. Default is the type 1.

- . Standby, press [PROGRAM]
- . Rotate the Data Dial to select the item to set the ring type

|                             |
|-----------------------------|
| <b>R i n g      T y p e</b> |
| <b>1</b>                    |

- 1. Ring Type :      You are programming the ring type.
- 2. 1 :      The ring type is 1.

- . Press the center of the Data Dial to select this option
- . Rotate the dial to select from 4 ring types

|                             |
|-----------------------------|
| <b>R i n g      T y p e</b> |
| <b>&lt; 3 &gt;</b>          |

- . Press the center of the Data Dial to accept.

## 13. Ringer Level Programming

You may select one of the three ringer level sound on your base. Default is the middle.

- . Standby, press [PROGRAM] and rotate the Data Dial to select this item.

|                               |
|-------------------------------|
| <b>R i n g      L e v e l</b> |
| <b>M i d</b>                  |

- 1. Ring Level :      Ringer level.
- 2. Mid :      The old programmed level

- . Press the center of the Data Dial to select this option
- . Rotate the dial to change the selection. For example, if we change to Hi level, the LCD will display:

|                               |
|-------------------------------|
| <b>R i n g      L e v e l</b> |
| <b>&lt; H i &gt;</b>          |



. Press the center of the Data Dial to accept.

## 14. Base Reset programming

You may RESET the handset and clear all the programmed data, all the parameters will back to the default values.

|                             |                        |
|-----------------------------|------------------------|
| - System Security Code:     | Empty                  |
| - CO Ring Assign:           | Both 2 lines will ring |
| - Ring Type:                | Type 1                 |
| - Hold-Reminder Time:       | 30 seconds             |
| - FLASH Time:               | 600ms                  |
| - Tone/Pulse Mode:          | Tone                   |
| - Caller ID Dialing Method: | Smart Dialing          |
| - Caller ID Area Code:      | Empty                  |
| - LIU (Line In Use):        | On                     |
| - Line Select:              | Off                    |
| - Line Privacy:             | Off                    |
| - First Line:               | L1                     |
| - Year/Date/Time:           | 00:00AM Jan. 01, 2000  |
| - Handset Volume:           | Level 1                |
| - Headset Volume:           | Level 2                |
| - Speakerphone Volume:      | Level 3                |
| - Ringer Volume:            | Middle level           |

- . Standby, press [PROGRAM]
- . Rotate the Data Dial to select this item.

|             |       |
|-------------|-------|
| R e s e t ? |       |
| N o         | Y e s |

--- "Reset ?" :        Handset RESET prompt.

. Press Softkey [Yes] , and a confirmation signal to indicate the successful programming. The LCD will display:

**R e s e t !**

. After 15 seconds, the base will re-power on automatically.

Once you want to change the security code, run the above all steps again.

## VI. BASIC OPERATION ( HANDSET UNIT ONLY )

### 1. Standby Mode

The handset will automatically be in the battery saver mode, when the handset in standby mode.

#### 1.1 Handset Link with the "Idle" Base Unit

|                            |
|----------------------------|
| <b>R i n g : L o w</b>     |
| <b>I D : 1 2</b>           |
| <b>&lt; i c o n s &gt;</b> |

- 1."Ring": Ringer volume that may be Low, Mid, Hi or DND.
- 2."ID": Identification Number of the handset.
- 3.<icons>: Icons for the status of CO lines, and battery.

#### 1.2 Handset Link with the "Busy" Base Unit

|                               |
|-------------------------------|
| <b>R i n g : L o w</b>        |
| <b>I D : 1 2      B u s y</b> |
| <b>&lt; i c o n s &gt;</b>    |

- 1."Ring": Ringer volume that may be Low, Mid, Hi or DND.
- 2."ID": Identification Number of the handset.
3. Busy : The voice channels of the Base Unit are busy.
4. <icons>: Icons for the status of CO lines, and battery.

#### 1.3 Handset Can Not Link with the Base Unit

|                                 |
|---------------------------------|
| <b>R i n g : L o w</b>          |
| <b>I D : 1 2      N o S v c</b> |
| <b>&lt; i c o n s &gt;</b>      |

- 1."Ring": Ringer volume that may be Low, Mid, Hi or DND.
- 2."ID": Identification Number of the handset.
3. NoSvc : Handset fails to link with the base unit.
4. <icons>: Icons for the status of CO lines, and battery.

- Note:
1. In this case, the handset maybe have the wrong S.S.C., or if the local power is OFF at the Base Unit, or the handset is out of the system service areas.
  2. If trying to request a service from the 'Busy' base unit which all the paths are in use, you will get a audible warning tone.

### 2. Making Outside Line Call

If trying to request a service from the 'busy' base unit which all the paths are in use, you will get an audible warning tone and LCD will show as follows:

|                               |
|-------------------------------|
| <b>R i n g : L o w</b>        |
| <b>I D : 1 2      B u s y</b> |
| <b>&lt; i c o n s &gt;</b>    |

- 1."Ring": Ringer volume that may be Low, Mid, Hi or DND.

- 2."ID" : Identification Number of the handset.
- 3. Busy : The voice channels of the Base Unit are busy.
- 4. <icons>: Icons for the status of CO lines, and battery.

## 2.1 Making An Outgoing Call by Manual Dialing

- . Standby
- . Press an available [ Lx ], where x = 1/2. For example, press [L2]. The LCD displays:

|               |   |  |  |  |  |  |  |   |   |   |   |   |
|---------------|---|--|--|--|--|--|--|---|---|---|---|---|
| L             | 2 |  |  |  |  |  |  | m | m | : | s | s |
| < I c o n s > |   |  |  |  |  |  |  |   |   |   |   |   |

- 1. L2 : The CO line number you are using.
- 1. mm:ss : Talk time, count by second
- 2. <icons> : Icons for the status of CO lines, and battery.

- . Enter the telephone number, for example: "035775141, [PAUSE] "

|               |   |   |   |   |   |   |   |   |   |   |   |   |
|---------------|---|---|---|---|---|---|---|---|---|---|---|---|
| L             | 2 |   |   |   |   |   |   | m | m | : | s | s |
| 0             | 3 | 5 | 7 | 7 | 5 | 1 | 4 | 1 | P |   |   |   |
| < I c o n s > |   |   |   |   |   |   |   |   |   |   |   |   |

- 1. 035775141P : Dialed digits, - cursor for next digit
- 2. L2 : The CO line number you are using.
- 3. mm:ss : Talk time, count by second
- 4. <icons> : Icons for the status of CO lines, and battery.

Then, enter "2581" and some leading digits will be shifted away. The LCD displays:

|               |   |   |   |   |   |   |   |   |   |   |   |   |
|---------------|---|---|---|---|---|---|---|---|---|---|---|---|
| L             | 2 |   |   |   |   |   |   | m | m | : | s | s |
|               | 5 | 1 | 4 | 1 | P | 2 | 5 | 8 | 1 |   |   |   |
| < I c o n s > |   |   |   |   |   |   |   |   |   |   |   |   |

--- The symbol " " means that some leading digits are shifted away.

## 2.2 End An Outgoing Call

- . On line, and the conversation is over, the LCD will display: (outgoing call)

|               |   |   |   |   |   |   |   |   |   |   |   |   |
|---------------|---|---|---|---|---|---|---|---|---|---|---|---|
| L             | 2 |   |   |   |   |   |   | m | m | : | s | s |
|               | 5 | 1 | 4 | 1 | P | 2 | 5 | 8 | 1 |   |   |   |
| < i c o n s > |   |   |   |   |   |   |   |   |   |   |   |   |

- . Press [OFF] to release the call, or put the handset to the charger to release the call automatically.

|               |   |   |   |   |   |   |   |  |  |  |  |  |
|---------------|---|---|---|---|---|---|---|--|--|--|--|--|
| R             | i | n | g | : | L | o | w |  |  |  |  |  |
| I             | D | : | 1 | 2 |   |   |   |  |  |  |  |  |
| < i c o n s > |   |   |   |   |   |   |   |  |  |  |  |  |

- 1."Ring": Ringer volume that may be Low, Mid, Hi or DND.
- 2."ID" : Identification Number of the handset.
- 3. <icons>: Icons for the status of CO lines, and battery.

## 3. Answering Call

You may press any one of the digit keys [1/2/3/4/5/6/7/8/9/0/\*/#] to pick up the ringing call, and the answer priority is Ringing Intercom Call, Transfer Calls, Hold Recall Calls, Ringing CO Line Calls. But, you may override the priority, by press the [Lx] or [INT] directly.

- . Handset in the standby mode when the handset rings,
- . Press [ any one of the digit ] key, or you may press the ringing [ Lx ]

to pick up the CO ringing line, the LCD will display  
(For example, if you pick up Line 2)

|                            |                  |
|----------------------------|------------------|
| <b>L 2</b>                 | <b>m m : s s</b> |
| <b>&lt; i c o n s &gt;</b> |                  |

. If you want to release the call, press [OFF]. The LCD will return to the idle status.:

|                            |
|----------------------------|
| <b>R i n g : L o w</b>     |
| <b>I D : 1 2</b>           |
| <b>&lt; i c o n s &gt;</b> |

#### 4. Last Number Redial (LNR)

##### 4.1 Making An Outgoing Call by LNR

.Standby :

. Press an available [ Lx ], where x = 1/2.

For example, if you press [L2], the LCD will display:

|                            |                  |
|----------------------------|------------------|
| <b>L 2</b>                 | <b>m m : s s</b> |
| <b>&lt; i c o n s &gt;</b> |                  |

. Press [RDL] to redial the last dialed number. The LCD will display:

|                            |                  |
|----------------------------|------------------|
| <b>L 2</b>                 | <b>m m : s s</b> |
| <b>0 3 5 7 7 5 1 4 1</b>   |                  |
| <b>&lt; i c o n s &gt;</b> |                  |

1. 035775141 : Last dialed digits, - cursor for next digit
2. L2 : The CO line number you are using.
3. mm:ss : Talk time, count by second
4. <icons> : Icons for the status of CO lines, and battery.

##### 4.2 Making An Outgoing Call by LNR with Pre-Dialing

. Standby

. Press [RDL] and the LCD displays:

|                            |
|----------------------------|
| <b>L N R</b>               |
| <b>0 3 5 7 7 5 1 4 1</b>   |
| <b>&lt; i c o n s &gt;</b> |

1. LNR : LNR review mode prompt.
2. 035775141 : Last Number Redial digits.
3. <icons> : Icons for the status of CO lines, and battery.

After Last dialing number reviewed, and you want to dial the number

. Press an available [ Lx ], where x = 1/2, handset will automatically pick up an idle CO line and dial out the number as display on the LCD :

|                            |                  |
|----------------------------|------------------|
| <b>L 1</b>                 | <b>m m : s s</b> |
| <b>0 3 5 7 7 5 1 4 1</b>   |                  |
| <b>&lt; i c o n s &gt;</b> |                  |

1. L1 : The CO line number you are using.
2. mm:ss : Talk time, count by second
3. 035775141 : Last Number Redial digits.
4. <icons> : Icons for the status of CO lines, and battery.

## 5. Placing an Outside Call on Hold

### 5.1 Placing an Outside Call on Hold

. On line

|                            |                  |
|----------------------------|------------------|
| <b>L 1</b>                 | <b>m m : s s</b> |
| <b>0 3 5 7 7 5 1 4 1</b>   |                  |
| <b>&lt; i c o n s &gt;</b> |                  |

or

|                            |                  |
|----------------------------|------------------|
| <b>L 1</b>                 | <b>m m : s s</b> |
| <b>&lt; i c o n s &gt;</b> |                  |

(incoming call)

1. L1 : The CO line number you are using.
2. mm:ss : Talk time, count by second
3. 035775141 : Dialed digits, - cursor for next digit.
4. <icons>: Icons for the status of CO lines, and battery.

. Press [HLD], and the LCD will display:

|                            |            |
|----------------------------|------------|
| <b>T R N F</b>             | <b>T o</b> |
| <b>I D : 1 2</b>           |            |
| <b>&lt; i c o n s &gt;</b> |            |

1. TRNF To : Transfer call prompt
2. (blank) : Waiting the station number
3. "ID" : Identification Number of the handset.
4. <icons>: Icons for the status of CO lines, and battery.

. After the 10 seconds time-out, the display will revert to the final idle display if nothing is dialed.

|                            |
|----------------------------|
| <b>R i n g : L o w</b>     |
| <b>I D : 1 2</b>           |
| <b>&lt; i c o n s &gt;</b> |

1. "Ring": Ringer volume that may be Low, Mid, Hi or DND.
2. "ID" : Identification Number of the handset.
3. <icons>: Icons for the status of CO lines, and battery.

### 5.2 Hold Reminder

. If the Hold Reminder Time is not disabled, when you held a CO line over a programmed period of time, a triple beep will be heard to remind you that the line is still held. The related icons will be changed.

### 5.3 Hold Recall Ring

. If the held CO line is not picked up for 3 minutes, all handset units will start to ring (i.e., Recall Ring) to remind all of the users. The related icons will be changed.

. Press [ any one of the digit ] key, or you may press the ringing [ Lx ] to pick up the CO hold recall ringing line

## 6. Retrieve a Line on Hold

. A CO line being held

. Press the [ Lx ] held line key, where x = 1/2, the LCD will display

|            |                  |
|------------|------------------|
| <b>L 2</b> | <b>m m : s s</b> |
|------------|------------------|

|               |
|---------------|
| < i c o n s > |
|---------------|

1. L2 : The CO line number you are using.
2. mm:ss : Talk time, count by second
3. <icons> : Icons for the status of CO lines, and battery.

Note: In this wireless system, the held CO line will be released when the held line isn't picked up within 5 minutes.

## 7. Making an Intercom Call

- . Standby
- . Press the [ INT ] key. The LCD will display

|               |
|---------------|
| I C M T o     |
| I D : 1 2     |
| < i c o n s > |

1. ICM To : Intercom call prompt, and wait for user to enter the called party ID number
2. "ID" : Identification Number of the handset.
3. <icons>: Icons for the status of CO lines, and battery.

- . Dial desired intercom number, say station 12 calls station 15, the LCD will display

|               |
|---------------|
| I C M T o 1 5 |
| I D : 1 2     |
| < i c o n s > |

1. ICM To 15: Intercom call station 15
2. "ID" : Identification Number of the handset.
3. <icons>: Icons for the status of CO lines, and battery.

### 7.1 If the Called Party is Idle and Access-able

Note: Access-able means the called party is idle and linked with the base unit.

The calling party station 12 will display :

|                   |
|-------------------|
| I C M T o 1 5     |
| I D : 1 2 R i n g |
| < i c o n s >     |

1. ICM To 15: Intercom call station 15
2. "ID" : Identification Number of the handset.
3. Ring : Intercom ringing prompt
4. <icons>: Icons for the status of CO lines, and battery.

The called party station 15 will get an intercom ring and display :

|                   |
|-------------------|
| I C M B y 1 2     |
| I D : 1 5 R i n g |
| < i c o n s >     |

1. ICM By 12: Intercom call from station 12
2. "ID" : Identification Number of the handset.
3. Ring : Intercom ringing prompt
4. <icons>: Icons for the status of CO lines, and battery.

### 7.2 If the Called Party is Busy and Access-able

The calling party station 12 will display :





## 8. Answering an Incoming Intercom Call

. Handset is ringing.

|                            |                |            |
|----------------------------|----------------|------------|
| <b>I C M</b>               | <b>B y</b>     | <b>1 2</b> |
| <b>I D : 1 5</b>           | <b>R i n g</b> |            |
| <b>&lt; i c o n s &gt;</b> |                |            |

1. ICM By 12: Intercom call from station 12
2. "ID" : Identification Number of the handset.
3. Ring : Intercom ringing prompt
4. <icons>: Icons for the status of CO lines, and battery.

. Press [ any one of the digit ] key, or you may press the [ INT ] to pick up the ringing intercom call, the LCD will display:

|                            |                |            |
|----------------------------|----------------|------------|
| <b>I C M</b>               | <b>B y</b>     | <b>1 2</b> |
| <b>I D : 1 5</b>           | <b>T a l k</b> |            |
| <b>&lt; i c o n s &gt;</b> |                |            |

1. ICM By 12: Intercom call from station 12
2. "ID" : Identification Number of the handset.
3. Talk : Intercom talk mode prompt
4. <icons>: Icons for the status of CO lines, and battery.

. And the calling party station 12 shows

|                            |                |            |
|----------------------------|----------------|------------|
| <b>I C M</b>               | <b>T o</b>     | <b>1 5</b> |
| <b>I D : 1 2</b>           | <b>T a l k</b> |            |
| <b>&lt; i c o n s &gt;</b> |                |            |

1. ICM To 15 Intercom called party ID=15
2. "ID" : Identification Number of the handset.
3. Talk : Intercom talk mode prompt
4. <icons>: Icons for the status of CO lines, and battery.

When conversation is over. Press [OFF] to release the call

## 9. Conference Call

You may make a three-way conference call.

### 9.1 Two CO Lines Conference Call

. On CO line

|                            |                  |
|----------------------------|------------------|
| <b>L 2</b>                 | <b>m m : s s</b> |
| <b>0 3 5 7 7 5 1 4 1</b>   |                  |
| <b>&lt; i c o n s &gt;</b> |                  |

1. 035775141 : Dialed digits, - cursor for next digit
2. L2 : The CO line number you are using.
3. mm:ss : Talk time, count by second
4. <icons> : Icons for the status of CO lines, and battery.

. Press [HLD] and make the second CO line call

|                            |                  |
|----------------------------|------------------|
| <b>L 1</b>                 | <b>m m : s s</b> |
| <b>0 3 5 7 6 5 4 3 2</b>   |                  |
| <b>&lt; i c o n s &gt;</b> |                  |

1. 035765432 : Dialed digits, - cursor for next digit
2. L1 : Another CO line number you are using.
3. mm:ss : Talk time, count by second
4. <icons> : Icons for the status of CO lines, and battery.

. Press [FCN] and press [CONF] (same as [\*] ) to bridge the two CO lines

|   |   |   |   |   |   |   |   |   |   |   |
|---|---|---|---|---|---|---|---|---|---|---|
| L | 1 | , | L | 2 |   | m | m | : | s | s |
| 0 | 3 | 5 | 7 | 6 | 5 | 4 | 3 | 2 |   |   |
|   |   |   | < | i | c | o | n | s | > |   |

1. 035765432 : Dialed digits, - cursor for next digit
2. L1,L2 : You are using both CO lines.
3. mm:ss : Talk time, count by second

## 10. Transferring CO Call

### 10.1 Transferring a Call

. On line

|   |   |   |   |   |   |   |   |   |   |   |
|---|---|---|---|---|---|---|---|---|---|---|
| L | 1 |   |   |   |   | m | m | : | s | s |
| 0 | 3 | 5 | 7 | 7 | 5 | 1 | 4 | 1 |   |   |
|   |   |   | < | i | c | o | n | s | > |   |

or

|   |   |  |   |   |   |   |   |   |   |   |
|---|---|--|---|---|---|---|---|---|---|---|
| L | 1 |  |   |   |   | m | m | : | s | s |
|   |   |  |   |   |   |   |   |   |   |   |
|   |   |  | < | i | c | o | n | s | > |   |

(incoming call)

1. L1 : The CO line number you are using.
2. mm:ss : Talk time, count by second
- 3.035775141 : Dialed digits, - cursor for next digit.
4. <icons>: Icons for the status of CO lines, and battery.

. Press [HLD], and the LCD will display:

|   |   |   |   |   |   |   |   |   |   |  |
|---|---|---|---|---|---|---|---|---|---|--|
| T | R | N | F |   | T | o |   |   |   |  |
| I | D | : | 1 | 2 |   |   |   |   |   |  |
|   |   |   | < | i | c | o | n | s | > |  |

1. TRNF To : Transfer call prompt
2. (blank) : Waiting the station number
- 3."ID" : Identification Number of the handset.

. After the 10 seconds time-out, the display will revert to the final idle display if nothing is dialed. If you enter the transfer station number in time, say station 12 transfer a call to station 15.

|   |   |   |   |   |   |   |   |   |   |  |
|---|---|---|---|---|---|---|---|---|---|--|
| T | R | N | F |   | T | o |   | 1 | 5 |  |
| I | D | : | 1 | 2 |   |   |   |   |   |  |
|   |   |   | < | i | c | o | n | s | > |  |

1. TRNF To : Transfer call prompt
2. 15 : The transfer station number
- 3."ID" : Identification Number of the handset.
4. <icons>: Icons for the status of CO lines, and battery.

. A transfer ring will be heard at station 15. The icon below the LCD will indicate the transferred line.

Note: You will hear a call waiting triple beep when you are on the other line and receive a transfer ring.

### 10.2 Transferring Recall :

. If the transferred call didn't answer over 3 minute, the system will recall to all the handsets to remind there is a line has been unanswered and in holding state for too long. The icon below the LCD will indicate the transferred line.

. Press [ any one of the digit ] key, or you may press the recalling [ Lx ] to pick up the CO ringing line. The LCD will display:

|               |   |  |  |  |  |  |   |   |   |   |   |
|---------------|---|--|--|--|--|--|---|---|---|---|---|
| L             | 1 |  |  |  |  |  | m | m | : | s | s |
| < i c o n s > |   |  |  |  |  |  |   |   |   |   |   |

1. L1 : The CO line number you are using.
2. mm:ss : Talk time, count by second
3. <icons>: Icons for the status of CO lines, and battery.

## 11. FLASH Function

You may press the FLASH function key instead of pressing the hook switch to activate services such as call waiting, 3-way calling, etc.

. On line

|               |   |   |   |   |   |   |   |   |   |   |   |   |
|---------------|---|---|---|---|---|---|---|---|---|---|---|---|
| L             | 1 |   |   |   |   |   |   | m | m | : | s | s |
| 0             | 3 | 5 | 7 | 7 | 5 | 1 | 4 | 1 |   |   |   |   |
| < i c o n s > |   |   |   |   |   |   |   |   |   |   |   |   |

1. L1 : The CO line number you are using.
2. 035775141 : Dialed digits, - cursor for next digit
3. mm:ss : Talk time, count by second
4. <icons>: Icons for the status of CO lines, and battery.

. Press [FLS] to make a hook switch to the line. The LCD will display:

|               |   |  |  |  |  |  |  |   |   |   |   |   |
|---------------|---|--|--|--|--|--|--|---|---|---|---|---|
| L             | 1 |  |  |  |  |  |  | m | m | : | s | s |
| < i c o n s > |   |  |  |  |  |  |  |   |   |   |   |   |

1. L1 : The CO line number you are using.
2. (Blank) : Blank the digit field, wait the new digits
3. mm:ss : Talk time, count by second
4. <icons>: Icons for the status of CO lines, and battery.

. Enter new phone number, or service code

|               |   |   |   |   |   |   |   |   |   |   |   |   |
|---------------|---|---|---|---|---|---|---|---|---|---|---|---|
| L             | 1 |   |   |   |   |   |   | m | m | : | s | s |
| 0             | 3 | 5 | 7 | 6 | 5 | 4 | 3 | 2 |   |   |   |   |
| < i c o n s > |   |   |   |   |   |   |   |   |   |   |   |   |

1. L1 : The CO line number you are using.
2. 035765432 : Dialed digits, - cursor for next digit
3. mm:ss : Talk time, count by second
4. <icons>: Icons for the status of CO lines, and battery.

## 12. PAUSE Function

You may use the PAUSE function to make a dialing delay between digits during a call, or program the PAUSE in the speed dialing numbers for certain banking and long distance service. Each time you press PAUSE key, about a 2 seconds delay occurs in the dialing sequence. You may press more than one PAUSE to get a longer delay for you need.

. On line, and dialed some digits

|   |   |   |   |   |   |  |  |   |   |   |   |   |
|---|---|---|---|---|---|--|--|---|---|---|---|---|
| L | 1 |   |   |   |   |  |  | m | m | : | s | s |
| 7 | 7 | 5 | 1 | 4 | 1 |  |  |   |   |   |   |   |

|               |
|---------------|
| < i c o n s > |
|---------------|

1. L1 : The CO line number you are using.
2. 775141 : Dialed digits, - cursor for next digit
3. mm:ss : Talk time, count by second

. Press [FCN]. The LCD will display

|               |           |
|---------------|-----------|
| L 1           | m m : s s |
| 7 7 5 1 4 1   |           |
| < i c o n s > |           |

1. L1 : The CO line number you are using.
2. 775141 : Dialed digits, - cursor for next digit
3. mm:ss : Talk time, count by second
4. <icons>: Icons for the status of CO lines, and battery.
5. " " : FCN key prompt

. Press [PAUSE] ( same as [7] ) to insert time delay between digits. The LCD will display:

|               |           |
|---------------|-----------|
| L 1           | m m : s s |
| 7 7 5 1 4 1 P |           |
| < i c o n s > |           |

1. L1 : The CO line number you are using.
2. 775141P : Dialed digits, - cursor for next digit
3. "P" : Pause key
4. mm:ss : Talk time, count by second
5. <icons>: Icons for the status of CO lines, and battery.

. Enter the rest digits. The LCD will display:

|                   |           |
|-------------------|-----------|
| L 1               | m m : s s |
| 7 7 5 1 4 1 P 2 5 |           |
| < i c o n s >     |           |

1. L1 : The CO line number you are using.
2. 775141P 25: Dialed digits, - cursor for next digit
3. "P" : Pause key
4. mm:ss : Talk time, count by second

### 13. TONE Function

If you have pulse service and wish to access a computer or calling service that use tone. On line, and dialed digits in pulse. The LCD will display

|               |           |
|---------------|-----------|
| L 1           | m m : s s |
| 7 7 5 1 4 1   |           |
| < i c o n s > |           |

1. L1 : The CO line number you are using.
2. 775141 : Dialed digits, - cursor for next digit
3. mm:ss : Talk time, count by second
4. <icons>: Icons for the status of CO lines, and battery.

. Press [TONE] (same as [\*]) to change the dialing mode to TONE mode. And then enter the rest digits will be dialed as TONE signal.

|                   |           |
|-------------------|-----------|
| L 1               | m m : s s |
| 7 7 5 1 4 1 * 2 5 |           |
| < i c o n s >     |           |

1. L1 : The CO line number you are using.
2. 775141\*25 : Dialed digits, - cursor for next digit

3. mm:ss : Talk time, count by second

. When you release the line, the dial mode will change to the pulse mode again automatically.

## 14. DND Function

The Do Not Disturb feature is useful to temporarily prevent interruptions during meetings or telephone conversations. When you activate the DND feature, you will not hear incoming call rings.

### 14.1 Setting DND Mode

- . Standby.
- . Press [FCN], and then press [DND] (same as [4]) to activate DND

|                            |
|----------------------------|
| <b>R i n g : D N D</b>     |
| <b>I D : 1 2</b>           |
| <b>&lt; i c o n s &gt;</b> |

- 1."Ring": Ringer volume that may be Low, Mid, Hi or DND.
- 2."ID" : Identification Number of the handset.

### 14.2 Canceling the DND Mode.

- . Press [FCN] and then press [DND] ( same as [4] ) again to disable DND mode.

|                            |
|----------------------------|
| <b>R i n g : L o w</b>     |
| <b>I D : 1 2</b>           |
| <b>&lt; i c o n s &gt;</b> |

- 1."Ring": Ringer volume that may be Low, Mid, Hi or DND.
- 2."ID" : Identification Number of the handset.
- 3.<icons>: Icons for the status of CO lines, and battery.

## 15. MUTE Function

The Mute feature turns off the microphone so the person at the other phone cannot hear you. The Mute feature automatically cancels when you hang up, change lines.

- . On line
- . Press and **HOLD** the [MUTE] key for privacy, the LCD will display

|                            |
|----------------------------|
| <b>M u t e m m : s s</b>   |
| <b>7 7 5 1 4 1 * 2 5</b>   |
| <b>&lt; i c o n s &gt;</b> |

- 1. Mute : Mute function activate
- 2. 775141\*25 : Dialed digits, - cursor for next digit
- 3.<icons>: Icons for the status of CO lines, and battery.

- . To resume your conversation, release the [MUTE] key.

|                            |
|----------------------------|
| <b>L 1 m m : s s</b>       |
| <b>7 7 5 1 4 1 * 2 5</b>   |
| <b>&lt; i c o n s &gt;</b> |

- 1. L1 : The CO line number you are using.
- 2. 775141\*25 : Dialed digits, - cursor for next digit
- 3. mm:ss : Talk time, count by second
- 4.<icons>: Icons for the status of CO lines, and battery.

## 16. Out Of Range Warning

The LCD will display the "Out Of Range" and a double beep warning when the handset is too far from the base unit. You have to move closer to the base unit for clear conversation.

. On line

|               |                  |
|---------------|------------------|
| <b>L 1</b>    | <b>m m : s s</b> |
| 7 7 5 1 4 1 * | 2 5              |
| < i c o n s > |                  |

1. L1 : The CO line number you are using.
2. 775141\*25 : Dialed digits, - cursor for next digit
3. mm:ss : Talk time, count by second

. Walking out from base unit service area

|                            |
|----------------------------|
| <b>O u t O f R a n g e</b> |
| 7 7 5 1 4 1 * 2 5          |
| < i c o n s >              |

1. Out Of Range --- Out Of Range warning prompt

### 16.1 Handset Walks Back to the Base Unit

If the user walks back to the base unit after the he/she receive the Out Of Range warning, the handset will stop the O.O.R. warning.

|               |                  |
|---------------|------------------|
| <b>L 1</b>    | <b>m m : s s</b> |
| 7 7 5 1 4 1 * | 2 5              |
| < i c o n s > |                  |

1. L1 : The CO line number you are using.
2. 775141\*25 : Dialed digits, - cursor for next digit
3. mm:ss : Talk time, count by second

### 16.2 Handset Keeps Walking Out From the Base Unit

If the user keeps walking away from the base unit service area, once the system lose the signal for a period of time, say 10 seconds, then the base will hold the call.

. Either the handset links with the base unit,

|               |                  |
|---------------|------------------|
| <b>L 1</b>    | <b>m m : s s</b> |
| < i c o n s > |                  |

1. L1 : The CO line number you are using.
2. (Blank) : Blank the digit field, wait the new digits
3. mm:ss : Talk time, count by second
4. <icons>: Icons for the status of CO lines, and battery.

. Or the handset loses the link with the system.

|                            |
|----------------------------|
| <b>R i n g : L o w</b>     |
| <b>I D : 1 2 N o S v c</b> |
| < i c o n s >              |

1. "Ring": Ringer volume that may be Low, Mid, Hi or DND.
2. "ID" : Identification Number of the handset.
3. NoSvc : Handset fails to link with any base unit
4. <icons>: Icons for the status of CO lines, and battery.

### **17. Battery Low Warning**

The warning indicator appears when the battery of the handset becomes weak. If you are on a call when battery low, you will hear the double beep, end the conversation as soon as possible. Otherwise, you may lose the call.  
The icon will warning you about the battery low status.

### **18. Complete with Headset**

The Headset unit frees your hands so you can keep working.  
Plug the headset into the headset jack. The voice will be switched to the headset unit automatically.  
Plug out the headset when you want to talk by handset. The voice will be switched to the handset automatically.

### **19. Volume Control**

There are 5 receiver volume levels (Level 1,2,3,4,5) on the cordless handset.  
The default level for handset volume is level 1.  
The default level for headset volume is level 2.

- . Talk mode
- . Press [▲]/[▼] to select a desired volume level.

A warning beep will be heard when the volume is set at the maximum (Level 5) and minimum level (Level 1)

## VII. BASIC OPERATION (MHS-2 BASE UNIT ONLY)

### 1. Standby Mode

Normally, the base unit will automatically be in the standby mode. The user can use the base unit to make a call. Or programming the database, or accessing the directory,... etc.

Sometimes, all the 4 RF channels are occupied by the handset, the base unit will display "System Busy" for the users.

|                          |
|--------------------------|
| S y s t e m      B u s y |
|--------------------------|

### 2. Making Outside Line Call

If trying to request a service from the 'busy' base unit which all the paths are in use, you will get an audible warning tone and LCD will show as follows:

|                          |
|--------------------------|
| S y s t e m      B u s y |
|--------------------------|

#### 2.1 Making An Outgoing Call

- . Standby,
  - . Press an available [ Lx ], where x = 1/2. For example, press [L2].
- OR
- . Press the [Headset] or [SPEAKER].
- OR
- . Lift the handset to pick up the CO line. The LCD displays:

|                                              |
|----------------------------------------------|
| S p e a k e r                      m m : s s |
|----------------------------------------------|

OR

|                                              |
|----------------------------------------------|
| H e a d s e t                      m m : s s |
|----------------------------------------------|

OR

|                                              |
|----------------------------------------------|
| H a n d s e t                      m m : s s |
|----------------------------------------------|

- . Enter the telephone number, for example: "035775141 "

|                                              |
|----------------------------------------------|
| 0 3 5 7 7 5 1 4 1                            |
| S p e a k e r                      m m : s s |

### 3. Answering Call

You may press [SPEAKER] or [HEADSET] or lift the handset to pick up the ringing call, and the answer priority is Ringing Intercom Call, Transfer Calls, Hold Recall Calls, Ringing CO Line Calls. (In this case, the AUTO ANSWER is ON) But, you may override the priority, by press the [Lx] or [INT] directly. The LCD displays:

|                                              |
|----------------------------------------------|
| S p e a k e r                      m m : s s |
|----------------------------------------------|

OR



OR

|   |   |   |   |   |   |   |  |   |   |   |   |   |
|---|---|---|---|---|---|---|--|---|---|---|---|---|
| H | e | a | d | s | e | t |  | m | m | : | s | s |
|---|---|---|---|---|---|---|--|---|---|---|---|---|

|   |   |   |   |   |   |   |  |   |   |   |   |   |
|---|---|---|---|---|---|---|--|---|---|---|---|---|
| H | a | n | d | s | e | t |  | m | m | : | s | s |
|---|---|---|---|---|---|---|--|---|---|---|---|---|

#### 4. End An Outgoing Call

- . On line, and the conversation is over,
- . Just hang up the handset or press [SPEAKER] or [HEADSET] to release the call.

#### 5. Last Number Redial (LNR)

##### 5.1 Making An Outgoing Call by LNR

- . Pick up a CO line
- . Press [REDIAL] to redial the last dialed number. The LCD will display:

|   |   |   |   |   |   |   |   |   |   |   |   |   |   |
|---|---|---|---|---|---|---|---|---|---|---|---|---|---|
| 0 | 3 | 5 | 7 | 7 | 5 | 1 | 4 | 1 |   |   |   |   |   |
| S | p | e | a | k | e | r |   |   | m | m | : | s | s |

##### 5.2 Making An Outgoing Call by LNR with Pre-Dialing

- . Press [REDIAL] and the LCD displays:

|   |   |   |   |   |   |   |   |   |  |  |  |  |
|---|---|---|---|---|---|---|---|---|--|--|--|--|
| L | N | R |   |   |   |   |   |   |  |  |  |  |
| 0 | 3 | 5 | 7 | 7 | 5 | 1 | 4 | 1 |  |  |  |  |

After Last dialing number reviewed, and you want to dial the number

- . Press an available [ Lx ], where x = 1/2, handset will automatically pick up an idle CO line and dial out the number as display on the LCD :

|   |   |   |   |   |   |   |   |   |   |   |   |   |   |
|---|---|---|---|---|---|---|---|---|---|---|---|---|---|
| 0 | 3 | 5 | 7 | 7 | 5 | 1 | 4 | 1 |   |   |   |   |   |
| S | p | e | a | k | e | r |   |   | m | m | : | s | s |

#### 6. Placing an Outside Call on Hold

##### 6.1 Placing an Outside Call on Hold

- . On line

|   |   |   |   |   |   |   |   |   |   |   |   |   |   |
|---|---|---|---|---|---|---|---|---|---|---|---|---|---|
| 0 | 3 | 5 | 7 | 7 | 5 | 1 | 4 | 1 |   |   |   |   |   |
| S | p | e | a | k | e | r |   |   | m | m | : | s | s |

- . Press [HOLD], and the LCD will display:

|   |   |   |   |  |   |   |  |  |  |  |  |  |
|---|---|---|---|--|---|---|--|--|--|--|--|--|
| T | R | N | F |  | T | o |  |  |  |  |  |  |
|---|---|---|---|--|---|---|--|--|--|--|--|--|

1. TRNF To :      Transfer call prompt
2. (blank) :      Waiting the station number

- . After the 10 seconds time-out, the display will revert to the final idle display if nothing is dialed.

## 6.2 Hold Reminder

. If the Hold Reminder Time is not disabled, when you held a CO line over a programmed period of time, a triple beep will be heard to remind you that the line is still held. The related icons will be changed.

## 6.3 Hold Recall Ring

. If the held CO line is not picked up for 3 minutes, all handset units will start to ring (i.e., Recall Ring) to remind all of the users. The related icons will be changed.

. Press the ringing [ Lx ] to pick up the CO hold recall ringing line

## 7. Retrieve a Line on Hold

. A CO line being held

. Press the [ Lx ] held line key, where  $x = 1/2$ , the LCD will display

|   |   |   |   |   |   |   |  |   |   |   |   |   |
|---|---|---|---|---|---|---|--|---|---|---|---|---|
| S | p | e | a | k | e | r |  | m | m | : | s | s |
|---|---|---|---|---|---|---|--|---|---|---|---|---|

Note: In this wireless system, the held CO line will be released when the held line isn't picked up within 5 minutes.

## 8. Page All Handsets

. Press the [PAGE] key. The LCD will display

|   |   |   |   |   |   |   |  |   |   |   |
|---|---|---|---|---|---|---|--|---|---|---|
| P | a | g | e | A | l | l |  | I | C | M |
|---|---|---|---|---|---|---|--|---|---|---|

. Press the Softkey [PageAll] to ring all handsets. All handset will ring 15 seconds.

## 9. Making an Intercom Call

. Press the [PAGE] key. The LCD will display

|   |   |   |   |   |   |   |  |   |   |   |
|---|---|---|---|---|---|---|--|---|---|---|
| P | a | g | e | A | l | l |  | I | C | M |
|---|---|---|---|---|---|---|--|---|---|---|

. Press the Softkey [ICM], the LCD will display

|   |   |   |  |   |   |
|---|---|---|--|---|---|
| I | C | M |  | T | o |
|---|---|---|--|---|---|

1. ICM To : Intercom call prompt, and wait for user to enter the called party ID number

. Dial desired intercom number, say station 12 calls station 15, the LCD will display

|   |   |   |  |   |   |  |   |   |
|---|---|---|--|---|---|--|---|---|
| I | C | M |  | T | o |  | 1 | 5 |
|---|---|---|--|---|---|--|---|---|

### 9.1 If the Called Party is Idle and Access-able

Note: Access-able means the called party is idle and linked with the base unit.

The calling party station 12 will display :

|   |   |   |   |   |   |   |   |   |   |   |
|---|---|---|---|---|---|---|---|---|---|---|
| I | C | M | T | o | 1 | 5 | R | i | n | g |
|---|---|---|---|---|---|---|---|---|---|---|

1. ICM To 15: Intercom call station 15
2. Ring : Intercom ringing prompt

The called party station 15 will get an intercom ring and display :

|   |   |   |   |   |   |   |   |   |   |   |
|---|---|---|---|---|---|---|---|---|---|---|
| I | C | M | B | y | 1 | 2 | R | i | n | g |
|---|---|---|---|---|---|---|---|---|---|---|

1. ICM By 12: Intercom call from station 12
2. Ring : Intercom ringing prompt

## 9.2 If the Called Party is Busy and Access-able

The calling party station 12 will display :

|   |   |   |   |   |   |   |   |   |   |   |
|---|---|---|---|---|---|---|---|---|---|---|
| I | C | M | T | o | 1 | 5 | B | u | s | y |
|---|---|---|---|---|---|---|---|---|---|---|

1. ICM To 15: Intercom call station 15
2. Busy : Called party busy prompt

Note: The called party station 15 will remain UN-changed. and WON'T hear a call waiting triple beep for intercom call.

## 9.3 If the Called Party is in DND (Ringer Off) Mode and Access-able

The calling party station 12 will display :

|   |   |   |   |   |   |   |   |   |   |
|---|---|---|---|---|---|---|---|---|---|
| I | C | M | T | o | 1 | 5 | D | N | D |
|---|---|---|---|---|---|---|---|---|---|

1. ICM To 15: Intercom call station 15
2. DND : Called party DND prompt

The called party station 15 will remain UN-changed.

## 9.4 If the Called Party is UN-Accessible by Intercom Path Busy

The calling party station 12 will display :

|   |   |   |   |   |   |   |   |   |   |   |
|---|---|---|---|---|---|---|---|---|---|---|
| I | C | M | T | o | 1 | 5 | B | u | s | y |
|---|---|---|---|---|---|---|---|---|---|---|

1. ICM To 15: Intercom call station 15.
2. Busy : Called party busy prompt.

The called party station 15 will remain UN-changed.

## 9.5 If the Called Party is an Illegal Number

Note: Illegal means the called party is non-existing or loses the link with this system.

The calling party station 12 will display :

|   |   |   |   |   |   |   |   |   |   |   |   |
|---|---|---|---|---|---|---|---|---|---|---|---|
| I | C | M | T | o | 1 | 5 | N | o | F | n | d |
|---|---|---|---|---|---|---|---|---|---|---|---|

1. ICM To 15: Intercom call station 15.

2. NoFnd : UN-reachable called party prompt

## 10. Answering an Incoming Intercom Call

. Handset is ringing.

|   |   |   |  |   |   |  |   |   |  |   |   |   |   |
|---|---|---|--|---|---|--|---|---|--|---|---|---|---|
| I | C | M |  | B | y |  | 1 | 2 |  | R | i | n | g |
|---|---|---|--|---|---|--|---|---|--|---|---|---|---|

1. ICM By 12: Intercom call from station 12
2. Ring : Intercom ringing prompt

. Press [PAGE/INTERCOM] to pick up the ringing intercom call, the LCD will display:

|   |   |   |  |   |   |  |   |   |  |   |   |   |   |
|---|---|---|--|---|---|--|---|---|--|---|---|---|---|
| I | C | M |  | B | y |  | 1 | 2 |  | T | a | l | k |
|---|---|---|--|---|---|--|---|---|--|---|---|---|---|

1. ICM By 12: Intercom call from station 12
2. Talk : Intercom talk mode prompt

. And the calling party station 12 shows

|   |   |   |  |   |   |  |   |   |  |   |   |   |   |
|---|---|---|--|---|---|--|---|---|--|---|---|---|---|
| I | C | M |  | T | o |  | 1 | 5 |  | T | a | l | k |
|---|---|---|--|---|---|--|---|---|--|---|---|---|---|

1. ICM To 15 Intercom called party ID=15
2. Talk : Intercom talk mode prompt

Note: The row 2 of the LCD will display the talk mode, for example: Handset, Headset or Speakerphone. The LCD will show:

|   |   |   |   |   |   |   |   |   |  |   |   |   |   |
|---|---|---|---|---|---|---|---|---|--|---|---|---|---|
| I | C | M |   | T | o |   | 1 | 5 |  | T | a | l | k |
| S | p | e | a | k | e | r |   |   |  |   |   |   |   |

## 11. Conference Call

You may make a three-way conference call.

### 11.1 Two CO Lines Conference Call

. On CO line

|   |   |   |   |   |   |   |  |   |   |   |   |   |
|---|---|---|---|---|---|---|--|---|---|---|---|---|
| S | p | e | a | k | e | r |  | m | m | : | s | s |
|---|---|---|---|---|---|---|--|---|---|---|---|---|

. Press [HLD] and make the second CO line call

|   |   |   |   |   |   |   |  |   |   |   |   |   |
|---|---|---|---|---|---|---|--|---|---|---|---|---|
| S | p | e | a | k | e | r |  | m | m | : | s | s |
|---|---|---|---|---|---|---|--|---|---|---|---|---|

. Press [CONF] to bridge the two CO lines

|   |   |   |   |   |   |   |  |   |   |   |   |   |
|---|---|---|---|---|---|---|--|---|---|---|---|---|
| S | p | e | a | k | e | r |  | m | m | : | s | s |
|---|---|---|---|---|---|---|--|---|---|---|---|---|

. Both two CO line LEDs will flash the same cadence with the "I-USE" indication.

## 12. Transferring CO Call

### 12.1 Transferring a Call

. On line

|                                              |
|----------------------------------------------|
| 0 3 5 7 7 5 1 4 2                            |
| S p e a k e r                      m m : s s |

. Press [HOLD], and the LCD will display:

|                  |
|------------------|
| T R N F      T o |
|------------------|

1. TRNF To :        Transfer call prompt
2. (blank) :        Waiting the station number
3. "ID" :            Identification Number of the handset.

. After the 10 seconds time-out, the display will revert to the final idle display if nothing is dialed. If you enter the transfer station number in time, say station 12 transfer a call to station 15.

|                           |
|---------------------------|
| T R N F      T o      1 5 |
|---------------------------|

1. TRNF To :        Transfer call prompt
2. 15 :              The transfer station number
3. "ID" :            Identification Number of the handset.

. A transfer ring will be heard at station 15. The icon below the LCD will indicate the transferred line.

Note: You will hear a call waiting triple beep when you are on the other line and receive a transfer ring.

### 12.2 Transferring Recall :

. If the transferred call didn't answer over 3 minute, the system will recall to all the handsets to remind there is a line has been unanswered and in holding state for too long. The icon below the LCD will indicate the transferred line.

. Press [ Lx ] to pick up the CO ringing line. The LCD will display:

|                                              |
|----------------------------------------------|
| S p e a k e r                      m m : s s |
|----------------------------------------------|

## 13. FLASH Function

You may press the FLASH function key instead of pressing the hook switch to activate services such as call waiting, 3-way calling, etc.

. On line

|                                              |
|----------------------------------------------|
| 0 3 5 7 7 5 1 4 1                            |
| S p e a k e r                      m m : s s |

. Press [FLS] to make a hook switch to the line. The LCD will display:

|                                              |
|----------------------------------------------|
| S p e a k e r                      m m : s s |
|----------------------------------------------|

. Enter new phone number, or service code

|   |   |   |   |   |   |   |   |             |
|---|---|---|---|---|---|---|---|-------------|
| 0 | 3 | 5 | 7 | 6 | 5 | 4 | 3 | 2           |
| S | p | e | a | k | e | r | : | 1 m m : s s |

#### 14. PAUSE Function

You may use the PAUSE function to make a dialing delay between digits during programming mode.  
The PAUSE in the speed dialing numbers for certain banking and long distance service.  
Each time you press PAUSE key, about a 2 seconds delay occurs in the dialing sequence.  
You may press more than one PAUSE to get a longer delay for you need.

#### 15. TONE Function

If you have pulse service and wish to access a computer or calling service that use tone.  
On line, and dialed digits in pulse.  
. Press [TONE] (same as [\*]) to change the dialing mode to TONE mode.  
And then enter the rest digits will be dialed as TONE signal.

|   |   |   |   |   |   |   |   |           |
|---|---|---|---|---|---|---|---|-----------|
| 7 | 7 | 5 | 1 | 4 | 1 | * | 2 | 5         |
| S | p | e | a | k | e | r | : | m m : s s |

. When you release the line, the dial mode will change to the pulse mode again automatically.

#### 16. MUTE Function

The Mute feature turns off the microphone so the person at the other phone cannot hear you.  
The Mute feature automatically cancels when you hang up, change lines.

. On line  
. Press [MUTE] key for privacy, the LCD will display

|   |   |   |   |   |   |   |   |           |
|---|---|---|---|---|---|---|---|-----------|
| 7 | 7 | 5 | 1 | 4 | 1 | * | 2 | 5         |
| M | u | t | e | : |   |   |   | m m : s s |

1. Mute : Mute function activate
2. 775141\*25 : Dialed digits, - cursor for next digit

. To resume your conversation, press the [MUTE] key again.

#### 17. Volume Control

There are 7 receiver volume levels (Level 1,2,3,4,5,6,7) on the speakerphone mode. The default level is middle (Level 3).  
There are 3 receiver volume levels (Level 1,2,3,) on the handset/headset mode. The default level is middle (Level 1).

. Talk mode, press [▲]/[▼] to select a desired volume level.

A warning beep will be heard when the volume is set at the maximum and minimum level.

Normally, the LCD will display:

|   |   |   |   |   |   |   |   |   |             |
|---|---|---|---|---|---|---|---|---|-------------|
| 0 | 3 | 5 | 7 | 6 | 5 | 4 | 3 | 2 |             |
| S | p | e | a | k | e | r | M | I | N m m : s s |

Or

|   |   |   |   |   |   |   |   |   |           |
|---|---|---|---|---|---|---|---|---|-----------|
| 0 | 3 | 5 | 7 | 6 | 5 | 4 | 3 | 2 |           |
| S | p | e | a | k | e | r | 2 |   | m m : s s |

Or

|   |   |   |   |   |   |   |   |   |             |
|---|---|---|---|---|---|---|---|---|-------------|
| 0 | 3 | 5 | 7 | 6 | 5 | 4 | 3 | 2 |             |
| S | p | e | a | k | e | r | M | A | X m m : s s |

## VIII. DIRECTORY OPERATION ( HANDSET UNIT ONLY )

The Directory function stores 80 names and phone numbers.

Name: maximum 16 characters.

Number: maximum 30 digits.

### 1. Storing the Information into Directory

. Press [DIR]. The LCD displays

|                            |
|----------------------------|
| <b>D i r e c t o r y</b>   |
| <b>&lt; i c o n s &gt;</b> |

. If the directory is empty, it will display

|                            |
|----------------------------|
| <b>D i r e c t o r y</b>   |
| <b>( E m p t y )</b>       |
| <b>&lt; i c o n s &gt;</b> |

. If the directory is full, it will display

|                            |
|----------------------------|
| <b>D i r e c t o r y</b>   |
| <b>( F u l l )</b>         |
| <b>&lt; i c o n s &gt;</b> |

. Press [PRG] to start to enter the name

|                            |
|----------------------------|
| <b>( N a m e ? )</b>       |
| <b>&lt; i c o n s &gt;</b> |

. Use the dial pad to enter the phone name which you want to save. For example: John Smith

|                            |
|----------------------------|
| <b>J o h n S m i t h</b>   |
| <b>( N a m e ? )</b>       |
| <b>&lt; i c o n s &gt;</b> |

. Press [PRG] to save the name and then to enter the number

|                            |
|----------------------------|
| <b>( N u m b e r ? )</b>   |
| <b>&lt; i c o n s &gt;</b> |

. Use the dial pad to enter the phone number which you want to save. For example: 5775141

|                            |
|----------------------------|
| <b>5 7 7 5 1 4 1</b>       |
| <b>( N u m b e r ? )</b>   |
| <b>&lt; i c o n s &gt;</b> |

. Press [PRG] again to store the name and number into directory, a confirmation beep will be heard.  
The LCD will display:

|                            |
|----------------------------|
| <b>D i r e c t o r y</b>   |
| <b>O K !</b>               |
| <b>&lt; i c o n s &gt;</b> |

1. Directory OK! : Directory programming OK

. User can press the [UP/DOWN] key for the Backward/Forward the cursor.

- . User can use the [FNC]+[DEL] to delete one character or one digit.
- . Repeatedly press the dial pad key that letter or symbols, until the display shows the letter or symbol that you want to save.

|                                        |                                  |                                        |
|----------------------------------------|----------------------------------|----------------------------------------|
| <b>1</b> for , - ' & . ( ) 1           | <b>2</b> for A, B, C, a, b, c, 2 | <b>3</b> for D, E, F, d, e, f, 3       |
| <b>4</b> for G, H, I, g, h, i, 4       | <b>5</b> for J, K, L, j, k, l, 5 | <b>6</b> for M, N, O, m, n, o, 6       |
| <b>7</b> for P, Q, R, S, p, q, r, s, 7 | <b>8</b> for T, U, V, t, u, v, 8 | <b>9</b> for W, X, Y, Z, w, x, y, z, 9 |
| <b>*</b> for *                         | <b>0</b> for 0, "SPACE"          | <b>#</b> for #                         |

## 2. Reviewing the Information from Directory

- . Press [DIR]. The LCD displays

```

D i r e c t o r y
< i c o n s >
    
```

- . Press digit key to find out the leading-letter what you want to find. For instance: "John Smith"

```

J
( # : S e a r c h )
< i c o n s >
    
```

- . Press the [#] to search the "John Smith" The LCD will display

```

J o h n S m i t h
5 7 7 5 1 4 1
< i c o n s >
    
```

- . If no any entry is for leading-letter "J", the LCD will display the nearest entry

```

T o n y S m i t h
5 7 7 1 2 3 4
< i c o n s >
    
```

- . Or, Directly press [▲]/[▼] to find the item to review.

```

J o h n S m i t h
5 7 7 5 1 4 1
< i c o n s >
    
```

## 3. Dialing Information from Directory

- . Press [DIR].
- . Press digit key to find out the leading-letter what you want to find. For instance: "John Smith"

```

J
( # : S e a r c h )
< i c o n s >
    
```

- . Press the [#] to search the "John Smith" The LCD will display

```

J o h n S m i t h
5 7 7 5 1 4 1
< i c o n s >
    
```

- . Or, Directly press [▲]/[▼] to find the item to review.

```

J o h n S m i t h
5 7 7 5 1 4 1
    
```



< i c o n s >

. Press an available [ Lx ], where  $x = 1/2$ , handset will automatically pick up an idle CO line and dial out the number

|   |   |   |   |   |   |   |   |   |   |   |   |
|---|---|---|---|---|---|---|---|---|---|---|---|
| L | 1 |   |   |   |   |   | m | m | : | s | s |
| 7 | 7 | 5 | 1 | 4 | 1 | * | 2 | 5 |   |   |   |
|   |   | < | i | c | o | n | s | > |   |   |   |

1. L1 : The CO line number you are using.
2. 775141\*25 : Dialed digits, - cursor for next digit
3. mm:ss : Talk time, count by second
4. <icons>: Icons for the status of CO lines, and battery.

#### 4. Editing Information from Directory

First, find out the directory message which you want to modify.

. Press [DIR]

. Press digit key to find out the leading-letter what you want to find. For instance: "John Smith"

. Or, Directly press [▲]/[▼] to find the item to edit.

|   |   |   |   |   |   |   |   |   |
|---|---|---|---|---|---|---|---|---|
| J | o | h | n | S | m | i | t | h |
| 5 | 7 | 7 | 5 | 1 | 4 | 1 |   |   |
|   |   |   | < | i | c | o | n | s |
|   |   |   |   |   |   |   | > |   |

. Press [PRG] to start to edit the name

. Use the [UP/DOWN] to backward/forward the cursor, and

. Use the dial pad to enter the new phone name which you want to save. For example: Tony Smith

|   |   |   |   |   |   |   |   |   |
|---|---|---|---|---|---|---|---|---|
| T | o | n | y | S | m | i | t | h |
| ( | N | a | m | e | ? | ) |   |   |
|   |   | < | i | c | o | n | s | > |

. Press [PRG] to save the name and then to edit the number

. Use the [UP/DOWN] to backward/forward the cursor, and

. Use the dial pad to enter the new phone number which you want to save. For example: 5775342

|   |   |   |   |   |   |       |
|---|---|---|---|---|---|-------|
| 5 | 7 | 7 | 5 | 3 | 4 | 2     |
| ( | N | u | m | b | e | r ? ) |
|   |   | < | i | c | o | n s > |

. Press [PRG] again to store the name and number into directory, a confirmation beep will be heard. The LCD will display:

**D i r e c t o r y**  
**O K !**  
 < i c O n s >

## 5. Removing All Information From Directory

. Press [DIR]. The LCD displays

## Directory

. Press [DEL] ([FCN] + [1]) to delete all the directory

**D i r e c t o r y**  
**D e l e t e      A l l ?**  
**< i c o n s >**

. Press [PRG] to confirm and delete all directory messages

|                            |
|----------------------------|
| <b>D i r e c t o r y</b>   |
| <b>( E m p t y )</b>       |
| <b>&lt; i c o n s &gt;</b> |

## 6. Removing one Information From Directory

. Press [DIR]. The LCD displays

|                            |
|----------------------------|
| <b>D i r e c t o r y</b>   |
| <b>&lt; i c o n s &gt;</b> |

. Press digit key to find out the leading-letter what you want to find. For instance: "John Smith"

|                            |
|----------------------------|
| <b>J</b>                   |
| <b>( # : S e a r c h )</b> |
| <b>&lt; i c o n s &gt;</b> |

. Press the [#] to search the "John Smith" The LCD will display

|                            |                  |
|----------------------------|------------------|
| <b>J o h n</b>             | <b>S m i t h</b> |
| <b>5 7 7 5 1 4 1</b>       |                  |
| <b>&lt; i c o n s &gt;</b> |                  |

. Or, Directly press [▲]/[▼] to find the item to review.

|                            |                  |
|----------------------------|------------------|
| <b>J o h n</b>             | <b>S m i t h</b> |
| <b>5 7 7 5 1 4 1</b>       |                  |
| <b>&lt; i c o n s &gt;</b> |                  |

. Press [DEL] ([FCN] + [1]) to delete this item

|                            |                  |
|----------------------------|------------------|
| <b>J o h n</b>             | <b>S m i t h</b> |
| <b>D e l e t e ?</b>       |                  |
| <b>&lt; i c o n s &gt;</b> |                  |

. Press [PRG] to confirm and delete this message

|                            |                |
|----------------------------|----------------|
| <b>1</b>                   | <b>I t e m</b> |
| <b>D e l e t e d</b>       |                |
| <b>&lt; i c o n s &gt;</b> |                |

## IX. DIRECTORY OPERATION ( MHS-2 BASE UNIT ONLY )

The Directory function stores 80 names and phone numbers.

Name: maximum 16 characters.

Number: maximum 30 digits.

### 1. Storing the Information into Directory

. Press [DIR]. The LCD displays

D i r e c t o r y

. If the directory is empty, it will display

D i r e c t o r y  
( E m p t y )

. If the directory is full, it will display

D i r e c t o r y  
( F u l l )

. Press [PROGRAM] to start to enter the name

( N a m e ? )

. Use the dial pad to enter the phone name which you want to save.

OR

. Turn the [data Dial] to advance the character through the alphabet, and [<], [>] to move the cursor.

J o h n S m i t h  
( N a m e ? )

. Press [PROGRAM] to save the name and then to enter the number

( N u m b e r ? )

. Use the dial pad to enter the phone number which you want to save. For example: 5775141

5 7 7 5 1 4 1  
( N u m b e r ? )

. Press [PROGRAM] again to store the name and number into directory, a confirmation beep will be heard.  
The LCD will display:

D i r e c t o r y  
O K !

1. Directory OK! : Directory programming OK

. User can use the [DELETE] to delete one character or one digit.

### 2. Reviewing the Information from Directory

. Press [DIR]. The LCD displays

**D i r e c t o r y**

- . Press digit key to find out the leading-letter what you want to find. For instance: "John Smith"

**J**                      **S e a c c h**

- . Press the Softkey [Search] to search the "John Smith" The LCD will display

**J o h n      S m i t h**  
**5 7 7 5 1 4 1**

OR

- . Rotate the [Data Dial] to search the directory information.

**J o h n      S m i t h**  
**5 7 7 5 1 4 1**

- . If no any entry is for leading-letter "J", the LCD will display the nearest entry

**N e i l      S m i t h**  
**5 7 2 1 1 5 5**

- . Rotate the [Data Dial] to find the other item to review.

**T o n y      S m i t h**  
**5 7 7 5 1 4 1 2 5 1**

### 3. Dialing Information from Directory

- . Press [DIR]. The LCD displays

**D i r e c t o r y**

- . Press digit key to find out the leading-letter what you want to find. For instance: "John Smith"

**J**                      **S e a c c h**

- . Press the Softkey [Search] to search the "John Smith" The LCD will display

**J o h n      S m i t h**  
**5 7 7 5 1 4 1**

OR

- . Rotate the [Data Dial] to search the directory information.

**J o h n      S m i t h**  
**5 7 7 5 1 4 1**

- . Press an available [ Lx ], where  $x = 1/2$ , handset will automatically pick up an idle CO line and dial out the number  
. Or press the [Center of the Data Dial] to auto pick up the idle line and dial out the number

**5 7 7 5 1 4 1**  
**S p e a k e r                      m m : s s**

### 4. Editing Information from Directory

First, find out the directory message which you want to modify.

- . Press [DIR]

- . Press digit key to find out the leading-letter what you want to find. For instance: "John Smith"
- . Or, Directly press [▲]/[▼] to find the item to edit.

|   |   |   |   |   |   |   |   |   |
|---|---|---|---|---|---|---|---|---|
| J | o | h | n | S | m | i | t | h |
| 5 | 7 | 7 | 5 | 1 | 4 | 1 |   |   |

- . Press [EDIT] to start to edit the new name
- . Turn the [data Dial] to advance the character through the alphabet, and [<], [>] to move the cursor.

|   |   |   |   |   |   |   |   |   |
|---|---|---|---|---|---|---|---|---|
| T | o | n | y | S | m | i | t | h |
| ( | N | a | m | e | ? | ) |   |   |

- . Press [PROGRAM] to save the name and then to enter the number
- . Use the dial pad to enter the new phone number which you want to save. For example: 5775342

|   |   |   |   |   |   |   |   |   |
|---|---|---|---|---|---|---|---|---|
| 5 | 7 | 7 | 5 | 3 | 4 | 2 |   |   |
| ( | N | u | m | b | e | r | ? | ) |

- . Press [PROGRAM] again to store the name and number into directory, a confirmation beep will be heard.  
The LCD will display:

|   |   |   |   |   |   |   |   |   |
|---|---|---|---|---|---|---|---|---|
| D | i | r | e | c | t | o | r | y |
| O | K | ! |   |   |   |   |   |   |

1. Directory OK! : Directory programming OK

- . User can use the [DELETE] to delete one character or one digit.

## 5. Removing All Information From Directory

- . Press [DIR]. The LCD displays

|   |   |   |   |   |   |   |   |   |
|---|---|---|---|---|---|---|---|---|
| D | i | r | e | c | t | o | r | y |
|---|---|---|---|---|---|---|---|---|

- . Press [DELETE] to delete all the directory

|   |   |   |   |   |   |   |   |   |   |
|---|---|---|---|---|---|---|---|---|---|
| D | e | l | e | t | e | A | l | l | ? |
| N | o |   |   |   |   | Y | e | s |   |

- . Press Softkey [Yes] to confirm and delete all directory messages

|   |   |   |   |   |   |   |   |   |  |
|---|---|---|---|---|---|---|---|---|--|
| D | i | r | e | c | t | o | r | y |  |
| ( | E | m | p | t | y | ) |   |   |  |

## 6. Removing one Information From Directory

- . Press [DIR]. The LCD displays

|   |   |   |   |   |   |   |   |   |
|---|---|---|---|---|---|---|---|---|
| D | i | r | e | c | t | o | r | y |
|---|---|---|---|---|---|---|---|---|

- . Press digit key to find out the leading-letter what you want to find. For instance: "John Smith"

|   |  |   |   |   |   |   |   |  |
|---|--|---|---|---|---|---|---|--|
| J |  |   |   |   |   |   |   |  |
|   |  | S | e | a | c | c | h |  |

- . Press the Softkey [Search] to search the "John Smith" The LCD will display

|   |   |   |   |   |   |   |   |   |
|---|---|---|---|---|---|---|---|---|
| J | o | h | n | S | m | i | t | h |
| 5 | 7 | 7 | 5 | 1 | 4 | 1 |   |   |

OR

- . Rotate the [Data Dial] to search the directory information.

|   |   |   |   |   |   |   |   |   |
|---|---|---|---|---|---|---|---|---|
| J | o | h | n | S | m | i | t | h |
| 5 | 7 | 7 | 5 | 1 | 4 | 1 |   |   |

. Press [DELETE] to delete this item

|   |   |   |   |   |   |   |   |   |
|---|---|---|---|---|---|---|---|---|
| D | e | l | e | t | e | ? |   |   |
| N | o |   |   |   |   | Y | e | s |

. Press Softkey [Yes] to confirm and delete this messages

|   |   |   |   |   |   |   |
|---|---|---|---|---|---|---|
| 1 | I | t | e | m |   |   |
| D | e | l | e | t | e | d |

## X. ONE-TOUCH SPEED DIAL OPERATION ( MHS-2 BASE UNIT ONLY )

The One-Touch Speed Dial function stores 12 names and phone numbers.

Name: maximum 16 characters.

Number: maximum 30 digits.

### 1. Storing the Information into One-Touch Speed Dial

. Press [PROGRAM].

. Rotate the Data Dial to select One Touch Dial

O n e T o u c h D i a l

. Press the center of the Data Dial to select

0 1 : ( E m p t y )

. Rotate the Data Dial to select One-Touch which you want store

0 6 : ( E m p t y )

Or

. Press [PROGRAM], and press the One-Touch button directly.

0 6 : ( E m p t y )

. Press [PROGRAM] to start to store the message into the One-touch button

. Use the dial pad to enter the phone name which you want to save.

OR

. Turn the [data Dial] to advance the character through the alphabet, and [<], [>] to move the cursor.

J o h n S m i t h  
( N a m e ? )

. Press [PROGRAM] to save the name and then to enter the number

( N u m b e r ? )

. Use the dial pad to enter the phone number which you want to save. For example: 5775141

5 7 7 5 1 4 1  
( N u m b e r ? )

. Press [PROGRAM] again to store the name and number into directory, a confirmation beep will be heard.

The LCD will display:

J o h n S m i t h  
0 6 : O K !

### 2. Reviewing the Information from One-Touch Speed Dial

- . Press [PROGRAM].
- . Rotate the Data Dial to select One Touch Dial

|   |   |   |  |   |   |   |   |   |  |   |   |   |   |
|---|---|---|--|---|---|---|---|---|--|---|---|---|---|
| O | n | e |  | T | o | u | c | h |  | D | i | a | l |
|---|---|---|--|---|---|---|---|---|--|---|---|---|---|

- . Press the center of the Data Dial to select

|   |   |   |   |   |   |   |   |   |   |
|---|---|---|---|---|---|---|---|---|---|
| 0 | 1 | : | ( | E | m | p | t | y | ) |
|---|---|---|---|---|---|---|---|---|---|

- . Rotate the Data Dial to select One-Touch which you want store

|   |   |   |   |   |   |   |   |   |   |
|---|---|---|---|---|---|---|---|---|---|
| J | o | h | n |   | S | m | i | t | h |
| 0 | 6 | : | 5 | 7 | 7 | 5 | 1 | 4 | 1 |

Or

- . Press the One-Touch button directly.

|   |   |   |   |   |   |   |   |   |   |
|---|---|---|---|---|---|---|---|---|---|
| J | o | h | n |   | S | m | i | t | h |
| 0 | 6 | : | 5 | 7 | 7 | 5 | 1 | 4 | 1 |

### 3. Dialing Information from One-Touch Speed Dial

- . Press [PROGRAM].
- . Rotate the Data Dial to select One Touch Dial

|   |   |   |  |   |   |   |   |   |  |   |   |   |   |
|---|---|---|--|---|---|---|---|---|--|---|---|---|---|
| O | n | e |  | T | o | u | c | h |  | D | i | a | l |
|---|---|---|--|---|---|---|---|---|--|---|---|---|---|

- . Press the center of the Data Dial to select

|   |   |   |   |   |   |   |   |   |   |
|---|---|---|---|---|---|---|---|---|---|
| 0 | 1 | : | ( | E | m | p | t | y | ) |
|---|---|---|---|---|---|---|---|---|---|

- . Rotate the Data Dial to select One-Touch which you want store

|   |   |   |   |   |   |   |   |   |   |
|---|---|---|---|---|---|---|---|---|---|
| J | o | h | n |   | S | m | i | t | h |
| 0 | 6 | : | 5 | 7 | 7 | 5 | 1 | 4 | 1 |

Or

- . Press the One-Touch button directly.

|   |   |   |   |   |   |   |   |   |   |
|---|---|---|---|---|---|---|---|---|---|
| J | o | h | n |   | S | m | i | t | h |
| 0 | 6 | : | 5 | 7 | 7 | 5 | 1 | 4 | 1 |

- . Press an available [ Lx ], where x = 1/2, handset will automatically pick up an idle CO line and dial out the number
- . Or press the [Center of the Data Dial] to auto pick up the idle line and dial out the number

|   |   |   |   |   |   |   |  |   |   |   |   |   |  |
|---|---|---|---|---|---|---|--|---|---|---|---|---|--|
| 5 | 7 | 7 | 5 | 1 | 4 | 1 |  |   |   |   |   |   |  |
| S | p | e | a | k | e | r |  | m | m | : | s | S |  |

**The other method is:**

- . Press an available [ Lx ], where x = 1/2,
- . And then, press the One-Touch button which you want to dial. The number will be dialed out automatically.

### 4. Editing Information from One-Touch Speed Dial

- . Press [PROGRAM].
- . Rotate the Data Dial to select One Touch Dial



O n e T o u c h D i a l

- . Press the center of the Data Dial to select

0 1 : ( E m p t y )

- . Rotate the Data Dial to select One-Touch which you want store

J o h n S m i t h  
0 6 : 5 7 7 5 1 4 1

Or

- . Press the One-Touch button directly.

J o h n S m i t h  
0 6 : 5 7 7 5 1 4 1

- . Press [EDIT] to start to edit the new name
- . Turn the [data Dial] to advance the character through the alphabet, and [<], [>] to move the cursor.

T o n y S m i t h  
( N a m e ? )

- . Press [PROGRAM] to save the name and then to enter the number
- . Use the dial pad to enter the new phone number which you want to save. For example: 5775342

5 7 7 5 3 4 2  
( N u m b e r ? )

- . Press [PROGRAM] again to store the name and number into directory, a confirmation beep will be heard.  
The LCD will display:

T o n y S m i t h  
0 6 : O K !

## 5. Removing one Information From One-Touch Speed Dial

- . Press [PROGRAM].
- . Rotate the Data Dial to select One Touch Dial

O n e T o u c h D i a l

- . Press the center of the Data Dial to select this item

0 1 : ( E m p t y )

- . Rotate the Data Dial to select One-Touch which you want to store

J o h n S m i t h  
0 6 : 5 7 7 5 1 4 1

Or

- . Press the One-Touch button directly.

J o h n S m i t h  
0 6 : 5 7 7 5 1 4 1

- . Press [DELETE] to delete this item

D e l e t e ?

|            |              |
|------------|--------------|
| <b>N o</b> | <b>Y e s</b> |
|------------|--------------|

. Press Softkey [Yes] to confirm and delete this messages

|                            |
|----------------------------|
| <b>0 6 : D e l e t e d</b> |
|----------------------------|

## XI. CALLER ID OPERATION ( HANDSET UNIT ONLY )

### 1. Caller ID Call Back Dialing method

The system provides 4 different call back operations. There are **7-10-11**, **Always 11**, **Smart Dial**, and **Exact** in this system. If **Smart Dial** option is chosen, the user must program their local area code.  
If one of the other 3 options is chosen, the area code programming, will not appear as an option, and the area code will not be changed, either.

The 4 dialing methods operate as follow:

1. **7-10-11**: When user tries to dial from a CID record, three choices appear on the LCD: 7, 10, 11.  
The user chooses one option and the unit dials immediately, using the correct number of digits. **(default value)**
2. **Always 11**: When this option is selected, the unit will always dial a “1” followed by the area code and phone number (totally 11 digits)
3. **Smart Dial**: Only this option requires input of local area code. If the area code of the CID record matched the local area code, the unit dials 7 digits. Otherwise it dials 11 digits
4. **Exact Dial**: Always dials the exact digits that are in CID record.

#### 1.1 Programming the Dialing Method

- . Standby, press [PRG].
- . Press [▲]/[▼] to select the item to select the Dialing method

|   |   |   |   |   |   |   |   |   |   |   |
|---|---|---|---|---|---|---|---|---|---|---|
| D | i | a | l | i | n | g | M | o | d | e |
| 7 | - | 1 | 0 | - | 1 | 1 |   |   |   |   |
|   |   | < | i | c | o | n | s | > |   |   |

or

|   |   |   |   |   |   |   |   |   |   |   |
|---|---|---|---|---|---|---|---|---|---|---|
| D | i | a | l | i | n | g | M | o | d | e |
| S | m | a | r | t | D | i | a | l |   |   |
|   |   | < | i | c | o | n | s | > |   |   |

1. Dialing mode : You are programming Dialing method.
2. 7-10-11: The dialing mode “7-10-11”.
3. <icons>: Icons for the status of CO lines, and battery.

- . Enter [#] to change the dialing mode, the LCD will display

|   |   |   |   |   |   |   |   |   |   |   |
|---|---|---|---|---|---|---|---|---|---|---|
| D | i | a | l | i | n | g | M | o | d | e |
| S | m | a | r | t | D | i | a | l |   |   |
|   |   | < | i | c | o | n | s | > |   |   |

1. Dialing mode : You are programming Dialing method.
2. Smart Dial : The dialing mode “Smart Dial”.
3. <icons>: Icons for the status of CO lines, and battery.

- . Press [OFF], or [PRG], or [▲]/[▼] to confirm and quit the new setting or confirm and change to the other programming.

#### 1.2 Programming the Area Code

If **Smart Dial** option is chosen, the user must program their local area code.

- . Standby, press [PRG].
- . Press [▲]/[▼] to select the item to select the Area Code Group you want to program

|   |   |   |   |   |   |   |   |
|---|---|---|---|---|---|---|---|
| A | r | e | a | C | o | d | e |
|---|---|---|---|---|---|---|---|

|                                |
|--------------------------------|
| ( E m p t y )<br>< i c o n s > |
|--------------------------------|

or

|                                           |
|-------------------------------------------|
| A r e a C o d e<br>0 3 5<br>< i c o n s > |
|-------------------------------------------|

1. Area Code : You are programming Area Code.
2. (empty) : The current setting is "empty".
3. 035 : The current setting is "035".
4. <icons>: Icons for the status of CO lines, and battery.

- . Enter [ # ] to enter the changing mode, and then,
- . Enter [ 1/2/3/4/5/6/7/8/9/0 ] 3 digit for new Area Code, say 027, the LCD will display

|                                           |
|-------------------------------------------|
| A r e a C o d e<br>0 2 7<br>< i c o n s > |
|-------------------------------------------|

1. Area Code : You are programming Area Code.
3. 027 : The new setting is "027".
4. <icons>: Icons for the status of CO lines, and battery.

- . Press [OFF], or [PRG], or [▲]/[▼] to confirm and quit the new setting or confirm and change to the other programming.

### 1.3 Erasing the Area Code

- . Standby, press [PRG].
- . Press [▲]/[▼] to select the item to select the Area Code Group you want to program

|                                           |
|-------------------------------------------|
| A r e a C o d e<br>0 2 7<br>< i C o n s > |
|-------------------------------------------|

1. Area Code : You are programming Area Code.
2. 027 : The current setting is "027".

- . Press [FCN] and then press [DEL] ( same as [1] ) to erase the CID Area code. The LCD will display:

|                                                   |
|---------------------------------------------------|
| A r e a C o d e<br>D e l e t e ?<br>< i c o n s > |
|---------------------------------------------------|

1. Area Code : You are programming Area Code.
2. Deleted : Prompt to confirmation

- . Press [PRG] to confirm and delete the area code

|                                               |
|-----------------------------------------------|
| M E M O K !<br>( E m p t y )<br>< i c o n s > |
|-----------------------------------------------|

## 2. Ringing Line Caller ID Function

If the Caller ID service is available from your telephone company, and your have requested this feature, the LCD will show the telephone name and number of the incoming calls, and the date and time the call is received.

By press [MUTE], you can change the view between Number and Name displays or change to the other CO line caller ID.

When you receive a call, the caller's Name is displayed as : (This is the 1<sup>st</sup> Page for the caller's ID.)

|               |   |   |   |   |   |   |   |   |   |   |   |
|---------------|---|---|---|---|---|---|---|---|---|---|---|
| T             | O | M | M | Y | T | E | C | O | M |   |   |
| 0             | 3 | 5 | 7 | 7 | 5 | 1 | 2 | 3 | 4 | L | 1 |
| < i c o n s > |   |   |   |   |   |   |   |   |   |   |   |

or

|               |   |   |   |   |   |   |   |   |   |
|---------------|---|---|---|---|---|---|---|---|---|
| N             | o | N | a | m | e |   |   |   |   |
| N             | o | N | u | m | b | e | r | L | 1 |
| < i c o n s > |   |   |   |   |   |   |   |   |   |

Or

|               |   |   |   |   |   |   |   |   |
|---------------|---|---|---|---|---|---|---|---|
| P             | r | i | v | a | t | e | L | 1 |
| < i c o n s > |   |   |   |   |   |   |   |   |

or

|               |   |   |   |   |   |   |   |   |   |   |
|---------------|---|---|---|---|---|---|---|---|---|---|
| O             | u | t | O | f | A | r | e | a | L | 1 |
| < i c o n s > |   |   |   |   |   |   |   |   |   |   |

1. L1 : The Caller's ID is for Line#1.
2. TOMMY TECOM : Incoming caller's name.
3. "No Name" : The Name is not sent from your telephone company.
4. "No Number" : The Number is not sent from your telephone company.
5. "Private" : Incoming caller's Name Private indicator.
6. "Out Of Area" : Incoming caller's Name Out-Of-Area. indicator.

If the name length is over 12 or the number length is over 10, the other message will be display on the page 2.  
The user can press [MUTE] to see the rest part of caller ID. (This is the 2nd Page for the caller's ID.)

|   |   |   |               |   |   |   |
|---|---|---|---------------|---|---|---|
| S | m | i | t             | h | L | 1 |
| 8 | 9 | 0 | < i c o n s > |   |   |   |

## 2.1 View the Caller ID Information Between Ringing Calls

If you get more than one line ringing at the same time, you can check the caller from these different lines to decide which line should be answered with higher priority.

. Handset in standby mode, line 1 and line 2 ringing, the LCD shows line 1 caller information

|               |   |   |   |   |   |   |   |   |   |   |   |
|---------------|---|---|---|---|---|---|---|---|---|---|---|
| T             | O | M | M | Y | T | E | C | O | M |   |   |
| 0             | 3 | 5 | 7 | 7 | 5 | 7 | 8 | 9 | 0 | L | 1 |
| < i c o n s > |   |   |   |   |   |   |   |   |   |   |   |

1. L1 : The Caller's ID is for Line#1.
2. TOMMY TECOM : Incoming caller's name.
3. 0357757890: Incoming caller's number.

. Press [MUTE] to see the rest part of Phone Name & Number. (OR, Skip this page)

|   |   |   |               |   |   |   |   |   |
|---|---|---|---------------|---|---|---|---|---|
| E | C | O | M             | C | O | . | L | 1 |
| 8 | 9 | 0 | < i c o n s > |   |   |   |   |   |

. Press [MUTE] again to check the Line 2 caller information.

|               |   |   |   |   |   |   |   |   |   |   |   |
|---------------|---|---|---|---|---|---|---|---|---|---|---|
| S             | H | E | R | R | Y | S | O | H | O |   |   |
| 0             | 3 | 5 | 7 | 7 | 9 | 3 | 1 | 9 | 6 | L | 2 |
| < i c o n s > |   |   |   |   |   |   |   |   |   |   |   |

1. L2 : The Caller's ID is for Line#2.
2. SHERRY SOHO : Incoming caller's name.
3. 0357793196: Incoming caller's number.

. Press [MUTE] again, back to the LCD normal mode

|   |   |   |   |   |   |   |   |
|---|---|---|---|---|---|---|---|
| R | i | n | g | : | L | o | w |
|---|---|---|---|---|---|---|---|

|   |   |   |   |   |   |   |
|---|---|---|---|---|---|---|
| I | D | : | 1 | 2 |   |   |
| < | i | c | o | n | s | > |

- 1."Ring": Ringer volume that may be Low, Mid, Hi or DND.
- 2."ID" : Identification Number of the handset.
3. <icons>: Icons for the status of CO lines, and battery.

. Press [MUTE] again, back to the line 1 caller information. And so on...

|   |   |   |   |   |   |   |   |   |   |   |   |
|---|---|---|---|---|---|---|---|---|---|---|---|
| T | O | M | M | Y | T | E | C | O | M |   |   |
| 0 | 3 | 5 | 7 | 7 | 5 | 7 | 8 | 9 | 0 | L | 1 |
| < | i | c | o | n | s | > |   |   |   |   |   |

1. L1 : The Caller's ID is for Line#1.
2. TOMMY TECOM : Incoming caller's name.
3. 0357757890: Incoming caller's number.

### 3. Caller ID Data Base Function

Up to 50 caller's information can be stored in the Database of the base unit on a numbered list. This list can be reviewed at any time. If more than 50 calls are received, the earliest received numbers are deleted to maintain a total of 50 calls.

Because of the system limitation, only one of the handsets can operate the Database at a time.

#### 3.1 Enter the CID Data Base Retrieve Mode

You may enter the CID Database which stored the latest 50 calls and you may use some very useful features during the view of the data base.

Because of the system limitation, only one of the handsets can operate the Database at a time.

. Standby, press [CID] to enter CID database retrieve mode. The LCD will display:

|   |   |   |   |   |   |   |   |   |
|---|---|---|---|---|---|---|---|---|
| A | I | I | C | I | D | : | X | X |
| < | i | c | o | n | s | > |   |   |

1. "All CID:XX" : The all CID number XX.

#### 3.2 Delete All Callers from the Caller Data Base

You may delete all caller information easily from the caller database after you have returned the call or you have reviewed the caller list.

. LCD shows the all caller information, and you want to delete it from the caller list.

|   |   |   |   |   |   |   |   |   |
|---|---|---|---|---|---|---|---|---|
| A | I | I | C | I | D | : | X | X |
| < | i | c | o | n | s | > |   |   |

1. "All CID:XX" : The all CID number XX.

. Press [FCN] and then press [DEL] (same as [1]) to delete the all caller data. The LCD displays:

|   |   |   |   |   |   |   |   |   |
|---|---|---|---|---|---|---|---|---|
| A | I | I | C | I | D | : | 0 | 0 |
| < | i | c | o | n | s | > |   |   |

1. "All CID:00" : The all CID are deleted.

### 3.3 Scroll the Calls in the CID Data Base

. In CID database retrieve mode, current caller index number is 11

|               |   |   |   |   |   |   |   |   |   |
|---------------|---|---|---|---|---|---|---|---|---|
| T             | O | M | M | Y | T | E | C | O | M |
| 0             | 3 | 5 | 7 | 7 | 5 | 7 | 8 | 9 | 0 |
| < i c o n s > |   |   |   |   |   |   |   |   |   |

1. TOMMY TECOM : Incoming caller's name.
2. 0357757890: Incoming caller's number.

. Press [▲]/[▼] to scroll the CID data base between calls. For example,

-- Or if pressing [▼] (FORWARD) instead, you will see the caller#10

|               |   |   |   |   |   |   |   |   |   |
|---------------|---|---|---|---|---|---|---|---|---|
| S             | H | E | R | R | Y | S | O | H | O |
| 0             | 3 | 5 | 7 | 7 | 9 | 3 | 1 | 9 | 6 |
| < i c o n s > |   |   |   |   |   |   |   |   |   |

-- If pressing [▲] (BACKWARD), you will see the caller#12 :

|               |   |   |   |   |   |   |   |   |   |
|---------------|---|---|---|---|---|---|---|---|---|
| S             | A | N | D | E | R | S | X | Y | Z |
| 0             | 3 | 5 | 2 | 1 | 2 | 3 | 4 | 5 | 6 |
| < i c o n s > |   |   |   |   |   |   |   |   |   |

### 3.4 View the Completed Caller Information

When receiving the caller ID information. The LCD will display:

|               |   |   |   |   |   |   |   |   |   |
|---------------|---|---|---|---|---|---|---|---|---|
| T             | O | M | M | Y | T | E | C | O | M |
| 0             | 3 | 5 | 7 | 7 | 5 | 7 | 8 | 9 | 0 |
| < i c o n s > |   |   |   |   |   |   |   |   |   |

1. TOMMY TECOM : Incoming caller's name.
2. 0357757890: Incoming caller's number.

If the name length is over 12 or the number length is over 10, the rest message will be display on the page 2.  
The user can press [MUTE] to see the rest part of caller ID. (OR, Skip this page)

|               |   |   |   |   |   |   |
|---------------|---|---|---|---|---|---|
| E             | C | O | M | C | O | . |
| 8             | 9 | 0 |   |   |   |   |
| < i c o n s > |   |   |   |   |   |   |

. Press [MUTE] to change the LCD to shows the caller 3<sup>rd</sup> (or 2<sup>nd</sup>) page for the phone index, repeated counter and date/time information.

|               |   |   |   |   |   |   |   |   |   |
|---------------|---|---|---|---|---|---|---|---|---|
| #             | 1 | 1 |   |   |   |   | * | 0 | 3 |
| A             | U | G | 2 | 7 | 2 | 0 | : | 1 | 0 |
| < i c o n s > |   |   |   |   |   |   |   |   |   |

. Press [MUTE] again, and you can change the CID pages back and forth for the completed caller information.

|               |   |   |   |   |   |   |   |   |   |
|---------------|---|---|---|---|---|---|---|---|---|
| T             | O | M | M | Y | T | E | C | O | M |
| 0             | 3 | 5 | 7 | 7 | 5 | 7 | 8 | 9 | 0 |
| < i c o n s > |   |   |   |   |   |   |   |   |   |

1. TOMMY TECOM : Incoming caller's name.
2. 0357757890: Incoming caller's number.

### 3.5 Dial Back for the Caller on the Display

You may answer the call easily while you are reviewing the caller ID database.

#### 3.5.1 Dial Back the Phone Number with 7-10-11

. LCD shows the caller information, and you want to return the call

|               |   |   |   |   |   |   |   |   |   |
|---------------|---|---|---|---|---|---|---|---|---|
| T             | O | M | M | Y | T | E | C | O | M |
| 0             | 3 | 5 | 7 | 7 | 5 | 1 | 4 | 1 | 2 |
| < i c o n s > |   |   |   |   |   |   |   |   |   |

1. TOMMY TECOM : Incoming caller's name.
2. 0357751412: Incoming caller's number.

. Press an available [ Lx ] (where x = 1/2) to pick up the CO line  
The LCD will show:

|               |   |   |   |   |   |   |   |   |   |   |
|---------------|---|---|---|---|---|---|---|---|---|---|
| D             | i | a | l | 1 | : | 7 | D | i | g | i |
| 2             | : | 1 | 0 | 3 | : | 1 | 1 |   |   |   |
| < i c o n s > |   |   |   |   |   |   |   |   |   |   |

1. Dial 1:7Digi 2:10 3: 11. :Dial 1 or 2 or 3 to select the all dial out number digits  
1: dial out 7 digits, 2: dial out 10 digit, 11: dial out 11 digits
2. <icons>: Icons for the status of CO lines, and battery.

. Press [1] or [2] or [3] to select the dial out the number, and then the unit will dial out the number automatically.  
For example: press [2] to select 10-digit dialing mode, the LCD will display:

|               |   |   |   |   |   |   |   |   |   |   |
|---------------|---|---|---|---|---|---|---|---|---|---|
| L             | 1 |   |   |   |   | m | m | : | s | s |
| 0             | 3 | 5 | 7 | 7 | 5 | 1 | 4 | 1 | 2 |   |
| < i c o n s > |   |   |   |   |   |   |   |   |   |   |

1. L1 : The CO line number you are using.
2. 0357751412 : Dialed digits, - cursor for next digit
3. mm:ss : Talk time, count by second
4. <icons>: Icons for the status of CO lines, and battery.

#### 3.5.2 Dial Back the Phone Number with Other Options

. LCD shows the caller information, and you want to return the call

|               |   |   |   |   |   |   |   |   |   |
|---------------|---|---|---|---|---|---|---|---|---|
| T             | O | M | M | Y | T | E | C | O | M |
| 0             | 3 | 5 | 7 | 7 | 5 | 1 | 4 | 1 | 2 |
| < i c o n s > |   |   |   |   |   |   |   |   |   |

1. TOMMY TECOM : Incoming caller's name.
2. 0357751412: Incoming caller's number.

. Press an available [ Lx ] (where x = 1/2) to pick up the CO line, and then the unit will dial out the number automatically.

The dialed out number will be always 11, or exact dial or smart dial. It will depend on the user setting.  
For example: exact dial, the LCD will display:

|               |   |   |   |   |   |   |   |   |   |   |
|---------------|---|---|---|---|---|---|---|---|---|---|
| L             | 1 |   |   |   |   | m | m | : | s | s |
| 0             | 3 | 5 | 7 | 7 | 5 | 1 | 4 | 1 | 2 |   |
| < i c o n s > |   |   |   |   |   |   |   |   |   |   |

1. L1 : The CO line number you are using.
2. 0357751412 : Dialed digits, - cursor for next digit
3. mm:ss : Talk time, count by second
4. <icons>: Icons for the status of CO lines, and battery.



### 3.6 Delete a Caller from the Caller Data Base

You may delete a caller information easily from the caller database after you have returned the call or you have reviewed the caller list.

. LCD shows the caller information, and you want to delete it from the caller list.

|               |   |   |   |   |   |   |   |   |   |
|---------------|---|---|---|---|---|---|---|---|---|
| T             | O | M | M | Y | T | E | C | O | M |
| 0             | 3 | 5 | 7 | 7 | 5 | 7 | 8 | 9 | 0 |
| < i c o n s > |   |   |   |   |   |   |   |   |   |

OR

|               |   |   |   |   |   |   |
|---------------|---|---|---|---|---|---|
| E             | C | O | M | C | O | . |
| 8             | 9 | 0 |   |   |   |   |
| < i c o n s > |   |   |   |   |   |   |

OR

|               |   |   |   |   |   |   |   |   |   |
|---------------|---|---|---|---|---|---|---|---|---|
| #             | 1 | 1 |   |   |   |   | * | 0 | 3 |
| A             | U | G | 2 | 7 | 2 | 0 | : | 1 | 0 |
| < i c o n s > |   |   |   |   |   |   |   |   |   |

. Press [FCN] and then press [DEL] (same as [1]) to delete the caller data. The LCD displays:

|               |   |   |   |   |   |   |   |   |   |   |
|---------------|---|---|---|---|---|---|---|---|---|---|
| #             | 1 | 1 | : | D | e | l | e | t | e | d |
| < i C o n s > |   |   |   |   |   |   |   |   |   |   |

1. Deleted : The prompt for confirmation.
2. #11 : The CID list index number.

### 3.7 Store a Caller Number into the Directory Memory

You may store a caller phone number from the caller list, into your directory memory.

. The LCD shows the caller information, and you want to store it

|               |   |   |   |   |   |   |   |   |   |
|---------------|---|---|---|---|---|---|---|---|---|
| T             | O | M | M | Y | T | E | C | O | M |
| 0             | 3 | 5 | 7 | 7 | 5 | 7 | 8 | 9 | 0 |
| < i c o n s > |   |   |   |   |   |   |   |   |   |

OR

|               |   |   |   |   |   |   |
|---------------|---|---|---|---|---|---|
| E             | C | O | M | C | O | . |
| 8             | 9 | 0 |   |   |   |   |
| < i c o n s > |   |   |   |   |   |   |

OR

|               |   |   |   |   |   |   |   |   |   |
|---------------|---|---|---|---|---|---|---|---|---|
| #             | 1 | 1 |   |   |   |   | * | 0 | 3 |
| A             | U | G | 2 | 7 | 2 | 0 | : | 1 | 0 |
| < i c o n s > |   |   |   |   |   |   |   |   |   |

. Press [DIR] and [PRG]. The LCD will display:

|               |   |   |   |   |   |   |
|---------------|---|---|---|---|---|---|
| (             | N | a | m | e | ? | ) |
| < i c o n s > |   |   |   |   |   |   |

1. Enter Name : Directory is waiting the name input.
2. 123 : Programmed memory content.

. Press [CID]. The LCD will display

|               |   |   |   |   |   |   |   |   |   |
|---------------|---|---|---|---|---|---|---|---|---|
| T             | O | M | M | Y | T | E | C | O | M |
| (             | N | a | m | e | ? | ) |   |   |   |
| < i c o n s > |   |   |   |   |   |   |   |   |   |

. Press [PRG] to confirm the name and continue to save the number

|   |   |   |   |   |   |   |   |   |   |
|---|---|---|---|---|---|---|---|---|---|
| 0 | 3 | 5 | 7 | 7 | 5 | 7 | 8 | 9 | 0 |
| ( | N | u | m | b | e | r | ? | ) |   |
| < | i | c | o | n | s | > |   |   |   |

1. 0357757890 : The CID caller ID number.

. Press [PRG] again to store the name and number into directory, a confirmation beep will be heard.  
 The LCD will display:

|   |   |   |   |   |   |   |   |   |  |
|---|---|---|---|---|---|---|---|---|--|
| D | i | r | e | c | t | o | r | y |  |
| O | K | ! |   |   |   |   |   |   |  |
| < | i | c | O | n | s | > |   |   |  |

1. Directory OK! : Memory location & programming OK

### 3.8 Leave the CID Data Base Retrieve Mode

You may leave the CID data base whenever you are in any CID data base access features, and back to the standby mode.

. The LCD shows the caller information, and you want to leave

|   |   |   |   |   |   |   |   |   |   |   |
|---|---|---|---|---|---|---|---|---|---|---|
| T | O | M | M | Y |   | T | E | C | O | M |
| 0 | 3 | 5 | 7 | 7 | 5 | 7 | 8 | 9 | 0 |   |
| < | i | c | o | n | s | > |   |   |   |   |

OR

|   |   |   |   |   |   |   |   |  |  |  |
|---|---|---|---|---|---|---|---|--|--|--|
| E | C | O | M |   | C | O | . |  |  |  |
| 8 | 9 | 0 |   |   |   |   |   |  |  |  |
| < | i | c | o | n | s | > |   |  |  |  |

OR

|   |   |   |   |   |   |   |   |   |   |   |
|---|---|---|---|---|---|---|---|---|---|---|
| # | 1 | 1 |   |   |   |   | * | 0 | 3 |   |
| A | U | G | 2 | 7 |   | 2 | 0 | : | 1 | 0 |
| < | i | c | o | n | s | > |   |   |   |   |

. Press [OFF] to leave the caller data base and the LCD goes back to the normal standby mode.

|   |   |   |   |   |   |   |   |  |  |  |
|---|---|---|---|---|---|---|---|--|--|--|
| R | i | n | g | : | L | o | w |  |  |  |
| I | D | : | 1 | 2 |   |   |   |  |  |  |
| < | i | c | o | n | s | > |   |  |  |  |

- 1."Ring": Ringer volume that may be Low, Mid, Hi or DND.
- 2."ID" : Identification Number of the handset.
3. <icons>: Icons for the status of CO lines, and battery.

### 4. Caller ID on Call Waiting ( Type II Call ID )

This is a telephone service which identifies a waiting caller without interrupting your current call.  
 This feature gives you the informed choice of whether or not to take the incoming call.  
 The operation is the same as the normal operation. Please see the example below:

. Suppose that you are talking on Line#1. The LCD displays:

|   |   |   |   |   |   |   |   |   |   |   |
|---|---|---|---|---|---|---|---|---|---|---|
| L | 1 |   |   |   |   | m | m | : | s | s |
| 7 | 7 | 5 | 1 | 4 | 1 |   |   |   |   |   |
| < | i | c | o | n | s | > |   |   |   |   |

1. L1 : The CO line number you are using.
2. 775141 : Dialed digits, - cursor for next digit
3. mm:ss : Talk time, count by second
4. <icons>: Icons for the status of CO lines, and battery.

. After hearing a short CPE Alert Signal (CAS), the LCD will display the new incoming Caller ID automatically.  
 If you want to view the new incoming Call ID of this line when you are doing something else,  
 press [MUTE] and see the Caller ID of the waiting caller:

|                            |          |          |          |          |          |          |          |          |          |          |          |
|----------------------------|----------|----------|----------|----------|----------|----------|----------|----------|----------|----------|----------|
| <b>T</b>                   | <b>O</b> | <b>M</b> | <b>M</b> | <b>Y</b> | <b>T</b> | <b>E</b> | <b>C</b> | <b>O</b> | <b>M</b> |          |          |
| <b>0</b>                   | <b>3</b> | <b>5</b> | <b>7</b> | <b>7</b> | <b>5</b> | <b>1</b> | <b>4</b> | <b>1</b> | <b>2</b> | <b>L</b> | <b>1</b> |
| <b>&lt; i c o n s &gt;</b> |          |          |          |          |          |          |          |          |          |          |          |

1. TOMMY TECOM : Incoming caller's name.
2. 0357751412 : Incoming caller's number.

. Press [MUTE] again to return the original line#1 talking mode

|                            |          |          |          |          |          |          |          |          |          |          |
|----------------------------|----------|----------|----------|----------|----------|----------|----------|----------|----------|----------|
| <b>L</b>                   | <b>1</b> |          |          |          |          | <b>m</b> | <b>m</b> | <b>:</b> | <b>s</b> | <b>s</b> |
| <b>7</b>                   | <b>7</b> | <b>5</b> | <b>1</b> | <b>4</b> | <b>1</b> |          |          |          |          |          |
| <b>&lt; i c o n s &gt;</b> |          |          |          |          |          |          |          |          |          |          |

1. L1 : The CO line number you are using.
2. 775141 : Dialed digits, - cursor for next digit
3. mm:ss : Talk time, count by second
4. <icons>: Icons for the status of CO lines, and battery.

## XII. CALLER ID OPERATION ( MHS-2 BASE UNIT ONLY )

### 1. Caller ID Call Back Dialing method

The system provides 4 different call back operations. There are **7-10-11**, **Always 11**, **Smart Dial**, and **Exact** in this system. If **Smart Dial** option is chosen, the user must program their local area code.

If one of the other 3 options is chosen, the area code programming, will not appear as an option, and the area code will not be changed, either.

The 4 dialing methods operate as follow:

5. **7-10-11**: When user tries to dial from a CID record, three choices appear on the LCD: 7, 10, 11. The user chooses one option and the unit dials immediately, using the correct number of digits. **(default value)**
6. **Always 11**: When this option is selected, the unit will always dial a “1” followed by the area code and phone number (totally 11 digits)
7. **Smart Dial**: Only this option requires input of local area code. If the area code of the CID record matched the local area code, the unit dials 7 digits. Otherwise it dials 11 digits
8. **Exact Dial**: Always dials the exact digits that are in CID record.

#### 1.1 Programming the Dialing Method

- . Standby, press [PROGRAM].
- . Rotate the [Data Dial] to select the Dialing method

|   |   |   |   |   |   |   |   |   |   |   |
|---|---|---|---|---|---|---|---|---|---|---|
| D | i | a | l | i | n | g | M | o | d | e |
| 7 | - | 1 | 0 | - | 1 | 1 |   |   |   |   |

1. Dialing mode : You are programming Dialing method.
2. 7-10-11: The dialing mode “7-10-11”.

- . Press the [Center of the Data Dial] to select this option
- . An then, rotate the [Data Dial] to select the new selection

|   |   |   |   |   |   |   |   |   |   |   |
|---|---|---|---|---|---|---|---|---|---|---|
| D | i | a | l | i | n | g | M | o | d | e |
| < | S | m | a | r | t | D | i | a | l | > |

1. Dialing mode : You are programming Dialing method.
2. Smart Dial : The dialing mode “Smart Dial”.

- . Press the [Center of the Data Dial] to confirm the selection

#### 1.2 Programming the Area Code

If **Smart Dial** option is chosen, the user must program their local area code.

- . Standby, press [PROGRAM].
- . Rotate the [Data Dial] to select this item

|   |   |   |   |   |   |   |   |
|---|---|---|---|---|---|---|---|
| A | r | e | a | C | o | d | e |
| 2 | 3 | 4 |   |   |   |   |   |

1. Area Code : You are programming Area Code method.
2. 2 3 4: The dialing mode “234”.

- . Press the [Center of the Data Dial] to select this option
- . An then, rotate the [Data Dial] to select the new selection

|   |   |   |   |   |   |   |   |
|---|---|---|---|---|---|---|---|
| A | r | e | a | C | o | d | e |
|---|---|---|---|---|---|---|---|

|           |
|-----------|
| < 3 > 3 4 |
|-----------|

- . Press the [Center of the Data Dial] to confirm the selection
- . And then repeat the operation to select the other digits

|         |         |
|---------|---------|
| A r e a | C o d e |
| 3 4     | 5       |

1. Area Code : You are programming Area Code method.
2. 3 4 5: The dialing mode “3 4 5”.

- . Press the [Center of the Data Dial] to confirm the selection
- . Press [PROGRAM], or rotate the [Data Dial] to confirm and quit the new setting or confirm and change to the other programming.

### 1.3 Erasing the Area Code

- . Standby, press [PROGRAM].
- . Rotate the [Data Dial] to select this item

|         |         |
|---------|---------|
| A r e a | C o d e |
| 2 3     | 4       |

1. Area Code : You are programming Area Code method.
2. 2 3 4: The dialing mode “234”.

- . Press [DELETE] to erase the CID Area code. The LCD will display:

|             |       |
|-------------|-------|
| D e l e t e | ?     |
| N o         | Y e s |

1. Delete ? : Prompt for user re-confirmation

- . Press softkey [Yes] to confirm and delete the area code

|               |         |
|---------------|---------|
| A r e a       | C o d e |
| ( E m p t y ) |         |

1. Area Code : You are programming Area Code.
2. (Empty) : Prompt to confirmation

## 2. LCD Icon for Caller ID Function

There are some icons on the LCD. These icons display for caller ID message.

- Icon1 – “Global mark”: for the call is from long distance.
- Icon2 – “CALL WAITING” for call waiting caller ID
- Icon3 – “REPEAT” for the repeat times from the same caller
- Icon4 – “NEW” There are some new caller ID in the database.
- Icon5 – “CALLS” Total caller ID counter in the database.
- Icon6 – “Date & Time” Show the current time or Caller ID calling time.

## 3. Ringing Line Caller ID Function

If the Caller ID service is available from your telephone company, and your have requested this feature, the LCD will show the telephone name and number of the incoming calls.

|                           |           |
|---------------------------|-----------|
| J O H N                   | S M I T H |
| L 1 : 8 6 2 1 2 3 4 5 6 7 |           |

|                       |
|-----------------------|
| N o N a m e           |
| L 1 : N o N u m b e r |

Or

|               |
|---------------|
| P r i v a t e |
| L 1           |

or

|                   |
|-------------------|
| O u t O f A r e a |
| L 1               |

1. L1 : The Caller's ID is for Line#1.
2. TOMMY TECOM : Incoming caller's name.
3. "No Name" : The Name is not sent from your telephone company.
4. "No Number" : The Number is not sent from your telephone company.
5. "Private" : Incoming caller's Name Private indicator.
6. "Out Of Area" : Incoming caller's Name Out-Of-Area. indicator.

### 3.1 View the Caller ID Information Between Ringing Calls

If you get more than one line ringing at the same time, you can check the caller from these different lines to decide which line should be answered with higher priority.

. Handset in standby mode, line 1 and line 2 ringing, the LCD shows line 1 caller information

|                           |
|---------------------------|
| J O H N S M I T H         |
| L 1 : 8 6 2 1 2 3 4 5 6 7 |

. Press [ > ] again to check the Line 2 caller information.

|                           |
|---------------------------|
| S H E R R Y S O H O       |
| L 2 : 5 2 6 5 5 5 1 2 1 7 |

. Press [ > ] again, back to the LCD normal mode

## 4. Caller ID Data Base Function

Up to 50 caller's information can be stored in the Database of the base unit on a numbered list. This list can be reviewed at any time. If more than 50 calls are received, the earliest received numbers are deleted to maintain a total of 50 calls.

Because of the system limitation, only one of the handsets can operate the Database at a time.

### 4.1 Enter the CID Data Base Retrieve Mode

You may enter the CID Database which stored the latest 50 calls and you may use some very useful features during the view of the data base.

Because of the system limitation, either only one of the handsets or base unit can operate the Database at a time.

. Standby, press [CID] to enter CID database retrieve mode. The LCD will display:

|                   |
|-------------------|
| A I I C I D : 4 5 |
|-------------------|

### 4.2 Delete All Callers from the Caller Data Base

You may delete all caller information easily from the caller database after you have returned the call or you have reviewed the caller list.

. LCD shows the all caller information, and you want to delete it from the caller list.

. Press [DELETE] (same as [1]) to delete the all caller data. The LCD displays:

|               |       |
|---------------|-------|
| D e l e t e ? |       |
| N o           | Y e s |

1. Delete ? : Prompt for user re-confirmation

. Press softkey [Yes] to confirm and delete all the CID database

|                          |
|--------------------------|
| <b>A l l C I D : 0 0</b> |
|--------------------------|

1. All CID: 00 : All CID data are deleted.

### 4.3 Scroll the Calls in the CID Data Base

. In CID database retrieve mode,

. An then, rotate the [Data Dial] to select the caller ID information

|   |   |   |   |   |   |   |   |   |   |   |   |   |
|---|---|---|---|---|---|---|---|---|---|---|---|---|
| J | O | H | N | S | M | I | T | H |   |   |   |   |
| 1 | 8 | : | 8 | 6 | 2 | 1 | 2 | 3 | 4 | 5 | 6 | 7 |

. Note: If the caller is from long distance, the Icon – “Global Mark” will be turned on. If the caller ID isn’t yet retrieved, the Icon – “New” will be turned on.

If the caller has called many times, the Icon – “REPEAT” will be turned on and show repeat times (max.:19)

. An then, rotate the [Data Dial] to select the other caller ID information

|   |   |   |   |   |   |   |   |   |   |   |   |   |
|---|---|---|---|---|---|---|---|---|---|---|---|---|
| S | H | E | R | R | Y | S | O | H | O |   |   |   |
| 2 | 5 | : | 5 | 6 | 8 | 5 | 5 | 5 | 4 | 5 | 6 | 7 |

#### 4.4 Dial Back for the Caller on the Display

You may answer the call easily while you are reviewing the caller ID database.

#### 4.4.1 Dial Back the Phone Number with 7-10-11

. LCD shows the caller information, and you want to return the call

|   |   |   |   |   |   |   |   |   |   |   |   |   |
|---|---|---|---|---|---|---|---|---|---|---|---|---|
| J | O | H | N |   | S | M | I | T | H |   |   |   |
| 1 | 8 | : | 8 | 6 | 2 | 1 | 2 | 3 | 4 | 5 | 6 | 7 |

. Press an available [ Lx ] (where  $x = 1/2$ ),  
OR

. Press the [Center of the Data Dial]

The LCD will show:

|               |             |
|---------------|-------------|
| D i a l i n g | D i g i t s |
| 7             | 1 0 1 1     |

• Press the softkey to select the dial out the number, and then the unit will dial out the number automatically. For example: press [10] to select 10-digit dialing mode, the LCD will display:

|   |   |   |   |   |   |   |   |   |       |
|---|---|---|---|---|---|---|---|---|-------|
| 8 | 6 | 2 | 1 | 2 | 3 | 4 | 5 | 6 | 7     |
| S | p | e | a | k | e | r | m | m | : s s |

#### 4.4.2 Dial Back the Phone Number with Other Options

. LCD shows the caller information, and you want to return the call

|   |   |   |   |   |   |   |   |   |   |   |   |   |
|---|---|---|---|---|---|---|---|---|---|---|---|---|
| J | O | H | N | S | M | I | T | H |   |   |   |   |
| 1 | 8 | : | 8 | 6 | 2 | 1 | 2 | 3 | 4 | 5 | 6 | 7 |

. Press an available [ Lx ] (where  $x = 1/2$ ),

OR

- . Press the [Center of the Data Dial]  
And then the unit will dial out the number automatically.

The dialed out number will be always 11, or exact dial or smart dial. It will depend on the user setting.  
For example: exact dial, the LCD will display:

The LCD will show:

|   |   |   |   |   |   |   |   |   |         |
|---|---|---|---|---|---|---|---|---|---------|
| 8 | 6 | 2 | 1 | 2 | 3 | 4 | 5 | 6 | 7       |
| S | p | e | a | k | e | r |   | m | m : s s |

#### 4.5 Delete a Caller from the Caller Data Base

You may delete a caller information easily from the caller database after you have returned the call or you have reviewed the caller list.

- . LCD shows the caller information, and you want to delete it from the caller list.

|   |   |   |   |   |   |   |   |   |         |
|---|---|---|---|---|---|---|---|---|---------|
| J | O | H | N |   | S | M | I | T | H       |
| 1 | 8 | : | 8 | 6 | 2 | 1 | 2 | 3 | 4 5 6 7 |

- . Press [DELETE] to delete the caller data. The LCD displays:

|   |   |   |   |   |   |   |     |
|---|---|---|---|---|---|---|-----|
| D | e | l | e | t | e |   | ?   |
| N | o |   |   |   |   | Y | e s |

1. Delete ? : Prompt for user re-confirmation

- . Press softkey [Yes] to confirm and delete the area code

|   |   |   |   |   |   |   |   |   |   |
|---|---|---|---|---|---|---|---|---|---|
| 1 | 8 | : | D | e | l | e | t | e | d |
|---|---|---|---|---|---|---|---|---|---|

#### 4.6 Store a Caller Number into the Directory Memory

You may store a caller phone number from the caller list, into your directory memory.

- . Press [DIR], and then press [PROGRAM] key
- . The LCD shows the caller information, and you want to store it

|   |   |   |   |   |   |   |
|---|---|---|---|---|---|---|
| ( | N | a | m | e | ? | ) |
|---|---|---|---|---|---|---|

- . Press [CID]. The LCD will display

|   |   |   |   |   |   |   |   |   |   |   |
|---|---|---|---|---|---|---|---|---|---|---|
| T | O | M | M | Y |   | T | E | C | O | M |
| ( | N | a | m | e | ? | ) |   |   |   |   |

- . Press [PROGRAM] to confirm the name and continue to save the number

|   |   |   |   |   |   |   |   |   |
|---|---|---|---|---|---|---|---|---|
| 0 | 3 | 5 | 7 | 7 | 5 | 1 | 4 | 1 |
| ( | N | u | m | b | e | r | ? | ) |

- . Press [PROGRAM] again to store the name and number into directory, a confirmation beep will be heard.  
The LCD will display:

|   |   |   |   |   |   |   |   |   |
|---|---|---|---|---|---|---|---|---|
| D | i | r | e | c | t | o | r | y |
| O | K | ! |   |   |   |   |   |   |

1. Directory OK! : Memory location & programming OK

Note: The user can use the [<] or [>] to backspace and forward the cursor position.



#### 4.7 Store a Caller Number into the One-Touch Speed Dial

You may store a caller phone number from the caller list, into your one-touch speed dial memory.

- . Press [PROGRAM].
- . Rotate the Data Dial to select One Touch Dial

O n e T o u c h D i a l

- . Press the center of the Data Dial to select

0 1 : ( E m p t y )

- . Rotate the Data Dial to select One-Touch which you want store

0 6 : ( E m p t y )

Or

- . Press [PROGRAM], and press the One-Touch button directly.

0 6 : ( E m p t y )

- . Press [PROGRAM] to start to store the message into the One-touch button

- . Press [CID]. The LCD will display

T O M M Y T E C O M  
( N a m e ? )

- . Press [PROGRAM] to confirm the name and continue to save the number

0 3 5 7 7 5 1 4 1  
( N u m b e r ? )

- . Press [PROGRAM] again to store the name and number into directory, a confirmation beep will be heard.  
The LCD will display:

T O M M Y T E C O M  
0 6 : O K !

Note: The user can use the [<] or [>] to backspace and forward the cursor position.

#### 5. Caller ID on Call Waiting ( Type II Call ID )

This is a telephone service which identifies a waiting caller without interrupting your current call.  
This feature gives you the informed choice of whether or not to take the incoming call.  
The operation is the same as the normal operation. Please see the example below:

- . Suppose that you are talking on Line#1. The LCD displays:

J O H N S M I T H  
L 1 : 8 6 2 1 2 3 4 5 6 7

- . After hearing a short CPE Alert Signal (CAS), the LCD will display the new incoming Caller ID automatically.

If you want to view the new incoming Call ID of this line when you are doing something else,  
press [>] and see the Caller ID of the waiting caller:

S H E R R Y S O H O

|                           |
|---------------------------|
| L 1 : 5 6 8 5 5 5 4 5 6 7 |
|---------------------------|

And, the LCD icon will display “CALL WAITING”  
Press [>] again, the LCD will back to the normal display.

|                         |
|-------------------------|
| 8 6 2 1 2 3 4 5 6 7     |
| S p e a k e r m m : s s |

----- **END** -----