 


EN

USER MANUAL

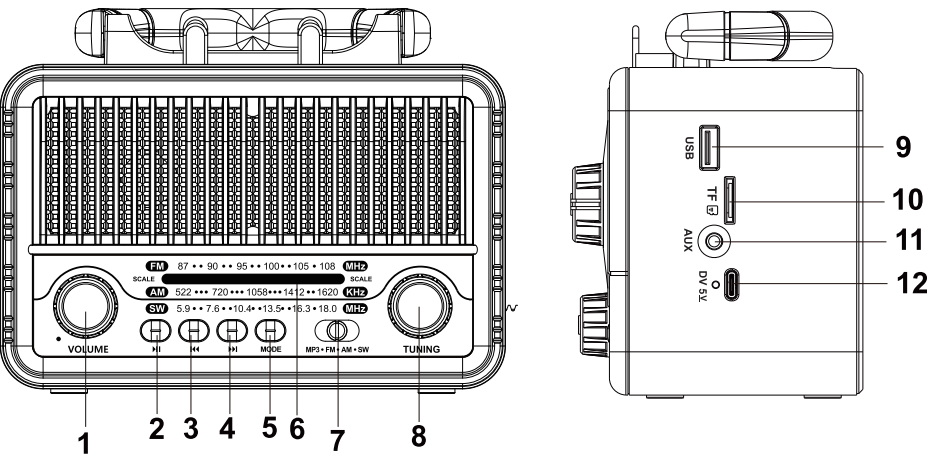

- ①Volume Knob/Power

②Play/Pause

③Fast backward button

④Fast-forward button
- ⑤Modes Switch

⑥Tuning Indicator

⑦Band selector

⑧Tuning Knob
- ⑨USB port

 
⑩TF card socket

⑪AUX port

⑫Type-C charging port

DE

Gebrauchsanweisung

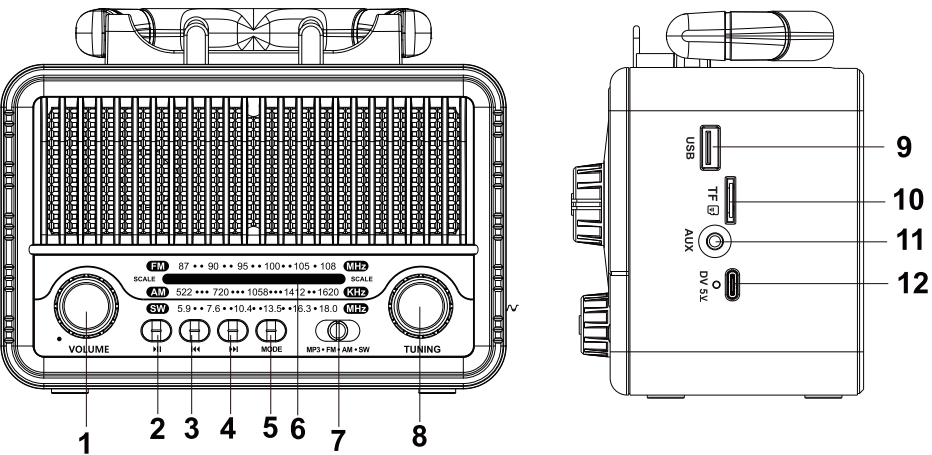

- ①Lautstärkeregler/Ein-/Ausschalter

②Wiedergabe/Pause

③Rückspul-Taste

④Vorspul-Taste
- ⑤Moduswechsel

⑥Frequenzanzeige

⑦Wellenbereichswähler

⑧Senderwahlknopf
- ⑨USB-Anschluss

 
⑩TF-Kartensteckplatz

⑪AUX-Anschluss

⑫Type-C Ladeanschluss

IT

Manuale Utente

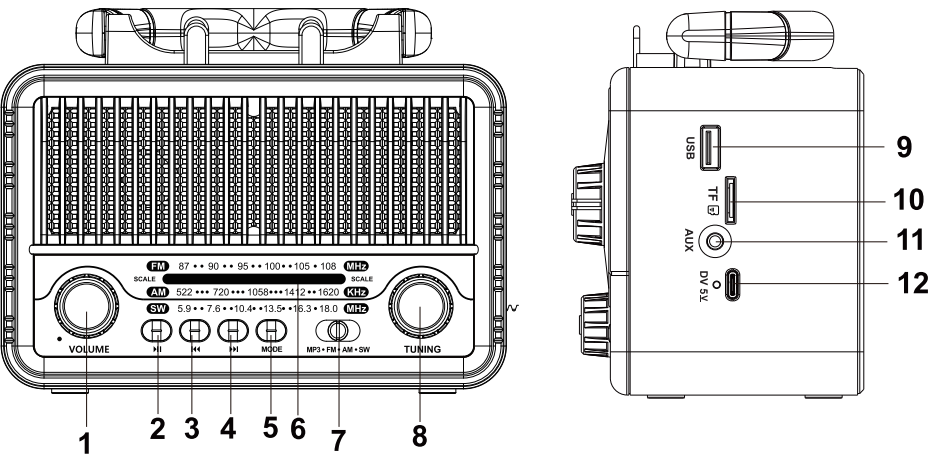

- ①Manopola/Interruttore Volume

②Riproduci/Pausa

③Pulsante indietro veloce

④Pulsante avanti veloce
- ⑤Commutatore di modalità

⑥Righello della stazione

⑦Selettore di banda

⑧Manopola di selezione della stazione
- ⑨Connettore USB

 
⑩Presca scheda TF

⑪Presca AUX

⑫Jack di ricarica Tipo-C

FR

Manuel d'utilisation

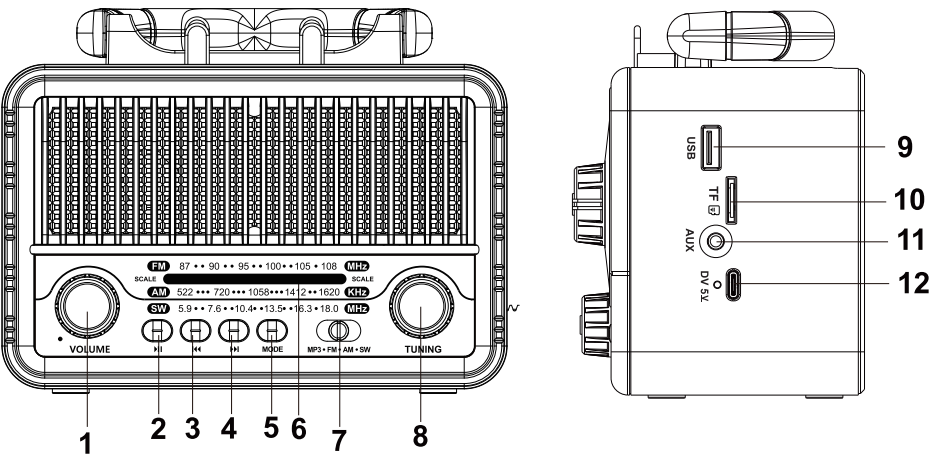

- ①Bouton de volume/interrupteur

②Lecture/Pause

③Touche de retour rapide

④Touche d'avance rapide
- ⑤Changement de mode

⑥Règle de position de table

⑦Sélecteur de bande

⑧Bouton de sélection de station
- ⑨Fente USB

 
⑩Fente pour carte TF

⑪Prise AUX

⑫Fente de chargement Type-C

JP

取扱説明書

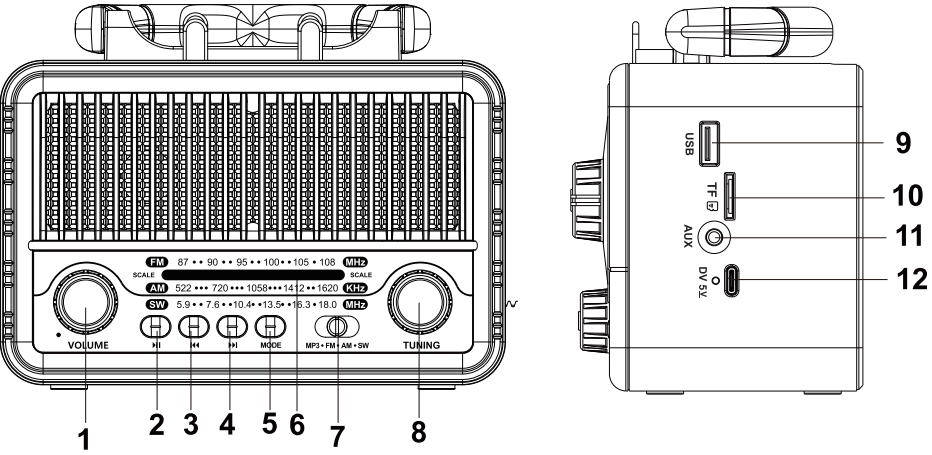

- ①音量ノブ/スイッチ

②再生/一時停止

③早戻しボタン

④早送りボタン
- ⑤モード切替

⑥ステーション定規

⑦バンドセレクター

⑧ステーション選択ノブ
- ⑨USB 端子

 
⑩TF カード端子

⑪AUX 端子

⑫Type-C 充電端子

ES

Manual de Instrucciones

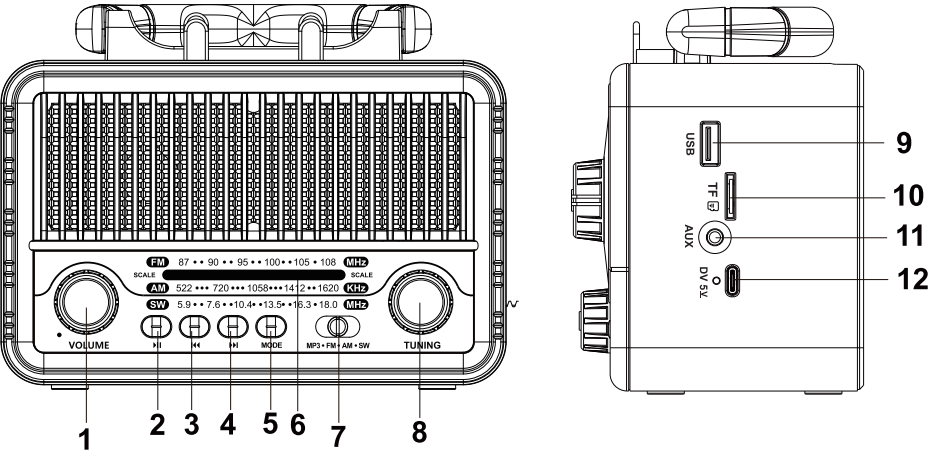

- ①Perilla/interruptor de volumen

②Reproducir/Pausa

③Botón de retroceso rápido

④Botón de avance rápido
- ⑤Conmutador de modo

⑥Regla de emisora

⑦Selector de banda

⑧Perilla de selección
- ⑨Toma USB

 
⑩Toma de Tarjeta TF

⑪Toma AUX

⑫Toma de carga de Tipo C

中文

说明书

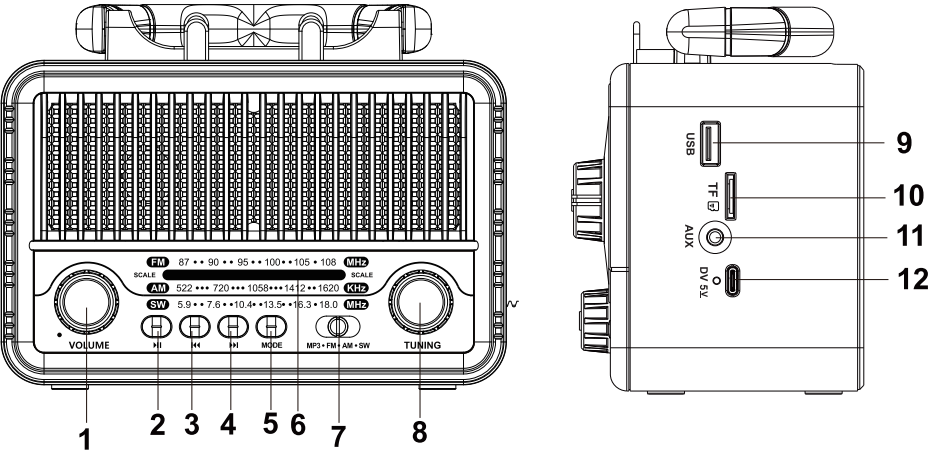

- ①音量旋钮/开关

②播放/暂停

③快退键

④快进键
- ⑤模式切换

⑥台位尺

⑦波段选择器

⑧选台旋钮
- ⑨USB 插孔

⑩TF 卡插孔

⑪AUX 插孔

⑫Type-C 充电插孔

I、Radio:
1. Turn the volume knob to turn on the radio and adjust to the appropriate volume. Use the band selector to choose MP3/FM/AM/SW mode. For better reception, please adjust the direction of the fuselage when listen to AM radio, pull out the tie rod antenna and adjusted to the appropriate position when listen to FM radio. Rotate the frequency selector knob, check the position of the tuning pointer in the indicator window, and select the station you want to listen to.

II、MP3 player:
1. Turn the band selector knob to MP3 mode, MP3 mode have 3 ways to play: Bluetooth / U-Disk / TF card. The “⑤” button can switch between this 3 modes, every time you switch mode will have voice prompts. (Note: TF card / U disk mode needs to insert the device before using).
2. Bluetooth name: MG002, you can search and connect it on your Bluetooth enabled device.
3. U-Disk / TF card support MP3/WMA/WAV format file.
4. The radio will automatically play the first inserted audio device (USB disk/TF card) in MP3 mode.

III、Pre-cautions
1. The radio is built-in lithium battery, please charge in time when the radio signal and music playback jam.
2. It's recommended to use DC/5V power supply charging, charging time is about 5 hours.
3. This radio can be powered by 2 D-batteries, please remove the dry batteries out of the battery compartment if you do not use the radio for a long time to prevent battery leakage.

IV、Technical Parameters

Frequency Range	FM: 87-108MHZ	Sensitivity	FM: 10dB
	AM: 520-1710KHZ		AM: 80dB
	SW: 5.9-18.0MHZ		SW: 10dB
Battery	3.7V/1200mAh	Product Weight	About 527.6g
Charging Input	DC 5V	Product Size	165*132*82mm



FCC Warning

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.