



Model

APP

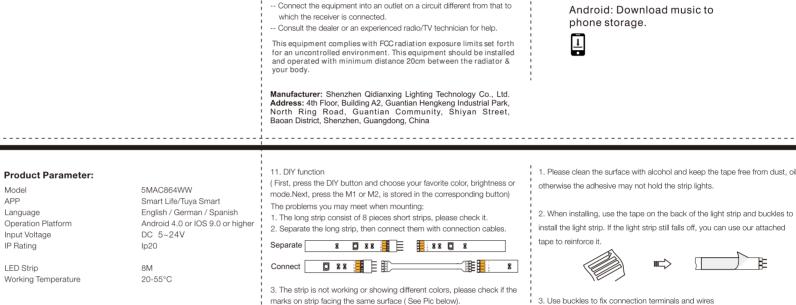

following measures:

-- Reorient or relocate the receiving antenna.

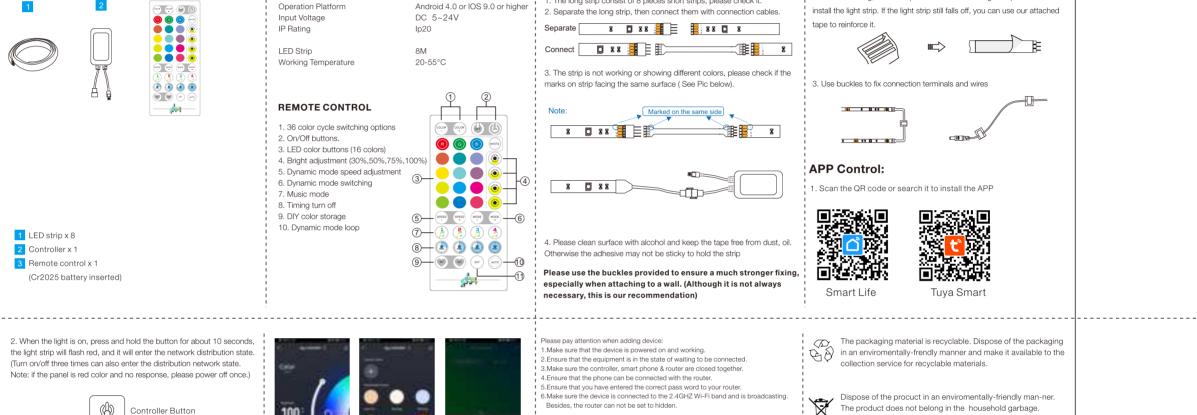

changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This device complies with Part 15 of the FCC Rules. Operation is subject

This equipment has been tested and found to comply with the limits for a

Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio

to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received,

frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.


However, there is no guarantee that interference will not occur in a particular

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the

user is encouraged to try to correct the interference by one or more of the

- Increase the separation between the equipment and receiver.

including interference that may cause undesired operation.

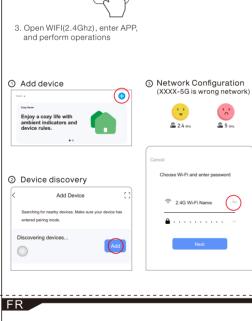

2. When the light is on, press and hold the button for about 10 seconds.

the light strip will flash red, and it will enter the network distribution state. (Turn on/off three times can also enter the distribution network state.

Note: if the panel is red color and no response, please power off once.)

Controller Button

1 LED strip x 8

2 Controller x 1

3 Remote control x 1

(Cr2025 battery inserted)



.Why can't my smart phone find the Wi-Fi signal of controller? Please check if the controller has been connected with router or not, at the same time the Wi-Fi function of phone work sproper .Why can't the controller connect with route

Firstly, please ensure to input the correct Wi-Fi password. If the password is correct and the controller still fails to connect with router, please shut down the controller and router, then turn on the router and the controller 30s later. And wait for 2 minutes before you start the APP. If the problem can not solved after the above operations, please restore factory defaults. .Why doesn't the controller show in the APP after choose the Wi-Fi

signal of the controller in the phone setting?
Please refresh the APP device list by sliding down on the screen. If still not find the controller, please try to shut down the function of smart Internet selection of your smart phone settings. This is to avoid unavailable network.

5MAC864WW

DC 5~24V

lp20

Smart Life/Tuya Smart

English / German / Spanish

Android 4.0 or IOS 9.0 or higher

Caractéristique

Plateforme d'exploitation

Tension d'entrée

Classement IP

Modèle

Langue

APP

'.Make sure that the encryption of router setting is WPA2-PSK and the type of certification is AES or both are set to automatic. Wireless mode can not be 11n only. WPA2-PSK 11n only AES

9.If the router accesses devices number reach the limit, try to shut down the Wi-Fi function of some devices and clear the channel in order to reconfigure. 10. If the router opens wireless MAC address filter, try to remove the device out of router MAC filter list and make sure the router does not forbidden netwo

8. Make sure that the Wi-Fi name consist of English letters

The packaging material is recyclable. Dispose of the packaging in an environmentally-frendly manner and make it available to the

Tips for music function

Q: Why APP music function can't

play music?(as shown)

phone storage or SD card.

IOS: Download music from your computer's iTunes to your phone

A: no downloaded music in

♬→╚┹→█

Solution:

storage.

The product does not belong in the mouseined surger.

Dispose of it at a recycling centre for old electric and elec-tronic equipment. For more information, please contact the administration in your community.


Batteries and rechargeable batteries must be removed and disposed of separately before disposing of the product. To protect the environment, batteries and rechargeable batteries may not be disposed of together with normal household waste. Instead they must be turned in at appropriate collection points.


Please also observe applicable statutory provisions regulating the disposal of batteries.

SERVICE PROCEDURE

If you have any questions, please open your order page, and click button "Get help with order" to describe your issues, our customer service team will reply you within 24 hours.

. Return it back without any reason within 30 days after receipt of goods. Get refund or replacement without shipping rate within 30 days 3. Get free replacement parts (need to cover shipping rate) within 365 days.

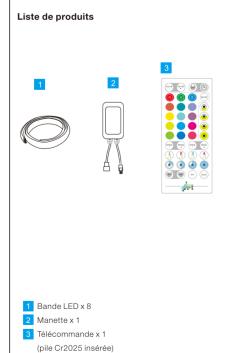

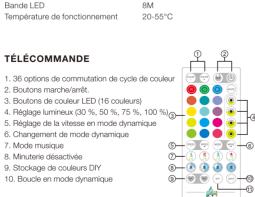

11. Fonction bricolage (Tout d'abord, appuyez sur le bouton DIY et choisissez votre couleur, luminosité ou mode préféré. Ensuite, appuyez sur le M1 ou M2, est stocké dans le bouton correspondant) Les problèmes que vous pouvez rencontrer lors du montage :

1. La longue bande se compose de 8 bandes courtes, veuillez la vérifier. 2. Séparez la longue bande, puis connectez-les avec des câbles de connexion

Relier 3. La bande ne fonctionne pas ou affiche des couleurs différentes, veuillez vérifier si les marques sur la bande font face à la même surface (voir la photo ci-dessous). Marqué du même côté

1. Veuillez nettoyer la surface avec de l'alcool et garder le ruban exempt de poussière et d'huile. sinon, l'adhésif risque de ne pas tenir les bandes lumineuses.

2. Lors de l'installation, utilisez le ruban adhésif à l'arrière de la bande lumineuse et des boucles pour installer la bande lumineuse. Si la bande lumineuse tombe toujours, vous pouvez utiliser notre ruban adhésif pour la



Contrôle d'application : 1. Scannez le code QR ou recherchez-le pour installer l'APP





