

## USER MANUAL

1. Install the battery: Open the battery compartment cover at the bottom of the mouse, load the battery according to the positive and negative pole logos, and then close the compartment cover.
2. Connect to the computer: Plug the USB receiver into the USB port of the computer. The driver is automatically recognized and installed by your computer (some systems may not require manual installation).
3. Get started: After the computer recognizes it successfully, you can move the mouse to operate. When you move the mouse, the cursor moves accordingly across the screen; Click the left button to confirm the operation, and click the right click to pop up the menu; The scroll wheel allows you to scroll up and down the page.

### Description of the function buttons

1. Left-click: Commonly used to select, open, or perform an action on a file.
2. Right-click: Click to pop up the relevant menu to provide more operation options.
3. Scroll wheel: scroll up or down to browse pages, documents, etc.; Press the scroll wheel to switch to the middle button for quick page movement.
4. DPI Toggle Key: Some mice are equipped with this button, which allows you to switch between different DPI (dots per inch) values when pressed, so as to adapt to different usage scenarios and personal preferences. For example, 800DPI is suitable for office, and 1600DPI is suitable for gaming.

### Precautions

1. Environment: Avoid direct sunlight, high temperature, humidity or dusty environment, so as not to affect the performance of the mouse.
2. USB Receiver: Please keep the USB receiver in a safe place, if you lose it, the mouse may not be usable. If the receiver is damaged, you can contact customer service for consultation and purchase.
3. Battery replacement: When the mouse is unresponsive or the

pointer does not move smoothly, it may be that the battery is low, please replace the battery in time. Waste batteries should be properly disposed of in accordance with environmental protection requirements.

4. Interference problems: If the signal is unstable or interferes during use, it may be interfered by other wireless devices nearby. Try moving away from devices such as microwave ovens, wireless routers, or changing the plugged in position of the USB receiver.