

cut line
fold line

DO NOT PRINT
how to fold: Z-FOLD
back side will be all blank

Instructions Header: futura now,
9pt/10pt size, 70 tracking, ALL
CAPS, center alignment, black
color
Instructions Copy: futura, 9pt/10pt
size, 70 tracking, Sentence case,
center alignment, black color

Instructions Area
use a mix of illustrations and
copy to explain product

11in

Caution Statement Area

Caution Header: futura now,
8pt/9pt size, 70 tracking, ALL CAPS,
center alignment, black color
Caution Copy: futura, 8pt/9pt size,
70 tracking, Sentence case, center
alignment, black color

Product Name / Product Description:
futura, 20pt/21pt size, 70 tracking,
lowercase, center alignment, black color

Space for Finished Product
Photo / Illustration

kate spade
NEW YORK

turntable

INCLUDED:
1. Turntable
2. RPM adapter
3. Wall adapter with cable
4. RCA cable

SET UP:
• Place the turntable onto a sturdy, flat, stable surface. Anything that is regularly bumped or receives vibrations may cause the record to skip.
• Prior to the first use, charge the turntable for approximately 3.5 hours (solid red light - charging, red light off -charging complete).
• To charge, plug the cable of the wall adapter into the power port on the back of the turntable. Then, plug the opposite end of the wall adapter cable into a grounded wall outlet.
• Remove the protective white cover from the stylus.

PLAYING A RECORD (PHONO):
• Open the lid and place a record on the platter.
• Power on the turntable and switch the mode dial to phono to use the built-in speakers.
• Use the RPM switch to match the rotation of the platter to the size of record you will be listening to. Be sure to use the 45 RPM adapter when playing a 45.
• Release the tonearm lock and use the tonearm lever to raise the tonearm.
• Slide the tonearm above the record. When you slide it over, the platter will start to spin, use the tonearm lever to gently place the needle onto the record.
• When the auto stop switch is in the "off" position, the platter will continue to spin even after the record is done playing. The stylus will remain on the record.
• When the auto stop switch is in the "on" position, the platter will stop spinning after the record is done playing. The stylus will still remain on the record.
• While there is a record on the platter, be sure to keep the turntable lid open.

45 RPM ADAPTER:
• 45's are smaller records with larger holes in the center of them and will require the 45 RPM adapter.
• To play a 45, place the adapter into the desired record.
• Place the record on the platter as you usually would.
• Change the RPM switch to 45.
• Release the tonearm lock and use the tonearm lever to raise the tonearm.
• Slide the tonearm above the record. When you slide it over, the platter will start to spin, use the tonearm lever to gently place the needle onto the record.
• While there is a record on the platter, be sure to keep the turntable lid open.
• Slide the RPM switch to 33; 45 or 78 to match the play speed of the record.

CHARGING INDICATOR:
• Solid Red - Charging
• No Red Light - Charging complete

POWER INDICATOR:
• Flashing Red - Pairing with BT out mode
• Flashing Blue - Pairing with BT in mode
• Solid Red - Paired with BT out mode/Phono
• Solid Blue - Paired with BT in mode/Power On
• Solid Pink - Aux in
• No Light - Power off

SOUND INDICATOR:
• Ascending Tones - Power on
• Three Rapid Tones - Ready to pair/Searching/Disconnected
• Double Chime - Paired

OPEN CASE

When using the stylus for the first time be sure to remove the protective white cover from the stylus.

BACK

only at Target
Information

Find everything for your celebration only
at Target.com

WARNING:
CHOKING HAZARD—Small parts.
Not for children under 3 years.

© 2025 Target. The Bullseye Design is a registered trademark of Target Brands, Inc. All rights reserved.

kate spade
NEW YORK

turntable

USING A BLUETOOTH™ SPEAKER (BT OUT):
• Make sure the turntable is powered off.
• Open the lid and place a record on the platter.
• Put your Bluetooth speaker into pairing mode. Make sure it is not connected to any other devices. If it is, unpair it.
• Power on the turntable, make sure the volume is not turned up too high.
• Switch the mode dial to "BT out" the indicator light will start to flash red when it is ready to pair.
• The speaker and turntable will automatically pair after about 20 seconds.
• Use the RPM switch to match the rotation of the platter to the size of record you will be listening to. Be sure to use the 45 RPM adapter when playing a 45.
• Release the tonearm lock and use the tonearm lever to raise the tonearm.
• Slide the tonearm above the record. When you slide it over, the platter will start to spin, use the tonearm lever to gently place the needle onto the record.
• When the auto stop switch is in the "off" position, the platter will continue to spin even after the record is done playing. The stylus will remain on the record.
• When the auto stop switch is in the "on" position, the platter will stop spinning after the record is done playing. The stylus will still remain on the record.
• While there is a record on the platter, be sure to keep the turntable lid open.

AUX IN:
• Plug one end of the AUX cable into the back of the turntable and the other end into the device you would like to play from.
• Switch the mode dial to aux in. The indicator light will turn solid pink.
• Power on the turntable, make sure the volume is not turned up too high.
• Once connected, use your device to play and control the audio that will play through the turntable speakers.

USING HEADPHONES:
• While listening to a record, plug in any set of headphones with a 3.5mm audio jack into the top of the turntable.
• The turntable will automatically start to play through the headphones.
• Use the volume dial to control the volume. Note: be mindful of the cable length on the headphones while listening.

MAINTENANCE TIPS:
• Vinyl records should be cleaned with anti-static cloth for maximum enjoyment.
• Needle (or stylus) should be replaced every 250 hours or as soon as you notice a change in sound quality.
• Dust the stylus from time to time with a very soft brush dipped in alcohol (brush from back to front of the cartridge).
• To avoid scratching or damaging your records, be sure to use the tonearm lever to raise and lower the tonearm.

TROUBLESHOOTING:
• If the turntable is not working, make sure that the cable of the wall adapter is plugged into the power port and into a grounded wall outlet.
• If the record sounds sped up or slowed down, check and adjust the RPM switch.
• If you're playing a 45 and having issues make sure that you're using the 45 adapter.
• If the turntable makes no sound make sure that it is turned on, the volume is up and the stylus cover is removed.
• If the turntable still makes no sound, make sure the correct mode is selected.
• If you're using the Bluetooth out (BT out) function and there is no sound, be sure that you're following the steps in the proper order, or the turntable will not properly connect to the speaker.
• If the turntable makes no sound and does not show as an available device when in Bluetooth mode, make sure it is in the correct mode and not paired. If it is paired, unpair and repair to the desired device.
• If the turntable makes no sound when using AUX in, make sure the turntable is in the correct mode and the cables are properly connected.
• If the turntable makes no sound using headphones, make sure they are properly plugged in and the volume is turned up.
• This turntable does not have a pairing code; if you are prompted for one, make sure you are connecting to the correct device. If you already are, "forget" the device and repair it. If you are still prompted, enter 0000.

CONNECTING TO THE TURNTABLE (BT IN):
• Power on the turntable, make sure the volume is not turned up too high.
• Switch the mode dial to "BT in" the indicator light will start to flash blue when it is ready to pair.
• Use the Bluetooth settings on your device to pair with "Let's dance".
• When the connection is successful you will hear a chime and the indicator light will turn blue.
• Turn up the volume dial on the turntable and use your device to control the volume.

RCA SETUP:
• Open the lid and place a record on the platter.
• Connect the included RCA cable into ports on the back of the turntable, and into your speakers. Note: the red side is right and the white is left.
• Power on the turntable, make sure the volume is not turned up too high.
• Switch the mode dial to phono. The indicator light will turn solid red.
• Use the RPM switch to match the rotation of the platter to the size of record you will be listening to. Be sure to use the 45 RPM adapter when playing a 45.
• Release the tonearm lock and use the tonearm lever to raise the tonearm.
• Slide the tonearm above the record. When you slide it over, the platter will start to spin, use the tonearm lever to gently place the needle onto the record.
• While there is a record on the platter, be sure to keep the turntable lid open.

only at Target

Find everything for your celebration only
at Target.com

© 2025 Target. The Bullseye Design is a registered trademark of Target Brands, Inc. All rights reserved.

kate spade
NEW YORK

turntable

SAFETY:
• Do not use near any water source.
• Do not modify or repair this device.
• Do not use in high temperatures or extreme weather.
• Do not use chemical detergents to clean your device, use a soft dry cloth.
• Do not drop the product and do not expose it to any major shocks.
• Do not operate the product outside the power limits given in the specifications.
• Protect the product from dirt, moisture, and overheating and use it in dry rooms only.
• As with all electrical devices, this device should be kept out of the reach of children.

REPLACING THE NEEDLE:
① Needle Container
② Cartridge
③ To replace the needle, press down on the front edge of the container holding it and slide it forward to remove.
④ Slide the new needle on and press up. You will hear it click into place when it is on properly.

When the audio starts to become fuzzy or you've passed 250 hours of playtime, the needle (or stylus) may need to be replaced.

For needle replacement size, most diamond tip needles will be compatible with this turntable. Take caution to ensure that you are replacing only the needle and not the cartridge.

RESETTING THE BELT:
① First, using a flathead screwdriver push the gasket that holds the platter in place off of the spindle. Be sure not to lose the gasket.
② Lift the platter up and off of the base of the platter, make sure it is above the lip.
③ Pull the belt out from under the platter. Place the platter back on the spindle while holding the belt, be sure it is past the pulley and release the belt when the platter is in place.
④ Set the tonearm to activate the belt to ensure it is on properly. Replace the gasket onto the spindle.

only at Target

Find everything for your celebration only
at Target.com

WARNING:
CHOKING HAZARD—Small parts.
Not for children under 3 years.

© 2025 Target. The Bullseye Design is a registered trademark of Target Brands, Inc. All rights reserved.

FRONT/
PAGE 1

PAGE 2

PAGE 3

25.5in