

## User's Manual

### Electronic Key

FCC ID:2AOKM-GV18

IC :24223-GV18

MODEL:RT-GM4ES

P/N: RT-G0711,RT-G0712,RT-G2890,RT-G5663,RT-G2891,RT-G0713,RT-G2885,RT-G2886,RT-G0513,RT-G0515 This remote has lock, unlock, Remote Start , Plug Off, Convertible Top, Trunk,Power door release and panic buttons; you can lock and unlock the vehicle doors and Remote Start /Power door release with the remote transmitter.

#### LOCK Button:

When you press the LOCK button, it locks all the doors.

Once:

Some exterior lights flash, all the doors and fuel fill door lock, and the security system sets.

Twice:(within five seconds after the first push):

Some exterior lights flash, the beeper sounds and verifies the security system is set.

#### UNLOCK Button:

Pressing the button unlocks the driver's door. Pressing the button again within 5 seconds unlocks the other doors.

Once:

Some exterior lights flash twice, and the driver's door and fuel fill door unlocks

Twice:

Some exterior lights flash twice, and the remaining doors unlock.

#### Remote Start Button:

Press and release LOCK and then immediately press and hold this button for at least four seconds to start the vehicle's heating or air conditioning systems and rear window defogger from outside the vehicle using the remote key

#### Plug Off Button:

Pressing the button the Plug will be open and off.

#### Convertible top Top Button:

If equipped, press and release Unlock,then immediately press and hold the Convertible top button continuously to open the convertible top all the way. The vehicle must be off to operate the convertible top with the remote key.The top will stop movement approximately one second after the Convertible top button is released. To stop

the top immediately, press Truck, lock and Unlock button on the remote key. The Convertible top button will only open the convertible top. The convertible top can also be opened using a button in the overhead console

#### TRUNK Button:

Press the trunk release button for approximately one second to unlock and open the trunk

#### Power door release Button:

Press the Hatch release button for approximately one second to unlock and open the Power door release

#### PANIC Button:

Press and release one time to initiate vehicle locator. The exterior lamps flash and the horn chirps three times. Press and hold the button for at least three seconds to sound the panic alarm. The horn sounds and the turn signals flash for about 30 seconds or until this button is pressed again or the vehicle is started.

**FCC COMPLIANCE STATEMENT:**

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**IC WARNING:**

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

(1) This device may not cause interference.

(2) This device must accept any interference, including interference that may cause undesired operation of the device

**ADVERTENCIA IC**

Cet appareil contient des émetteurs / récepteurs exemptés de licence conformes aux RSS (RSS) d'Innovation, Sciences et Développement économique Canada. Le fonctionnement est soumis aux deux conditions suivantes :

(1) Cet appareil ne doit pas causer d'interférences.

(2) Cet appareil doit accepter toutes les interférences, y compris celles susceptibles de provoquer un fonctionnement indésirable de l'appareil.