#### Specification

Processor	Hexa-Core 1.8GHz
OS	Android 9 or 11
Memory	4GB RAM, 16GB ROM
Display	21.5-inch LCD Touch Screen, Resolution1080*1920
Thermal Printer	Paper Width 80mm, Φ80mm, with auto cutter Printing Speed: 150mm/s
Camera(Optional)	Single-lens Camera Dual-lens Camera 3D Depth Sensing Camera
1D/2D Barcode Scanner	Support
Communications	Wi-Fi/Bluetooth/NFC
Audio	Digital Audio Speaker
Power Supply	24V/5A
Others(Optional)	Wall-Mounting Bracket Floor-Stand Check-Out Desk
Environmental	Operating temperature: -5℃~ 45℃ Storage temperature: -25℃~ 60℃
MDM (Optional)	Mobile Device Management

## Accessories

Main Device	1 set
AC Power Adapter	1 Piece
Printing Paper	1 Roll
Key	2 Pieces
User Guide	1 Volume

Before using the device, ensure that all the accessories above are included in the package.

If you have any problems, please contact the services provider of the distributors.


# Printing Paper Replacement


1. Use the key to open the front cover of the printer.

2. Trigger to open the paper bin cover.


3. After loading the thermal paper, close the paper bin cover and printer front cover.

Tip: When you turn on the device at the first time, if the printer detects there is no paper, it will continue to beep until loading the paper.

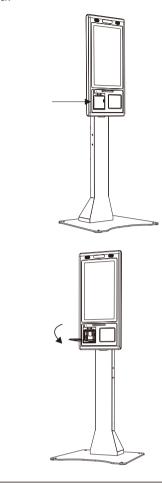

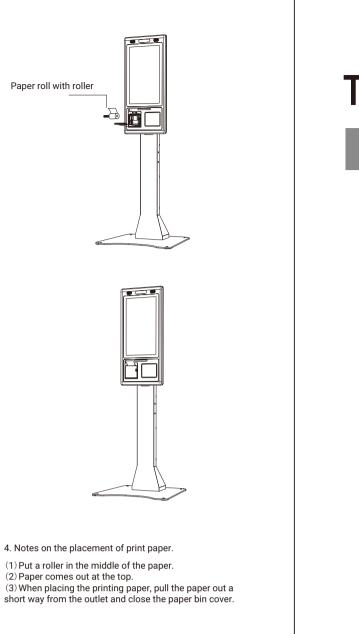

<image><image><image><section-header>

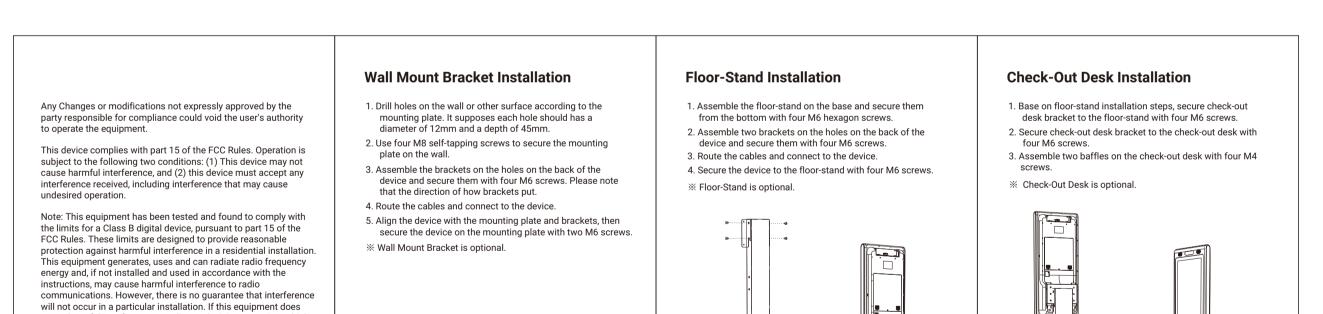



cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.
Increase the separation between the equipment and receiver.
Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator& your body.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

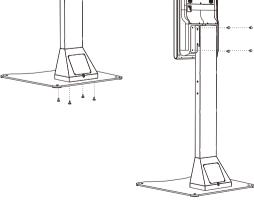

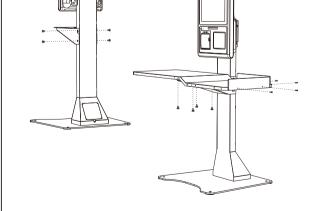

### Accessories

Bracket	2 Sets
Mounting Plate	1 Set
M6 Screw	6 Pieces
M8 Self-Tapping Screw	4 Pieces

#### Accessories

Floor-Stand	1 Set
Bracket	2 Sets
Base	1 Set
M6 Hexagon Screws	4 Pieces
M6 Screw	8 Pieces

#### Accessories

Floor-Stand and Base	1 Set
Check-Out Desk	1 Set
Check-Out Desk Bracket	1 Set
M6 Screw	8 Pieces
M4 Screw	4 Pieces