



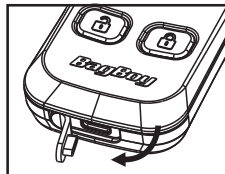

## Remote User Manual

### Remote Control

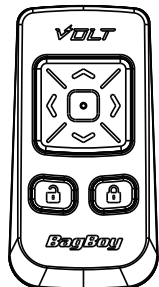

#### Charging

- Before using the Remote, please make sure that it is fully charged. The Remote contains a rechargeable lithium battery. Charge the Remote with the provided USB cable, and the charging port is located under the rubber cover located at the bottom of the Remote.
- The blue LED light flashes when charging is in progress, and it will remain solid when fully charged.
- When the battery level of the Remote is low, the blue LED and the red LED will start to flash at the same time. And the low battery icon of the Remote will display on the display screen.
- When the battery is completely drained, no LED lights will light up when any button is pressed.
- The keypad will be locked while charging.
- A full charging process takes about 3 hours.

### Compliance Statement

- **FCC WARNING:**  
This equipment may generate or use radio frequency energy. Changes or modifications to this equipment may cause harmful interference unless the modifications are expressly approved in the instruction manual. The user could lose the authority to operate this equipment if an unauthorized change or modification is made.

This device complies with part 15 of the FCC Rules.

Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference.
  - (2) This device must accept any interference received, including interference that may cause undesired operation.
- The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

- **NOTE:**  
This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules.

- These limits are designed to provide reasonable protection against harmful interference in a residential installation.
- This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.
- However, there is no guarantee that interference will not occur in a particular installation.
- If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
  - (1) Reorient or relocate the receiving antenna.
  - (2) Increase the separation between the equipment and receiver.
  - (3) Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
  - (4) Consult the dealer or an experienced radio/TV technician for help.
- The rating information is located at the bottom of the unit.

- **INDUSTRY CANADA NOTICE:**  
This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions:
  - (1) This device may not cause interference.
  - (2) This device must accept any interference, including interference that may cause undesired operation of the device.The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

- Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes:
  - (1) l'appareil ne doit pas produire de brouillage.
  - (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.le dispositif a été évalué à satisfaire l'exigence générale de l'exposition aux RF. l'appareil peut être utilisé dans des conditions d'exposition portatif sans restriction.

- Responsible party:  
Dynamic Brands  
2701 Emerywood Pkwy., Ste. 200  
Richmond, VA 23294  
USA  
(804) 726-1343



CAN ICES-3(B)/NMB-3(B)

### Remote Control

#### Operating Remote

- 1 . Forward Button
  - The starting speed is level 2. Each tap increases 1 speed level, maximum is level 9.
  - Press and hold the Forward Button to speed up the motor quickly. (accelerate to level 9 in 3 seconds)
- 2 . Down Button
  - When the brakes are activated, press and hold Down Button to move the cart in rverse.
  - While moving forward, every time you tap the Down Button, the speed will be reduced by 1 level, and the minimum speed is level 1.
- 3&4. Left / Right Button
  - Tap the Left / Right Botton, then the cart will turn slightly and continue to move forward.(no matter if the cart is moving or not)
  - Press and hold the Left / Right Button, then the cart will keep turning Left / right until release the button.
- 5 . Stop Button
  - The cart stops when pressed in any state.
- 6 . Unlock Buton
  - If the Remote control keys are locked, press the Unlock Button to unlock the keypads.
  - Press any button when the keypad unlocked, the blue LED will light up.
- 7 . Lock Button
  - Press the Lock Button to limit and prevent unexpected control.
  - Press any button when the keypad locked, the blue LED will light up.
- 6+7. Unlock + Lock Button
  - Press these two buttons at the same time to activate the pairing mode.
- 8 . Charging Port
  - USB-C port
  - The keypad will be locked while charging



1. Press and hold the Lock & Unlock buttons on the Remote at the same time until the blue and red LED blink alternately. Then the Remote will enter into the pairing mode and continue sending the pairing signal for 60 seconds.
2. When the pairing is complete, you can press and hold the Unlock Button for 3 seconds to exit the pairing mode.  
**\*The Remote will automatically exit the pairing mode after 60 seconds.**
3. The keypad of the Remote will be locked during the pairing mode except for the Unlock Button.

States	Description of LED lights
Low battery	The blue and red LED keep flashing.
Battery fully charged	The blue LED stays on.
Bettery is charging	The blue LED keep flashing.
Ready to pair	The blue LED and red LED flash separately.
Keypad is locked	The blue LED lights up while pressing any button.
Keypad is unlocked	The red LED lights up while pressing any button.

### Battery Safety

- **Danger!** Failure to observe the following precautions may result in battery leakage, overheating, explosion and or fire.
- Do not immerse the battery in water or allow it to get wet.
- Do not use or store the battery near sources of heat such as a fire or heater.
- Do not reverse the positive (+) and negative (-) terminals.
- Do not connect the battery directly to wall outlets or car cigarette - lighter sockets.
- Do not put the battery into a fire or apply direct heat to it.
- Do not use any chargers other than those recommended by Bagboy
- Do not short - circuit the battery by connecting wires or other metal objects to the positive (+) and negative (-) terminals.
- Do not carry or put the battery together with necklaces, hairpins or other metal objects.
- Do not strike, throw or subject the battery to sever physical shock.
- Do not pierce the battery casing with a nail or other sharp object, break it open with a hammer, or step on it.
- Do not directly solder the battery terminals.
- Do not attempt to disassemble or modify the battery in any way.
- Do not recharge the battery near a fire or in extremely not conditions.

- **Dispose!** Bagboy care about the environment and encourage you to recycle. your batteries when they have reached the end of their life cycle. For battery systems, please follow local laws and regulations for recycling. Please dispose of your batteries properly by taking them to a recycling center near you or contacting your local customer service center for more safe and responsible disposal options.
- Please to not dispose of your battery system with regular household waste. As the end customer, you have an obligation to dispose of your battery system in the most environmentally friendly way possible.

### Battery Safety

- Failure to observe the following precautions may result in battery leakage, overheating, explosion and or fire.
- Do not place the battery in a microwave oven or pressurized container.
- Do not use the battery in combination with primary batteries (such as dry-cell batteries) or batteries of different capacity, type or brand.
- Do not use he battery if it gives off an odor, generates heat, becomes discolored or deformed, or appears abnormal in any way.
- Keep the batteries out of the reach of children. If a child somehow swallows a battery, seek medical attention immediately.
- If the battery leaks or emits an odor, immediately remove it from the proximity of any exposed flame. The leaking electrolyte can ignite and cause a fire or explosion.
- If the battery leaks and electrolyte gets in your eyes, do not rub them. Instead, rinse them with clean running water and immediately seek medical attention. If left as is, electrolyte can cause eye injury.
- Do not use or store your Remote control in areas that are exposed to extremely high temperatures, such as under a car window in direct sunlight on a hot day. Doing so may cause your Remote' s battery to overheat, which may lead to reduced battery performance.
- Use the battery only under the following environmental conditions. Failure to do so can result in reduced performance or a shorten service life. Recharging the battery outside of these temperatures can cause the battery to overheat, explode or catch fire.
- Operating environment:
  - (1) When charging the battery:10°C ~ 45°C
  - (2) When discharging the battery:-20°C ~ 60°C
  - (3) When stored up to 180 days:-20°C ~ 30°C