
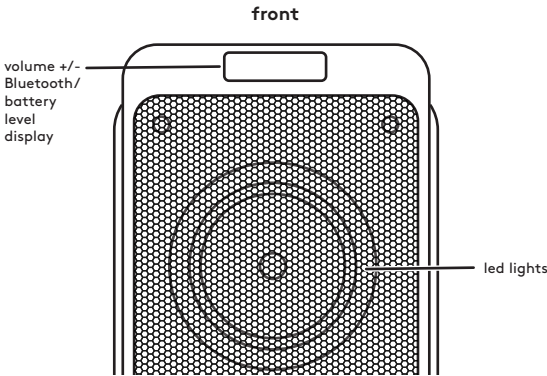


cut line

fold line

3.8 inch

large party speaker

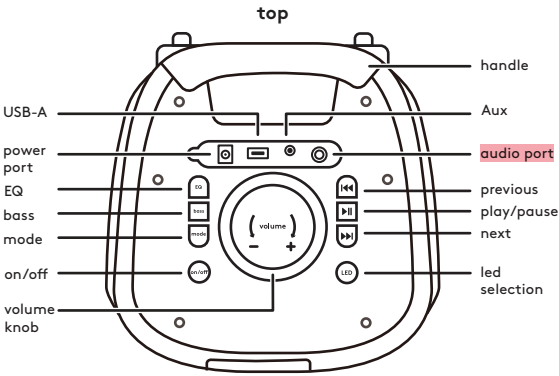

- included**
- Large party speaker
 - Wall adapter with cable

- charging**
- Place the speaker on a sturdy flat surface
 - Plug the cable of the wall adapter into the power port on the top of the speaker
 - Plug the wall adapter into a grounded wall outlet
 - If you need to use a different power source make sure it is a power supply of DC 9V/1.5A minimum warning: please use UL-compliant power supply
 - Full charge requires approximately 4 hours and will provide 12 hours of use
 - Charging is complete when the battery indicator on the display of the front turns red light off

- connecting via Bluetooth**
- If the speaker is not already turned on, hold the ON/OFF button on the speaker
 - Press the MODE button to change the source; you will hear one boil to indicate Bluetooth mode
 - Use the Bluetooth settings on your device to pair with **heyday party 02**
 - When the connection is successful, you will hear a chime and the red text on display will turn solid red
 - Adjust the volume on both the speaker and your device as needed

- TWS (true wireless stereo) pairing**
- You can pair two speakers of this same model together to get true stereo sound
 - Turn Bluetooth off on your device, place two matching speakers together;
 - Power one of both speakers on, and hold mode button to enter TWS paring, you will hear a chime when ready to pair. then power another speaker on and hold mode button accordingly
 - Both speakers will automatically pair, you will hear a chime when they pair
 - After the speakers are paired, use your device to connect to **heyday party 02**
 - To maintain TWS pairing, turn Bluetooth off on your device before powering the speakers back on; the speakers will pair automatically, then re-pair with your device note: to disconnect, hold the mode button at the same time on the speakers

- Aux/line in**
- Plug one end of your Aux cable into the top of the speaker and the other end into the device you'd like to play from
 - Press the ON/OFF button on the speaker
 - Press the MODE button on the speaker to switch to Aux

- FM radio**
- Press the MODE button on the speaker to switch to FM radio
 - Hold the PLAY/PAUSE button to search automatically
 - Use the PREVIOUS/NEXT button to change stations

- using the speaker**
- It is recommended that at the beginning of each session, the volume be adjusted to the minimum before turning the speaker on
 - adjust the volume using the volume knob on the speaker as needed
 - There are 4 EQ modes: Pop, Rock, Normal, News
 - There are 6 light modes; press the LED button on the speaker to cycle through then
 - using your microphone via **audio cable** (not included) can be plugged into the **audio port** of the speaker
 - Press the bass button to turn on/off; the indicator screen will display whether it's on/off

- troubleshooting**
- If the speaker is not working correctly, turn it on/off to restart
 - If the speaker won't turn on, recharge the battery and try again
 - If the speaker won't charge, make sure the power adapter is fully plugged into the unit and a grounded wall outlet
 - If the speaker makes no sound or does not show as an available device, make sure it is not paired to other devices, if so unpair the device and re-pair the desired device

need some help?
Can't get it to pair? Just have a question?



call us at: 1-833-TGT-Tech or: 1-833-848-8324

- safety**
- The speaker is splash resistant, do not submerge under water
 - Do not modify or repair this device
 - Do not use in high temperatures or extreme weather
 - Do not allow small particles to get into the product
 - Do not use chemical detergents to clean, use a soft dry cloth

heyday

FCC ID: 2AQ23-PS1 Model: PS1 Input: 9V \approx 1.5A Made in China
This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: 1) This device may not cause harmful interference, and 2) this device must accept any interference received, including interference that may cause undesired operation.
Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.
However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
• Reorient or relocate the receiving antenna.
• Increase the separation between the equipment and receiver.
• Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
• Consult the dealer or an experienced radio/TV technician for help.
Target Corp. Mpls. MN. 55403 Phone: 612-304-6073
For qualified repair specialists requesting repair information and parts please contact the original manufacturer at customersupport@gemsfindyours.com