

蓝色虚线为折叠线 不印刷

340mm

Thank you for choosing
Phomemo

Creator: Zuhai QUIN Graphics CO.,LTD
Address: 1 Cuizhu Street Building B 1st
Floor, Qianshan, Zhuhai, Guangdong,
PR.China

Email: support@phomemo.com
Website: www.phomemo.com

Non-warranty regulations

The warranty is void under the following conditions:

- ① Exceeding the warranty period.
- ② Not presenting the original warranty/maintenance card.
- ③ Presenting a damaged warranty/maintenance card (e.g. tearing tampering). Altering product information.
- ④ Damage caused by unauthorized repair, disassembling, etc.
- ⑤ Damage caused by human error.
- ⑥ Damage caused by natural disasters such as earthquakes, floods, windstorms, lightning strikes, or external disasters such as fires and house collapses.
- ⑦ Failure or damage caused by harsh conditions (oil, dust, moisture, direct sunlight, etc.) or failure to use or care for as required by the instruction manual.

FCC Caution

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Warranty/Maintenance Card

☐ Replace☐ Return☐ Repair

User Info

Name:Gender:Phone:Address:

Product information

Date of purchase:Product Order Number:Product Serial Number:

Return, Replace, or Repair Request

Reasons:

Maintenance records

Fault conditions:Processing situation:Repair ticket number:

Maintenance staff:Repair date:Date of inspection:

Product certification

Inspector:Date of manufacture:

Please read this manual carefully before using this product and store it properly.

Phomemo

Phomemo User Manual

85mm

340mm

Product Description

Paper Exit

Power button

USB interface

Paper Exit

Power button

Open cover switch

Power indicator status

	Light is steady	Standby/charging completed (If the printer was turn on)
	Slow flashing	Charging
	Fast flashing	Fault: out of paper / overheating
	Fast flashing	Low battery
	Light off	Shut down/ charging completed (If the printer was shut down)

Battery Warning Description

Never disassemble, impact, squeeze or put into fire; If there is severe swelling, do not continue to use;

Do not put in a high temperature environment. Do not use if immersed in water;

Be sure to replace with an appropriate type of battery. (There is danger of explosion if you replace it with the wrong type of battery.)

Be sure to dispose of the used battery as instructed.

Operation Guidance

1. Fully charge the battery before using the first time. To turn on the machine, press and hold the power button for 3 seconds.

Download APP

Download on the App Store

GET IT ON Google Play

2. Search for Phomemo and download the app.

Start printing via App

3. Turn on bluetooth, search for the device in the App and connect.

Start printing via App

Paper Replacement

1. Replace the paper by pushing the switch on the printer to open the cover.

2. Place the paper roll into the printer and straightened the paper as shown in the picture above.

Attention

- ① Insert or pull out the charge cable gently to avoid any damages to the port.
- ② Pull out the cable after charging is complete.
- ③ Do not charge or use the printer in high temperature, high humidity, or foggy circumstances (e.g. in a bathroom, a steam room or beside a fire) which may be dangerous. (NOTE: This machine is not suitable for tropical environments)
- ④ Improper charging methods may cause damages to the print head.
- ⑤ Do not touch the print head in case of high temperature.
- ⑥ Be aware of the sharp blade.

Phomemo official consumables types

Plain paper

With image retention up to 7 or 10 years.

Color paper

Include yellow, pink and blue paper..., with image retention up to 5 years.

Sticker Paper

With sticky glue, with image retention up to 10 years.

Sticky Note

With back glue, can be pasted and taken off at any time.

Continuous label paper

With sticky glue, with no fixed size, can freely set the printing length.

* The paperroll is the special paper for the Phomemo.

* The guarantee policies can not be enjoyed if the Phomemo failure is produced because the paperroll is not used.

Product Warranty Description

Thank you for choosing Phomemo.

1. The free warranty period is 1 year from the date of purchase.
2. Within 30 days from the date of user's receipt, the user can choose to return.

Please save the warranty/maintenance card properly. The warranty/maintenance card will not be replaced if lost.

85mm

标题: m02s说明书

图纸编号:

制图者	曾然	比例	1:1
时间		材料	双面印刷157g铜版纸
审批		大小	340x85mm

专利及保密协议：

这份图纸的所有信息，包括版权、设计及其他知识产权均属珠海趣印科技有限公司所有。此文件的条款不赋予你使用及复制产品，或拥有产品所有权的权利。上述权利均属珠海趣印科技有限公司所有。未经珠海趣印科技有限公司书面同意，严禁在任何情况下复制、披露、转载产品信息。

QUIN

ENJOY PRINTING