

CAUTION-ELECTRIC TOY
 NOT RECOMMENDED FOR CHILDREN
 UNDER 6 YEARS OF AGE. AS WITH ALL
 ELECTRIC PRODUCTS, PRECAUTIONS
 SHOULD BE OBSERVED DURING
 HANDLING AND USE TO PREVENT
 ELECTRIC SHOCK. INPUT: 120VAC,
 60HZ 5.5W ONLY. OUTPUT: 12VDC,
 0.2A

FCC NOTE:
 THE ANTENNA PROVIDED IS A UNIQUE ANTENNA.
 BY INSTALLATION OF UNAUTHORIZED ANTENNA
 TO THIS EQUIPMENT.
 SUCH UNAUTHORIZED INSTALLATION COULD VOID
 THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

OPERATING INSTRUCTIONS BATTERY INSTALLATION:


THE RECHARGEABLE NI-CD BATTERY PACK
 AND CHARGER MUST BE OPERATED BY
 ADULT ONLY
 THE RECHARGEABLE NI-CD BATTERY PACK IS
 NOT CHARGED. PLEASE CHARGE IT FOR
 8 HOURS PRIOR TO USE.

1. Plug the wall pack battery charger into wall outlet.
2. Connect the cables leading from the battery pack and charger together by snapping the jack and the socket tightly. (See Diagram 1)
3. To disconnect cables, press down on the clip and pull apart. (See Diagram 1)
4. You should charge the battery pack for 8 hours the first two times. Then subsequent charges will only require minimum 4 hours.
5. After charging for 4 hours, the battery pack will be warm. This condition is normal for fully charged batteries. If the speed of the car slows down suddenly, it is time to recharge.
6. After use, the battery pack will be hot! Wait at least 20 minutes until it cools before recharging.
7. Recharging a warm or hot battery pack will greatly shorten battery life.


BATTERY PACK CARE / CAUTIONS:

1. If battery pack and/or connectors are wet, thoroughly dry before charging.
2. Unplug the battery pack if it is not going to be used for several days.
3. Do not mix old and new batteries.
4. Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
5. Do not charge battery pack that is hot, wet or shows leakages or corrosion

6. Do not expose to fire, as explosion may result.
7. Do not disassemble the battery pack.

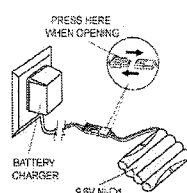

(DIAGRAM 1)

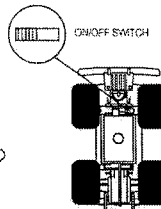

(DIAGRAM 2)


HOW TO INSTALL BATTERY IN VEHICLE:

- A. Make sure the ON/OFF switch is in the "OFF" position. (See Diagram 2)
- B. Turn the lid stopper in a clockwise direction to open battery lid. (See Diagram 3)
- C. Lift the battery lid to open and place the battery pack inside properly. (See Diagram 3)
- D. Plug the jack of the battery pack into the socket of the battery compartment. (See Diagram 3)
- E. Replace the battery cover.


HOW TO INSTALL BATTERY IN TRANSMITTER:

- A. Slide open the battery cover at the back of transmitter and place 2xAA batteries inside following the engraved (+) and (-) signs. (See Diagram 4)

- B. Replace the battery cover.

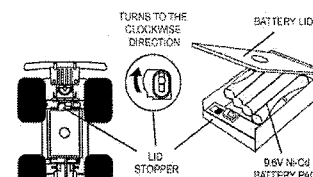

(DIAGRAM 3)

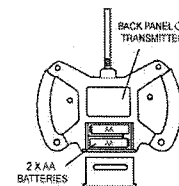

(DIAGRAM 4)

VEHICLE OPERATION:


- A. Pass the cable through the antenna tube provided and plug into the vehicle tightly. (See Diagram 5)
- B. Screw the antenna onto the top of the transmitter and extend to full length. (See Diagram 6)
- C. Push the ON/OFF switch to the "ON" position. (See Diagram 2)

DRIVING FORWARD:


- D. Push the Driving Control Stick forward for forward running. (See Diagram 7)

DRIVING IN REVERSE:


- E. Pull the Driving Control Stick backward for reverse running. (See Diagram 8)

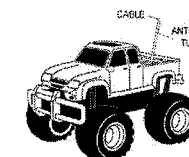


(DIAGRAM 5)

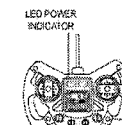

(DIAGRAM 6)

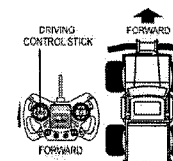

(DIAGRAM 7)

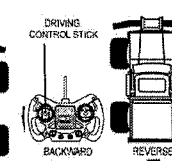

(DIAGRAM 8)

#95447(MW DODGE SRT-10)

Size: 12.75"x 4.75"

65-3065-100-0100

FRONT WHEELS STEERING ADJUSTMENT:

- F. If the vehicle does not run straight forward, adjust the lever for satisfactory alignment on the underside of the vehicle. (See Diagram 9)
- G. If the vehicle runs toward left, turn "Steering Alignment Lever" towards "R."
- H. If the vehicle runs toward right, turn "Steering Alignment Lever" towards "L."

STEERING OPERATION:

- I. To make left or right-hand turns while driving forward, turn the Steering Control Stick to left or right while pushing the Driving Control Stick forward at the same time. (See Diagram 10)
- J. To turn left or right while driving reverse, turn the Steering Control Stick to left or right while pulling the Driving Control Stick backward at the same time. (See Diagram 11)

STOP OPERATION:

- K. To stop, release both Control Sticks. (See Diagram 12)

CHANGING BANDS FOR MULTI-PLAYER CONTROL SYSTEM

- Collect multiple Multi-Player Control System vehicles to run up to 6 cars at the same time.
1. Assign a different band to each car. The 6 available bands are Band 1, Band 2, and Band 3 for 27MHz (See diagram 13); Band 4, Band 5, and Band 6 for 49 MHz (See diagram 14).

2. Adjust the transmitter to match the band selected for the car. For example, if Band 2 is selected for the car, slide the band switch of the transmitter to Band 2.
3. Select a different band for each pair of car and transmitter and go racing. (See diagram 15)


TIPS FOR THE MULTI-PLAYER CONTROL SYSTEM

1. When operating multiple cars, only one pair of car and transmitter shall be using the same band. Interference may occur if i) more than one car is set to the same band; or ii) more than one transmitter is set to the same band.
2. If a car does not respond, check the transmitter and the car to ensure that both are set to the same band.
3. The Multi-Player Control System allows multiple cars within the collection to be raced at the same time. Use of other radio control products that are not part of this Multi-Player Control System may cause interference and loss of control to the cars.


PERFORMANCE TIPS

- Do not drive car on grass, sand or carpet.
- Do not drive car through water.
- Be sure to rest your vehicle for at least 30 minutes after every 15 minutes of operation.
- Make sure ON/OFF switch on your vehicle is in the "OFF" position when it is not in use.


- Do not bend the antenna.
- Electrical, CB interference, mobile phones, air conditioning, elevators and steel girders in buildings will affect the operation of your vehicle.
- Do not leave the vehicle or transmitter near sources of heat or in direct sunlight for long periods of time.
- Remove the batteries from the vehicle and transmitter when they are not in use.

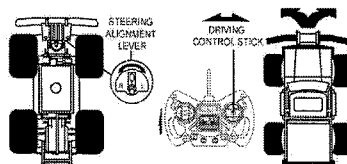


(DIAGRAM 9)

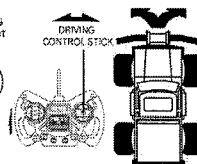

(DIAGRAM 10)

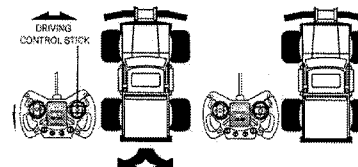


(DIAGRAM 11)

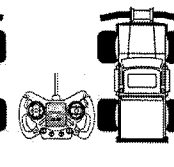


(DIAGRAM 12)

27 MHz:

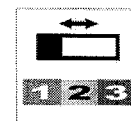


(DIAGRAM 13)

49 MHz:

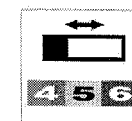

(DIAGRAM 14)

27 MHz:

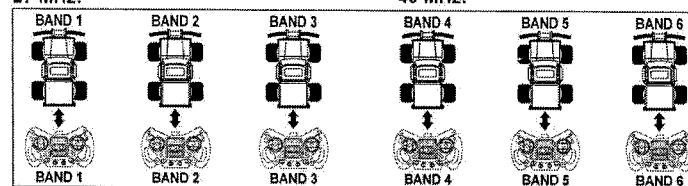

(DIAGRAM 15)

CAUTION:- ELECTRIC TOY

Not recommended for children under 6 years of age. As with all electric products, precautions should be observed during handling and use to prevent electric shock.

INPUT: 120VAC-60Hz-5.5W ONLY
OUTPUT: 12VDC, 0.2A

FCC NOTE : THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

ATTENTION PARENTS:
IT IS RECOMMENDED THAT THIS TOY AND ALL ACCESSORIES BE PERIODICALLY EXAMINED FOR POTENTIAL HAZARDS AND THAT ANY POTENTIALLY HAZARDOUS PARTS BE REPAIRED OR REPLACED.

© 2005 SCIENTIFIC TOYS, LTD.
CHAI WAN, HONG KONG.
PRINTED IN CHINA
O.I.NO.3065