

Criteria of product operation :
EN71 EN62115 ASTM F963 CPSIA

FCC warning:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Certificate of approval	Checked: _____
	Date: _____

(1) This declaration:
This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and
(2) This device must accept any interference received, including interference that may cause undesired operation.

Would you please to read this specification
carefully before installation in order to avoid
operating errors or damages. Make sure that
the baby will be safe. The user should
satisfykeeping this specification.

Specification

Car type	
Storage battery	12V/7AH*1 + 12V/10AH*1 (12V/17AH*2)
Electric motor	12V/300W*1 (drive) 12V/5W*1 (stop)
Built age	37-45 months
Max weight	33kg
Size	1125*765*775mm
Speed	3.0km/h-5.0km/h
Life	8-12 hours (charge) 60 minutes-50 minutes (use)
Charger	AC220V/50Hz Input; DC12V/output
Battery (Remote control)	Two pieces of AAA/3V

CHILDREN ELECTRIC CAR

Installation and Operation Instruction



Picture is for reference only, and the product is subject to practicality.

1. Must be charged under Adult's supervision.
2. Battery power must be connected correctly to the car. (Don't reverse it)
3. Being short circuit is not allowed.

Battery using instructions:

1. Please check the polarity of 12VAA batteries.
2. Open the battery compartment on the rear of the car first to avoid all kinds of damage. Please use the correct way to insert the battery.
3. Must use the high-quality battery to charge.
4. Must be charged under Adult's supervision.
5. Taking out the batteries when charging.
6. If the different types of batteries or new and old batteries can't be used together.
7. Battery power must be connected directly.
8. The opened or used up batteries must be taken out of the car.
9. Being short circuit is not allowed.

Maintenance:

1. Before the installation, make sure the parts are complete. If you have any question, please feel free to contact us.
2. Make sure every parts complete when listening and using.
3. Please clean the product regularly. Do not damage the electrical equipment.
4. Please check and maintain the performance of the car's safety.

- Do not drive the car in the water (Do not put the water or liquid on the car).
- Do not drive the car in the room to protect children and furniture.
- When the battery is in low power, the car just go forward but not left or right. When it can not go further or shake, you should change the new battery at once.
- Please turn off the power when the car is not driven. If the car is not driven for a long time, please plug out the battery connector.

Kind reminder for charging:

- Make sure the battery has been charged over 10 hours before the first use.
- Connect the charger connector to the battery connector then insert the charger on the plug.
- After using 1 hour you should charge in time. It takes 8 to 12 hours to charge normally.
- Do not charge over 20 hours.
- It is recommended to have some heat for charger and battery when it is charging (low then 60°C).
- In order to protect charged battery and circuit, please use the special charger and battery from our factory.
- Connecting terminal can not be a short circuit.
- Do not mix old and new batteries or different types of batteries.
- Make the battery charge once a month at least when the car is not driven for long time.

 
- Charge the battery by the adult.

Chargers and battery maintenance:

1. Taking away the seat first and unscrewing the battery cover finally get out of or put in the battery and then screwing the battery cover finally put the seat as well as screwing the lock.

Kind reminder

Small parts, Not suitable for children under 36 months.
Products should be adult assembly! Before the assembly, screw-split pin and other dangerous sharp tip!
Small parts in order to avoid damage and ingestion that cause choking hazard, please send small parts away from children under 3 years old!
The children can not drive alone without adults and caregivers to use, protect itself not be allowed to leave!
After charging the storage battery by the adults, before using this product, please recharge!
To prevent harm to children, please keep the packaging materials such as plastic bags away from them.
Please check the product regularly to make sure that the electric wire, plugs, outer case and other parts are normal. If something is damaged, please stop using the car until it is fixed!
Two AAA dry cells are for the remote controller!
Use all the cells or batteries in right way!
If the line with no connection, Do not insert the output socket!
The packaging and instructions must be retained since it contains important information!

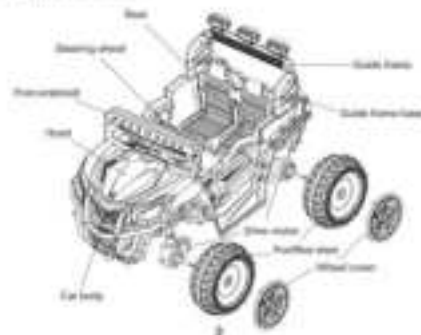

Installation Steps:

- 

1. Adjust the front axle.
a. After the adjustment, insert a 2" (50mm) screw into the hole at the joint of the steering day and lock it with 95 locknut to ensure that the steering part can rotate easily from left to right. (Referring to Picture 1.)
- 

2. Install the rear axle.
a. Place the rear axle components on the car body, make the rear axle symmetrical on both sides. (Notice the rear axle total length: 725 mm.) (Referring to Picture 2.)
- 

3. Install the front wheel.
a. Install the front wheel into the front axle. It should rotate into the right front axle. Then install the front wheel into the front axle. It should rotate into the right front axle. It should rotate into the right front axle. It should rotate into the right front axle. (Referring to Picture 3.)
- 

4. Install the rear wheel.
a. Install the rear wheel into the rear axle. It should rotate into the right rear axle. Then install the rear wheel into the rear axle. It should rotate into the right rear axle. It should rotate into the right rear axle. It should rotate into the right rear axle. (Referring to Picture 4.)

Troubleshooting:

Gear case with high noise	1. Gear is broken	Bring it to repair in maintenance points
The car shakes when it go forward	1. Bad connection of the motor connector wires. 2. Something wrong with the motor	Correct well. Bring it to repair in maintenance points
Drive without sound	1. No dry battery in the steering wheel	Bring it to repair in maintenance points

If you can not solve the problem, please feel to contact us.

Kind reminder:

- Before the first use, make sure the battery has been charged over 10 hours, otherwise it will be damaged forever.
- Do not drive the car on the slipped street, road, step and other dangerous places.
- Do not drive the car on the smooth surface, such as marble and floor tile.
- The car is just for only one person. Do not be overweight. The maximum load is 30kg.
- Do not transfer the switch 'go forward' to 'go back' during the advance.
- Do not change the line and charged device model.
- Keep the remote and remote control car far away from the rain, the wet thing and fire, in order that the circuit is not damaged.
- When the car meets some obstacle, it will stop. The car will move again when the obstacle is moved.

Fault and Solutions:

Type of fault	Analyse of causes	Solutions
Can not move	1. Voltage is below normal level 2. Safety wire protects 3. The screw on the wheels have fell off 4. Battery connector has fell off 5. Battery is damaged 6. Electrical equipment is damaged 7. Motor is damaged	Change the battery Wait for a while Tight the screw again Come on again Change the battery Bring it to repair in maintenance points Bring it to repair in maintenance points
The battery can not be charged	1. Battery connector have fell off 2. Battery charger is power off 3. Battery charger is damaged	Plug into again Plug into again Change the battery charger
Distance per charge is short	1. Battery is not full 2. Battery is old	Change the battery again Change the battery
Some noise and heat when charge the battery	1. Chemical reaction	Normal
Low speed	1. Battery is old 2. Battery is out of power 3. Over weight 4. Unsmooth pavement	Change the battery Change the battery again Lighten the weight to less than 20kg Smooth path

7



Check the steering wheel
a. Firstly connect the steering wheel wire to the car body
b. Then insert steering wheel into the car body and ensure it is properly connected to the car body and the steering wheel is not loose (Refer to Picture 1)



Check the front wheel assembly and front floor
a. Insert the front wheel into the car body and ensure it is properly connected to the car body and the front wheel is not loose (Refer to Picture 1)

 


Check the rear wheel
a. Put the rear wheel into the rear bottom plate
b. Then put the rear into the rear bottom plate and ensure it is properly connected to the rear bottom plate (Refer to Picture 1)



Check the car body
a. First insert the car body into the car body and ensure it is properly connected to the car body
b. Finally use four of them screws to tight it (Refer to Picture 1)

8

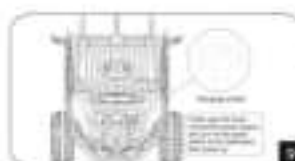

Check the car body
a. Firstly open the front, connect the power plug to the car body and ensure it is properly connected to the car body (Refer to Picture 1)

Follow the picture

10. Charging indicator

 
a. When the power display shows low that low, which means the battery is lower power.

Please charge the battery.

b. In the charging mode, the car is in the charging protection device. The car won't be start.

If the charger is removed from the charging socket, the car becomes normal mode.

11. Dashboard indicator

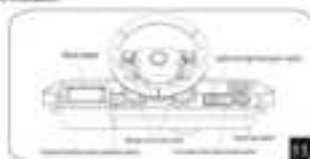

a. Power key switch --(1) Turn on power key switch, the light will be bright and there is engine sound.

(2) Dashboard equipped with music function and it can connected cellphone, adjust the volume, power display, etc.

b. Steering wheel --(1) The steering wheel equipped with music and horn, Children can adjust by themselves.

9

a. Double drive/ four drive control switch --(1) Car switch double drive/ four drive switch, four drive mode has strong power (2) The car has PC priority function.
b. Switch of lighting system --(1) Lights can be turned on and off.
c. High speed switch --(1) When manual for driving, children can adjust the speed by Remote.
d. Go forward/ Stop/ Back forward switch --(1) When manual for driving, children can control to go forward or backward when they step on the foot pedal.
(Refer to Picture 1)

Follow the picture

12.1.4) Remote control instructions



For the first time need to pair, this product has a memory function, just insert battery and time you don't need to match the code every again.

1. Long press "M" button more than three seconds, until the first LED light flashing.

2. Open body power, then a long light LED turn on the success of the code.

3. Remote control 10 seconds without operating automatic standby, pressing key to wake up.

4. Key Description: "1" Forward, "2" Back, "3" Left, "4" Right, "5" Forward, "6" Stop.

5. Press the "7" key to set the speed, a light is two two lights for medium speed, three lights for high speed, the car back with only medium speed. Press the "8" key to stop the car, the indicator will flash, press the brake button again to off the brake.

Note: the remote control should be used by adult, and children don't touch.

12. The car can be installed portable dragged structure.

a. The car can be installed portable dragged structure.



10