





User manual

01 Specifications

Product Name	Electro Aqua Beat
Chipset:	JL6966B4, BT5.4
Material:	ABS+Fabric
Power:	20W*2, 40W
Tweeter	2
Diaphragm	2
Battery :	7.4V/5400mAh , Total 10800mAh
Charging time:	About 4~5 hrs
Maximum volume Play Back :	9 hours
70% volume :	up to 32 hours
Frequency response:	120HZ-20KHZ
Bluetooth work distance:	10M
Product weight:	5.5lbs
Functions:	BT,AUX, SD, USB Driver
Charging Port :	USB-C charging cable 2A

02 Buttons & Slots

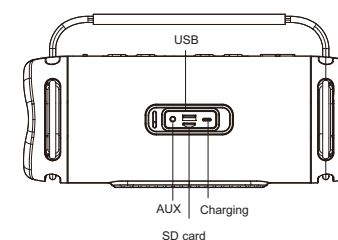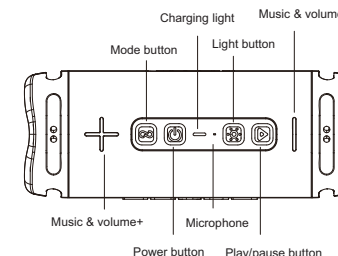

03 Prohibit ⚠

1. It is prohibited to disassemble, impact, squeeze the battery, or put it into fire or insert foreign objects to avoid causing battery leakage and overheating ignite or explode.
2. This device is not a toy and children should use it under adult supervision.
3. If there is severe swelling, it is prohibited to continue using.
4. Do not place in a high-temperature environment and keep away from sources of fire.
5. Do not use the battery after immersion in water or other liquids.

FCC Warning

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Any changes or modifications to device will void the user's authority to operate the device.

This device has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This device generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this device does cause harmful interference to radio or television reception, which can be determined by turning the device off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the device and receiver.
- Connect the device into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment

Button	Function	Operation
	Power on/off	Press 1.5 seconds
	Force restart	Long press for 8 seconds to force restart
	Volume up	Short press
	Next song	Long press 1.5 seconds
	Volume down	Short press
	Previous song	Long press 1.5 seconds
	Play/pause	Short press
	Answer/end phone call	Short press to answer During call: short press to end a call
	Reject a call	Incoming call: long press 1.5 seconds to reject
	Voice assistant	Under BT mode, long press 1.5 seconds
	Redial last number	Under BT mode: press 2 times

Button	Function	Operation
	Mode switch	Short press: BT - AUX - USB - SD
	Disconnect Bluetooth	Long press 2 seconds
	Clear Bluetooth pairing information	Long press 5 seconds
	Enter/exit TWS mode	Double press
	Light control	Short press to turn on/off/switch light mode