



# **PARTY BALL FOGGER**

<b>Quickstart Guide</b>	English ( 3 – 9 )
<b>Guía de inicio rápido</b>	Español ( 10 – 16 )
<b>Guide d'utilisation rapide</b>	Français ( 17 – 23 )
<b>Guida rapida</b>	Italiano ( 24 – 30 )
<b>Schnellstart-Anleitung</b>	Deutsch ( 31 – 37 )
<b>Snelstartgids</b>	Nederlands ( 38 – 44 )
<b>Appendix</b>	English ( 46 )



## Quickstart Guide (English)

### Introduction

Thank you for purchasing the Party Ball Fogger. At ION, your entertainment is as important to us as it is to you. That's why we design our products with one thing in mind—to make your life more fun and more convenient.

### Box Contents

Party Ball Fogger  
Fog Fluid (32 oz)  
Wireless Remote Control  
Quickstart Guide  
Safety & Warranty Manual

### Support

For the latest information about this product (documentation, technical specifications, system requirements, compatibility information, etc.) and product registration, visit [ionaudio.com](https://ionaudio.com).

For additional product support, visit [ionaudio.com/support](https://ionaudio.com/support).

## Safety Notes

**Important:** In addition to the notes throughout this manual, please refer to the included safety & warranty manual for additional safety information.

- Carry this product by the handles only. Do not shake it.
- Use this product **indoors only**. To prevent risk of fire or shock, do not expose this product to rain or direct and excessive moisture.
- If the environment is significantly colder than the temperature of this product, you may need to wait for it to adjust to the ambient temperature when you power it on.
- Do **not** use this product for permanent installations.
- Connect this product to grounded and protected circuits only.
- Always disconnect it from its power source **before** cleaning it or replacing the fuse. Replace the fuse with another of the same type and rating.
- Do not clean it with solvents or harsh detergents. Use a soft, clean cloth.
- Before connecting the product to a power source, make sure the power cable is not crimped or damaged.
- Make sure the power outlet's voltage is within the range stated on this product (on its housing or decal).
- **Never** disconnect this product from the power cable by pulling or tugging on the cable itself.
- Always make sure this product is used in a location with adequate ventilation with at least 20" (50cm) from adjacent surfaces. Make sure none of this product's ventilation slots are obstructed.
- Do **not** use this product at ambient temperatures higher than 104 °F / 40 °C.
- Do **not** allow flammable materials near this product during use.
- Do **not** touch this product while it is powered on or immediately after powering it off. The product and its housing can reach high temperatures.
- If you encounter a serious problem while using this product, stop using it **immediately**.
- Do **not** open this product's housing. It contains no user-serviceable parts and will void your warranty.

## Setup

Any item not listed in [Introduction > Box Contents](#) is sold separately.

1. After unpacking the box, unscrew and remove the cap at the top of the tank.
2. Fill the tank with a water-based fog fluid (described above).
3. Screw the cap back onto the top of the tank so it is secure. Make sure the tube (that passes through the cap) is inserted as far into the tank as possible.
4. Connect Party Ball Fogger to a power outlet.
5. On the rear panel, set the **Power Switch** to the **On** position. Party Ball Fogger will begin warming up.

**Important:** If the environment is significantly colder than the temperature of Party Ball Fogger, you may need to wait for it to adjust to the ambient temperature.


### Additional Safety Notes:

- Do **not** spray the fog directly toward people or into an open flame.
- Keep Party Ball Fogger at least 3 feet (1 meter) away from other objects, and keep it at least 10 feet (3 meters) away from flammable materials. The nozzle becomes very hot during operation, and the machinery requires good ventilation.
- **Never** touch the nozzle during operation. It becomes very hot; touching it during operation could result in burns or other injuries.
- Use in well ventilated environment to prevent excessive concentration of vapor.
- Do not use this product as a space heater or humidifier.

## Features


### Front Panel

1. **Party Light:** This built-in dome party light projects red, green, blue, white, purple, and orange colors into fog.
2. **Fog Output:** This output produces fog after fog fluid has been entered into the fluid tank.
3. **Carrying Handle:** Use this handle to easily transport Party Ball Fogger by hand.

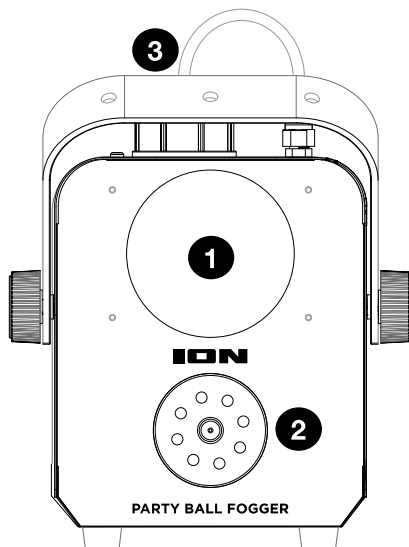

### Rear Panel

1. **Cap:** This cap covers the fluid tank. Twist the cap clockwise to tighten it or counterclockwise to loosen it. The tube that passes through the cap's center feeds the fluid in the tank to the heater.
2. **Fluid Level Indicator:** This transparent part of the tank shows its current level of fluid. If this approaches the **Low** reading, fill the tank with the recommended water-based fog fluid.
3. **Power Cord:** Connect this attached power cord to a power outlet.
4. **Power Switch:** Use this switch to power Party Ball Fogger on or off. After powering it on, wait 2–3 minutes for the heater to warm up.
5. **LED Switch:** Use this switch to start or stop projection of the party lights.
6. **Fog Switch:** Use this switch to start or stop production of the fog.

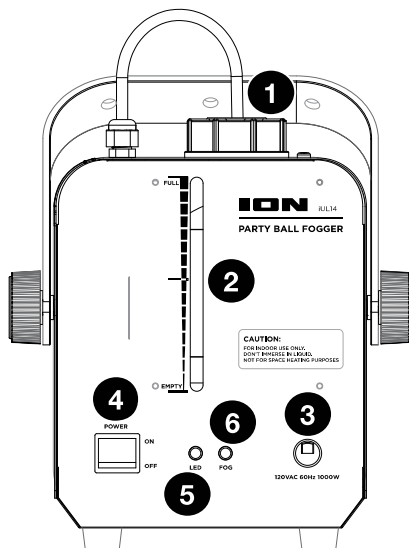

## Wireless Remote Control

Use the remote control to start/stop the fogger, select individual colors, and power the unit on/off. To use the remote control, point it at the front sensor on the dome light and press the button of the option you would like to select. See below for button descriptions.

**Note:** Before using the remote control for the first time, pull out the tab attached to the battery compartment. To change the remote control battery, follow the diagram located on the back of the remote control. Use a 3V DC CR2025 lithium button cell battery for replacement.

- **Power:** Turns on the unit or puts it to sleep (all lights, the fogger, and the motor go off).
- **Fog:** Starts or stops the fogger.
- **Fade:** See the [Operation > Light Modes](#) section for Mode details.
- **Flash:** See the [Operation > Light Modes](#) section for Mode details.
- **Spin:** See the [Operation > Light Modes](#) section for Mode details.
- **All On/Off:** Switches all colors on or off.
- **R On/Off:** Switches the red color on or off.
- **G On/Off:** Switches the green color on or off.
- **B On/Off:** Switches the blue color on or off.
- **W On/Off:** Switches the white color on or off.
- **P On/Off:** Switches the purple color on or off.
- **O On/Off:** Switches the orange color on or off.
- **R Only:** Switches only the red color on.
- **G Only:** Switches only the green color on.
- **B Only:** Switches only the blue color on.
- **W Only:** Switches only the white color on.
- **P Only:** Switches only the purple color on.
- **O Only:** Switches only the orange color on.



## Operation

### Light Modes

Select from one of the light modes using the remote control. Individual color buttons can be de-selected to have only the colors you want displayed without interrupting the mode.

**Fades:** Press this button to create fading effects at various speeds. Press this button repeatedly to cycle through the following different speeds:

- **Slow Fade:** The colors fade in a sequence slowly from one color to the next with a transition time of 4-5 seconds. At any time, individual colors can be toggled on or off.
- **Medium Fade:** The colors fade in a sequence slowly from one color to the next with a transition time of 3-4 seconds. At any time, individual colors can be toggled on or off.
- **Fast Fade:** The colors fade in a sequence quickly from one color to the next with a transition time of 2-3 seconds. At any time, individual colors can be toggled on or off.
- **Very Fast Fade:** The colors fade in a sequence quickly from one color to the next with a transition time of 1-2 seconds. At any time, individual colors can be toggled on or off.

**Flash:** Press this button to create flash effects at various speeds. Press this button repeatedly to cycle through the following different speeds:

- **Slow Flash:** The lights will blink on and off for 3 seconds, then switch to a new color combination abruptly. At any time, individual colors can be toggled on or off.
- **Medium Flash:** The lights will blink on and off for 1.5 seconds, then switch to a new color combination abruptly. At any time, individual colors can be toggled on or off.
- **Fast Flash:** The lights will blink on and off for 0.5 seconds, then switch to a new color combination abruptly. At any time, individual colors can be toggled on or off.
- **Very Fast Flash:** The lights will blink on and off for 0.1 seconds, then switch to a new color combination abruptly. At any time, individual colors can be toggled on or off.

**Spin (Motion):** When this button is pressed, the motor will cycle through different speeds: **Slow, Medium, Fast, Very Fast, and Off.**



## Fluid

We recommend using high-quality water-based fog fluid with Party Ball Fogger. You can purchase this from a local or online retailer.

### Important:

- Using non-water-based fluids with this product will void its warranty.
- Do **not** use flammable liquids such as oil, gas, perfume, etc. with this product.
- Do **not** ingest any of the fluids used in this product. If you do so accidentally, contact a medical professional immediately. Rinse your eyes and skin thoroughly if they come into contact with the fluid.

## Usage

Throughout operation, make sure there is enough fluid in the tank. Using Party Ball Fogger without any fluid can damage it.

If Party Ball Fogger is emitting an unusually low amount of fog or making an unusual noise, power it off immediately. Make sure that the tank has enough fluid and that the fuse is not damaged.

When you are done using Party Ball Fogger, power Party Ball Fogger off, and wait for about 1 minute for it to cool down.

**Important:** Depending on the amount of fog generated, this product may set off smoke detectors. In certain environments after prolonged use, the fog produced may leave a slippery residue on floors and other surfaces.

## Cleaning

We recommend cleaning it after each use to prevent eventual build-up or blockages, which can result in poor performance, overheating, and damage.

**After each use,** power Party Ball Fogger off, and wait for about 1 minute for it to cool down. Wipe its surfaces and empty tank using a soft, clean cloth.

**After every 40 hours of use,** use Party Ball Fogger as described above (in [Setup](#) and [Usage](#)), but use a mixture of 80% distilled water and 20% vinegar instead of the normal fluid. This will help remove build-up in the nozzle.

**Important:** Do not clean Party Ball Fogger using solvents or harsh detergents.

Appendix (English)

Technical Specifications

Fog Output	262 ft. <sup>3</sup> /min. 80 m <sup>3</sup> /min.	
Tank Capacity	0.5 L	
Fluid Consumption	29 ml/min.	
Pre-Heating Time	3 min.	
Control	Wireless remote control	
Lights	(6) 6 W	
Power	Input Voltage	120 VAC, 60 Hz
	Connection	Attached power cable
	Consumption	1000 W, 8.3A @ 120 V, 60 Hz
	Fuse	250 V, 12.5 A
Dimensions (width x depth x height; with bracket)	8.5" x 12.4" x 10.9" 216 x 316 x 277 mm	
Weight	Net Weight	3.8 lbs. 1.7 kg
	Gross Weight	4.9 lbs. 2.2 kg

Specifications are subject to change without notice.

Trademarks & Licenses

ION Audio is a trademark of ION Audio, LLC, registered in the U.S. and other countries. All other product names, company names, trademarks, or trade names are those of their respective owners.



ionaudio.com