




User Manual NEO S1

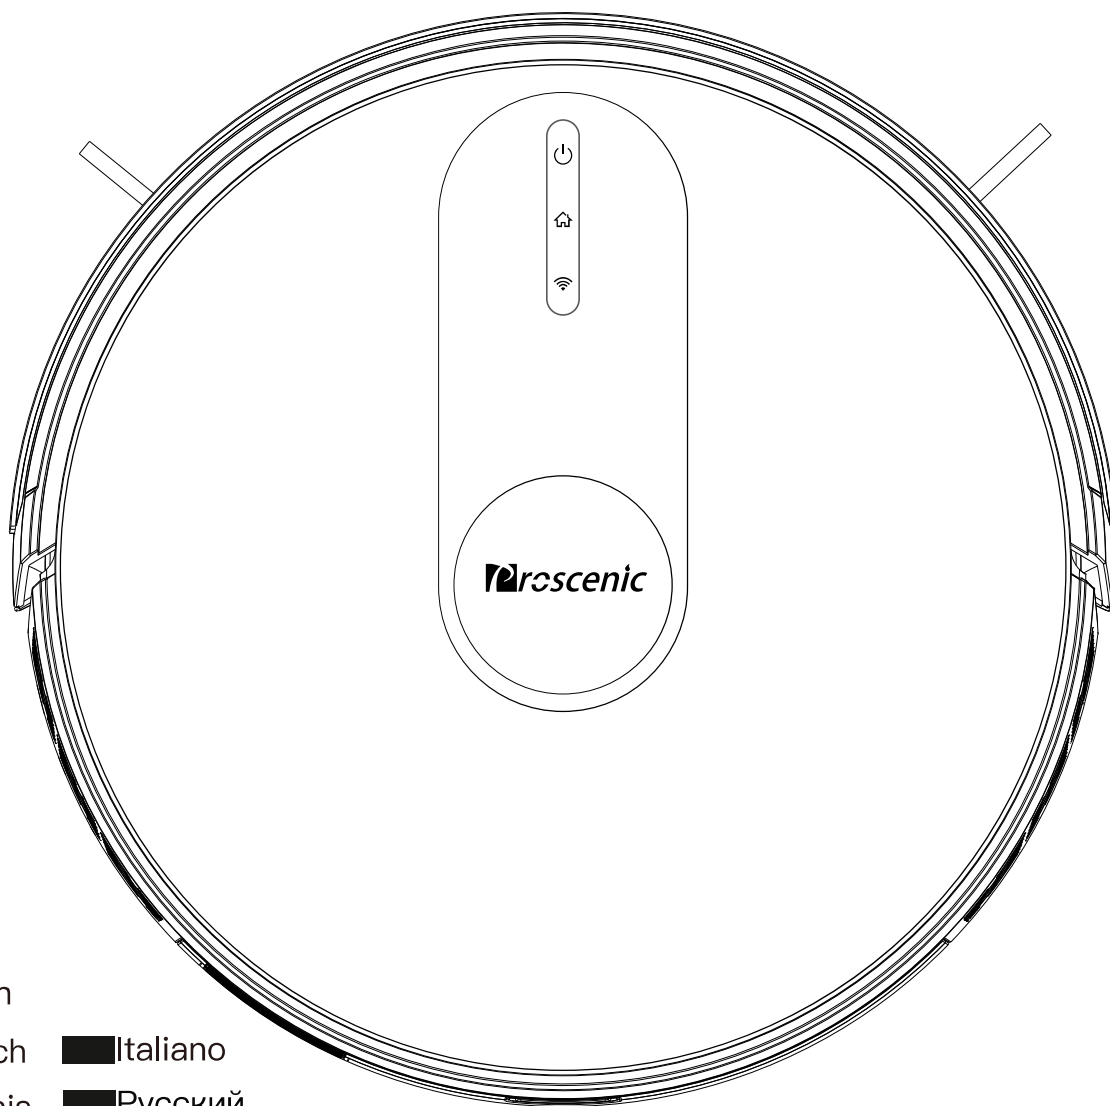

English

Deutsch

Italiano

Français

Русский

Español

日本語

Proscenic Technology Co., Ltd.
E-mail: service@proscenic.tw
Web: www.proscenic.com

Please keep this user manual in your sight, read it thoroughly and carefully
before using this product.

Contents

EN

Safety Instructions	1–2
Product Components	3–6
Product Operation	7–8
Product Maintenance	9–12
Product Parameter	13

Safety Instructions

Before using this product, please read the following safety instructions and follow all routine safety precautions.

Please read the instructions carefully, please keep the instructions.

Any operation inconsistent with this instruction manual may cause damage to this product.

Note:

1. Only authorized technicians can disassemble this product. Users are not recommended to disassemble this product by themselves.
2. This product can only use the power adapter provided by the factory. If other adapters are used, the product maybe damaged.
3. Do not touch wires, sockets or power adapters when your hands are wet.
4. Do not use cloth curtains or body parts to roll into the product drive wheels.
5. Do not place this product near cigarette butts, lighters and other smoldering fires.
6. Please clean the product after charging.
7. Do not bend wires excessively or place heavy objects and sharp objects on the machine.
8. This..product is an indoor household product. Do not use it outdoors.
9. Do not sit on the product.
10. Do not use this product (e.g. bathroom) in wet environment.
11. Before using this product, please remove all vulnerable items (e.g. glasses, lamps, etc.) on the ground as well as items (e.g. wires, pa per sheets, curtains) that may entangle the side brushes and air suction passages.
12. Do not put this product in a place where it is easy to fall (e.g. on desks and chairs).
13. Please carefully check whether the power adapter is connected to the socket before use, otherwise the battery may be damaged.
14. To prevent tripping, please inform other members of the house when this product works.
15. Please empty the dust box before using this product when the dust box is full.
16. The temperature used for this product is 0 to 40 degrees celsius.
17. Do not use this product in high temperature environment.
18. Please remove the battery from the machine before the product isscrapped.
19. Please make sure that this product is not powered on when removing the battery.
20. Please recycle the discarded batteries safely.

Safety Instructions


Warn:

1. Use only the original rechargeable battery and charging seat specially equipped by the manufacturer. Non – rechargeable batteries are strictly prohibited, please refer to” product parameters” for battery specification information.
2. It is forbidden to use products in environments with open flames or fragile objects.
3. It is forbidden to use products in extremely hot (above 40 °C) or extremely cold (below 0 °C).
4. It is forbidden for human hair, clothes, fingers and other parts to approach the opening and operating parts of the product.
5. It is forbidden to use products on wet or stagnant ground.
6. It is forbidden for products to absorb any articles such as stones and waste paper that may clog products.
7. It is forbidden for products to absorb any inflammable substances, such as petrol, toner and toner for printers or photocopies. Prohibit the use of products in clean areas with flammable items.
8. It is forbidden for products to absorb any burning articles, such as cigarettes, matches, ashes and other articles that may cause fire.
9. It is forbidden to place articles at the suction opening. Do not use the product when the suction port is blocked .Clean up dust, cotton wool, hair, etc. at the suction opening to ensure smooth air circulation at the suction opening.
10. Use the power cord carefully to avoid damage. It is forbidden to use the power cord to drag or pull the product and the product charging seat. It is forbidden to use the power cord as a handle. It is forbidden to clamp the power cord in the crack of the door.It is forbidden to pull the power cord at sharp corners and corners.It is forbidden for the product to run on the power cord while the power cord should be far away from the heat source.
11. Do not use damaged charging seat.
12. Even if the product has been severely damaged, burning of the product is prohibited, which may lead to explosion of the battery of the product.


Product Components

Main body and Accessories

No.	Description	Quantity
1	Main body(dust bin included)	1
2	Docking Station	1
3	Adapter	1
4	HEPA filter	1
5	Side Brush	2
6	Cleaning Brush	1
7	Remote Control	1
8	User Manual	1

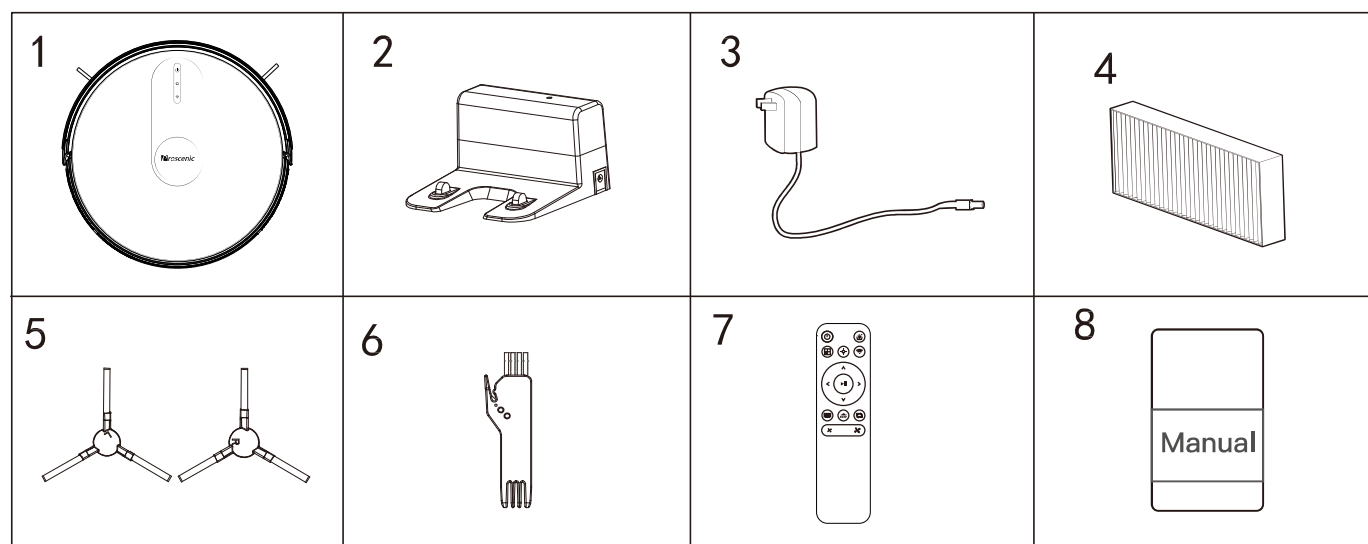


Product Components

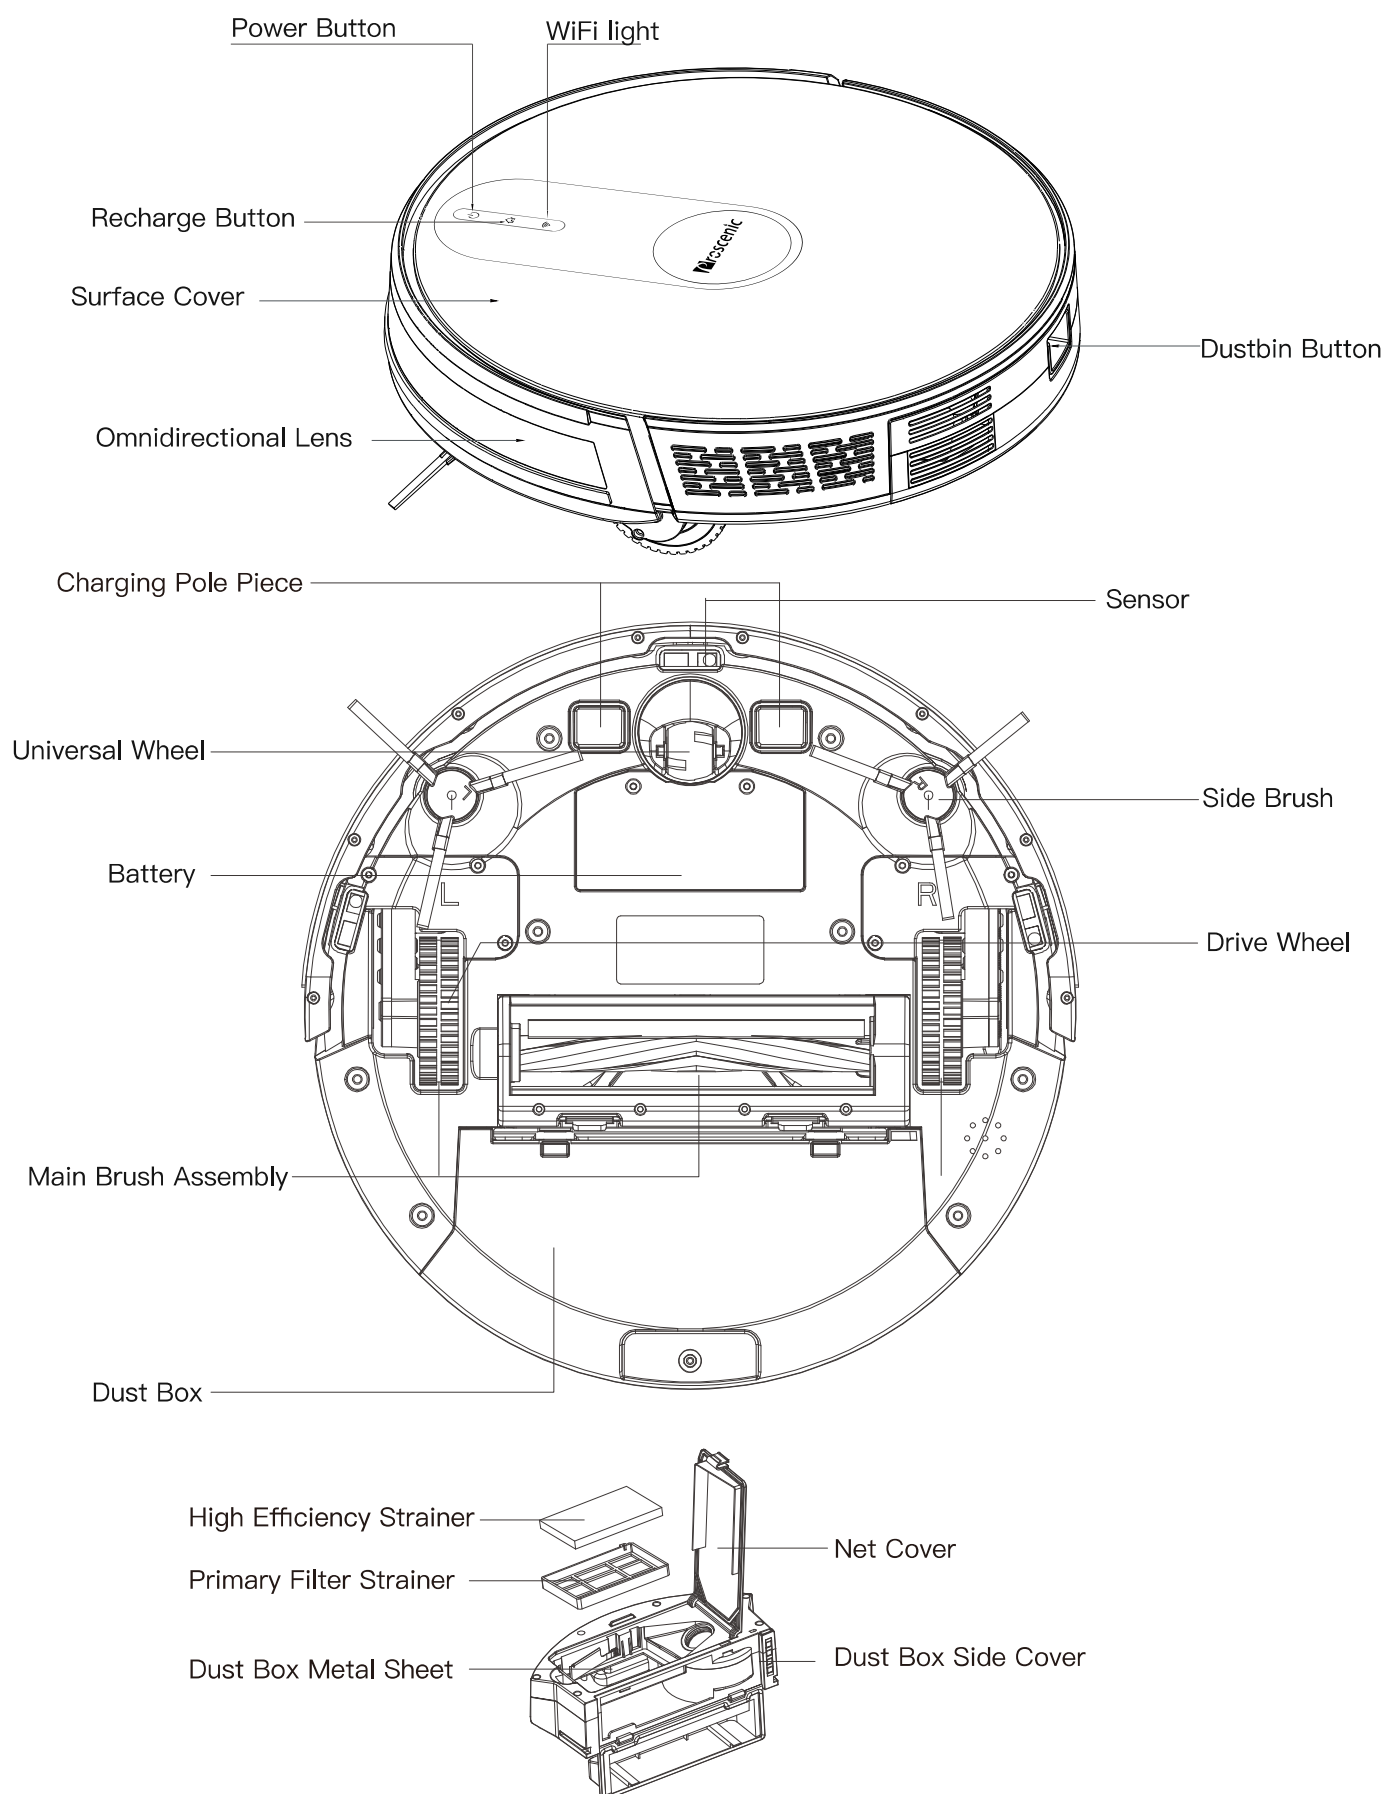

Product Components

Docking Station

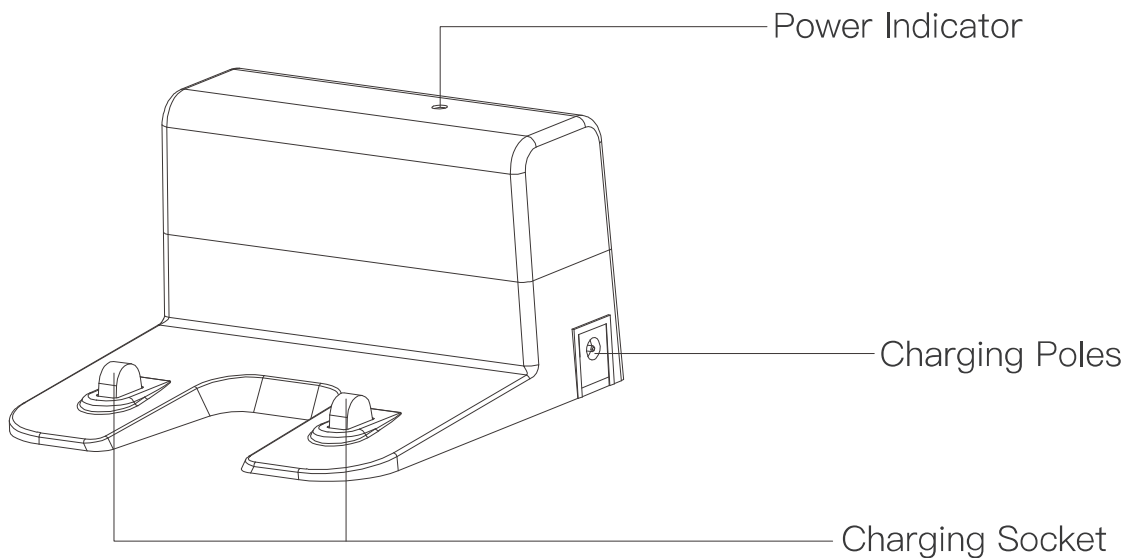

Main Body Buttons



1. Power button


- A. Long press this button to start the robot, and then short press the button to enter auto cleaning
- B. In standby mode, short press the button to enter auto cleaning
- C. Short press the button to stop it from work
- D. Long press the button to turn the robot off
- E. Short press the button to stop the robot from returning its charging base

2. Recharge button

- A. Short press the button can make the robot from working to return its charging base to get charged
- B. In the power-on state, press and hold the recharge button for 3 seconds, the WiFi indicator flashes, and enter the network configuration mode.

Product Components

Remote

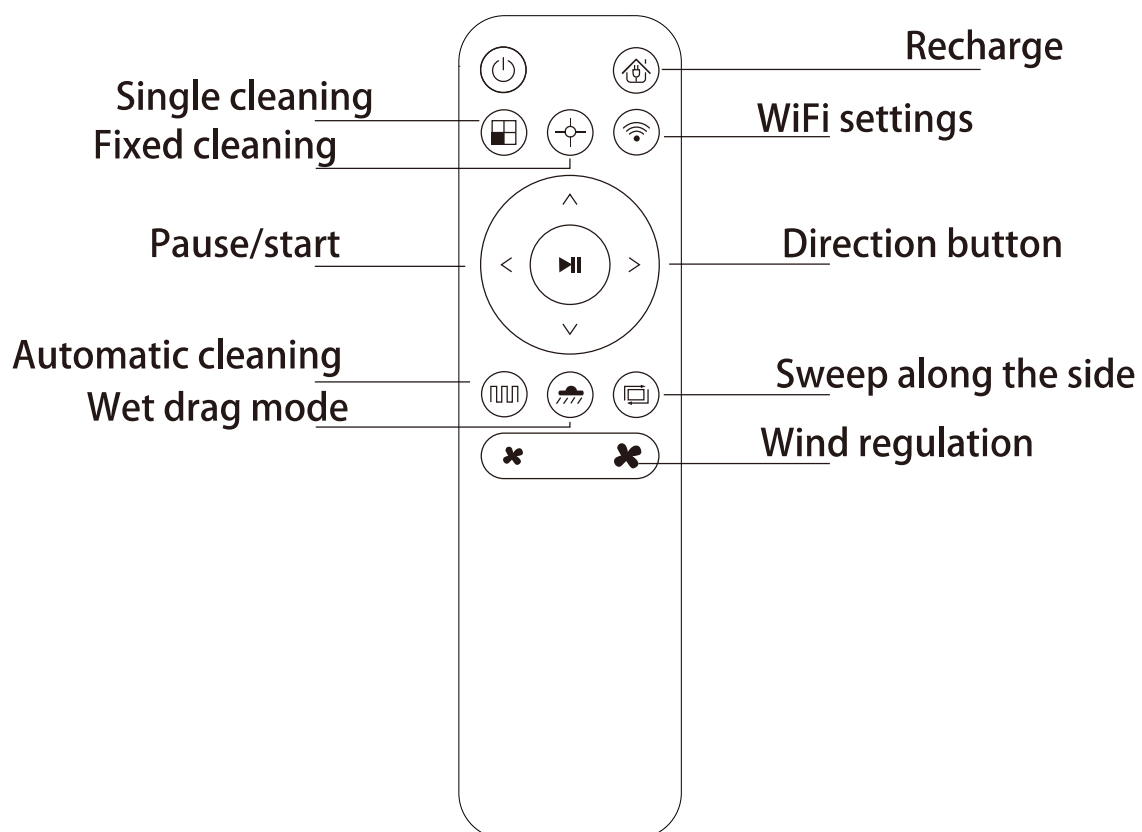


Product Operation

Battery Charging

1. Docking station placement

Place docking station against the wall and remove obstacles from within 0.5 meter at two sides and about 1.5 meters in front of the station, as shown in the right figure.

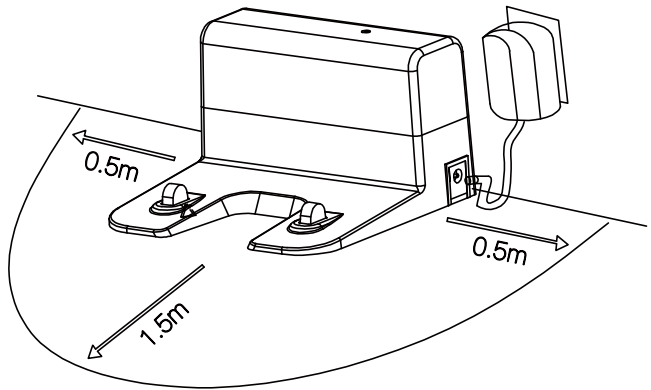


For extending battery life

- a. Before first use, charge the robot for 5 hours.
- b. Charge the robot as soon as possible when battery power is low.
- c. The robot will return to charging station automatically when it accomplishes cleaning or battery power is low.
- d. The charging seat cannot be used in environments with strong reflection such as direct sunlight and nearby mirrors. If there is any object with strong reflection, please cover it 7cm from the bottom.
- e. When charging, please make sure the robot is not equipped with the water tank to ensure the safety of charging and prevent wet rags from damaging the floor.

Product Operation

Connect to the mobile client

1. Mobile phone connected to WiFi.

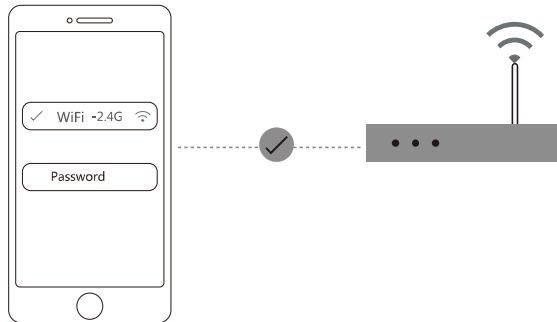


2. Scan the QR code below or search "ProscenicHome" in APP store to download the APP.




3. Turn on the APP, add the robot and select "NEO S1".




4. Turn on it, press and hold the recharge button for 5 seconds, the WiFi indicator flashes, and enter the network configuration mode.

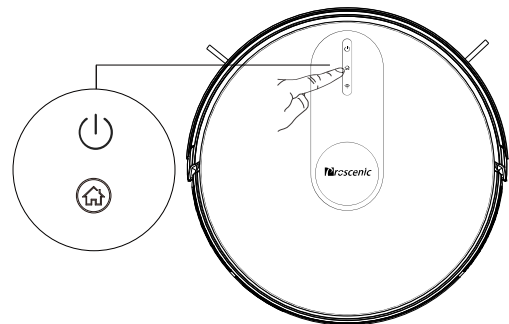

5. Select WiFi and input the password waiting for configuring network.

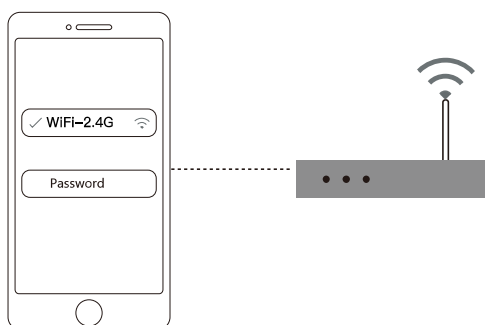

6. Connect to Robot WiFi.

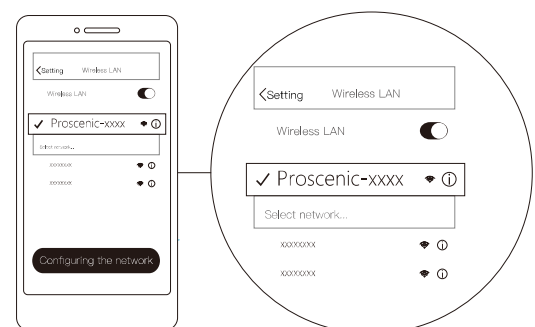


7. Return to APP waiting for configuring the network.


Enter into the page of setting-WiFi in your phone, choose WiFi "Proscenic-xxxx". Reopen APP after successfully connecting.

Product Maintenance


Component maintenance / main brush and side brush

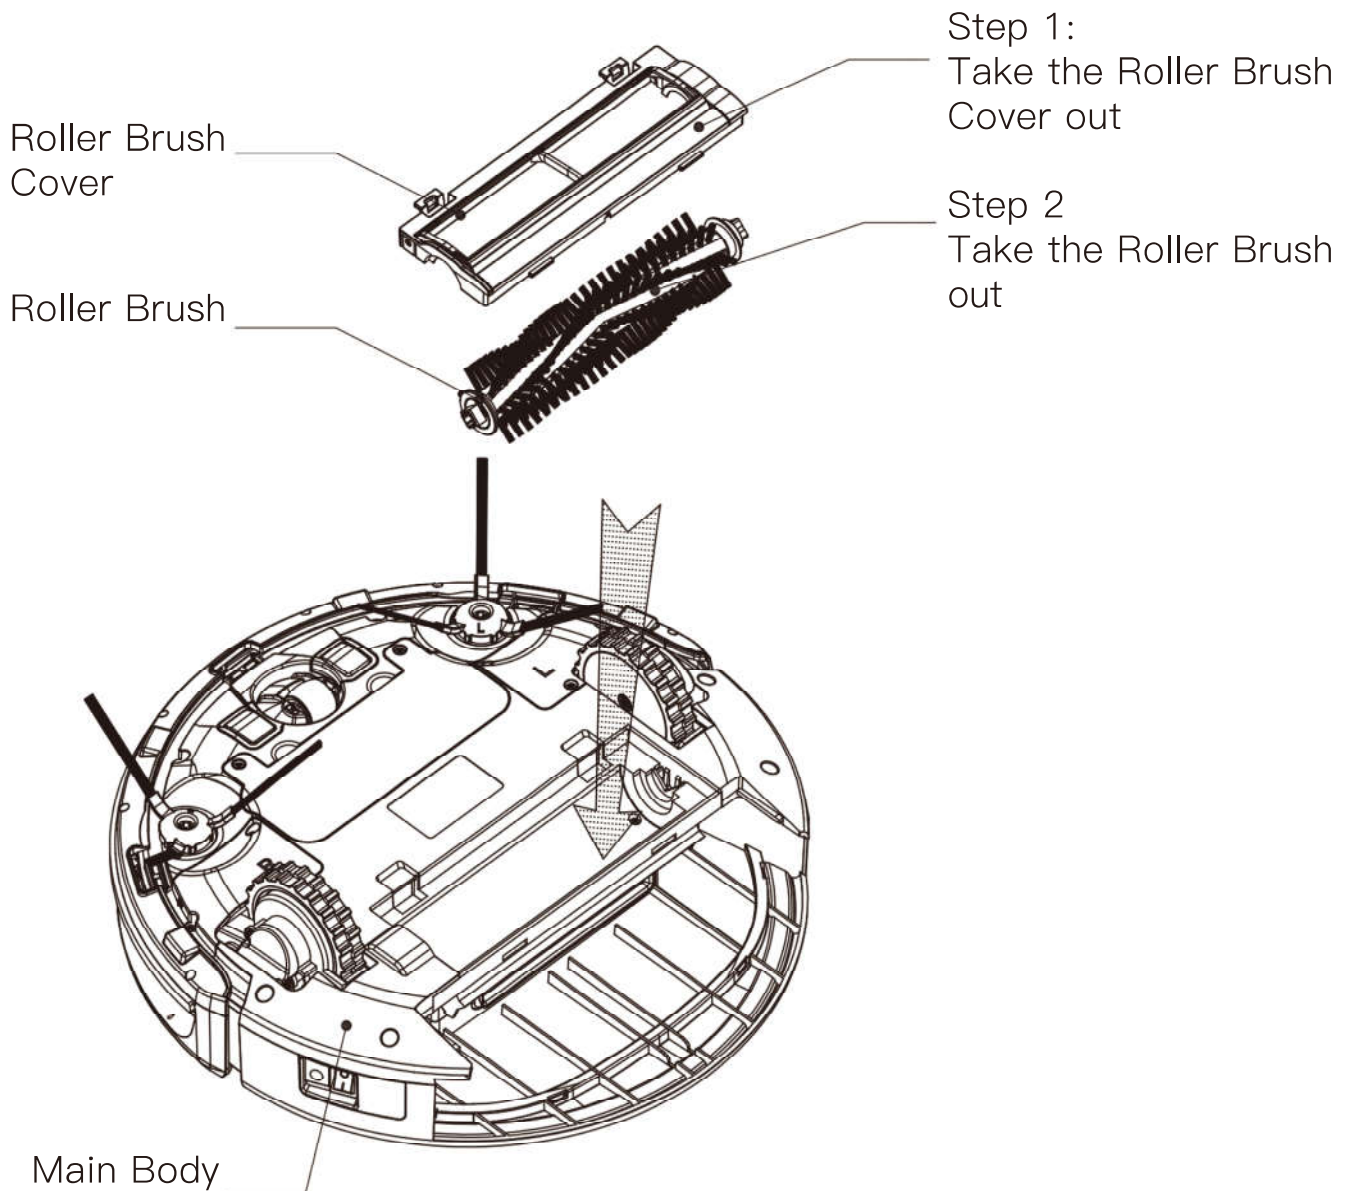

1. Utility tool for cleaning tangled hair

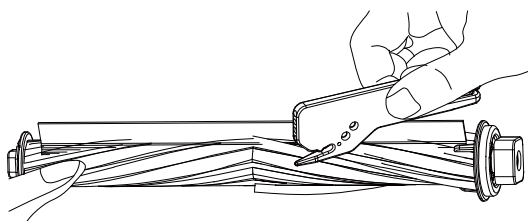


2. Cleaning side brush

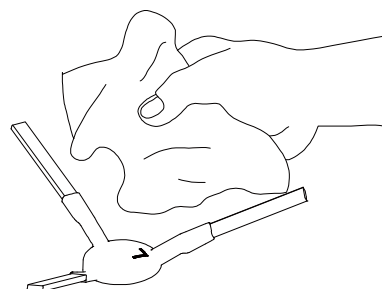


Product Maintenance

Component maintenance /dust box


A. Press the dust box button to take out the dust box

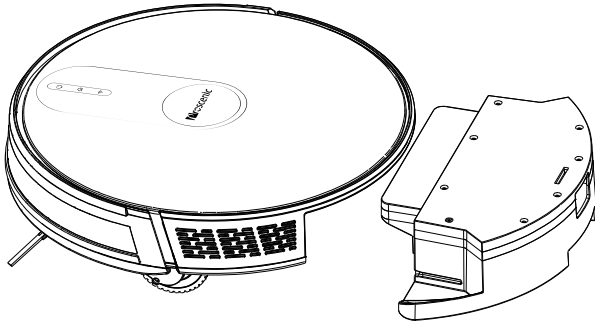


B. Open the dust box side cover

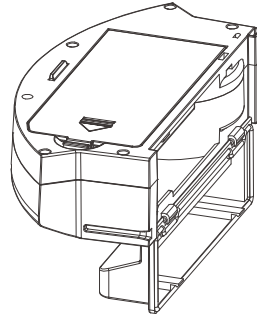


C. Dumping garbage

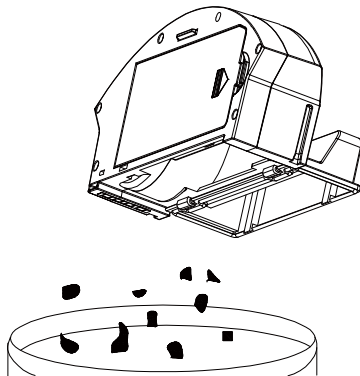


D. Open the high efficiency net cover

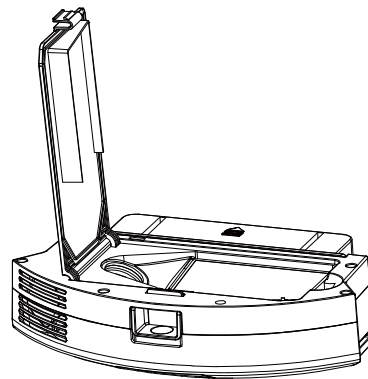

E. Take out the two filter screens: the high-efficiency screen and the primary-efficiency screen. It is not recommended to wash high-efficiency screen with water. Tap gently to remove dust.

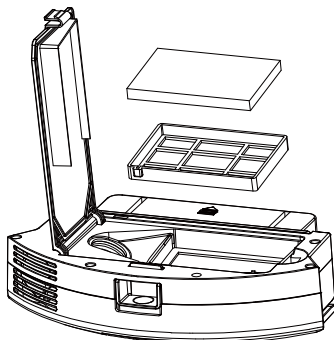


F. Rinse the primary filter screen

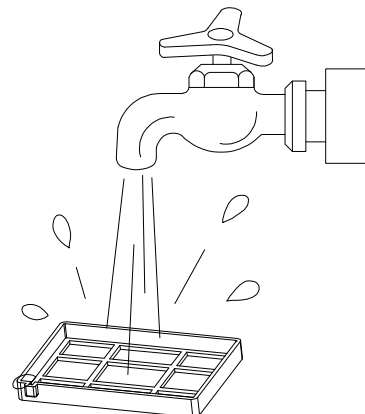


Product Maintenance

- G. The dust box is scrubbed clean with dishcloth. Do not allow water to seep into the fan port when cleaning.

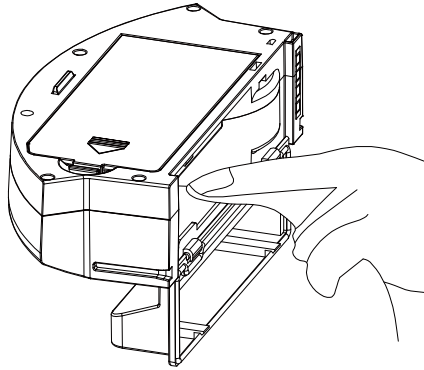

- H. Dry the dust box and filter assembly, and keep it dry to ensure its service life.

Note: It is recommended to wash the primary strainer with water 15 - 30 days after it is used. The maximum service life of the high efficiency filter screen is 3 months.

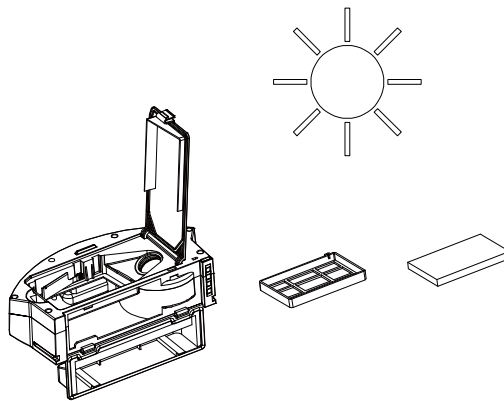

- I. Replace the primary filter screen and the high efficiency filter screen into the dust box;

Note: 1. Before installing the two filter screens, please ensure the two filter screens are in a dry state.

2. Do not expose the high efficiency strainer and primary strainer to the sun.

Product Maintenance


J. Cover the dust box cover and install the dust box on the Robot

Note: Do not allow water to seep into the fan port when cleaning.


Component maintenance / charging dock pins, down view sensor

Warm Tip: The interior of the charging pole piece, the sensor and the striking plate all contain sensitive electronic components, please use dry dishcloth when cleaning, and do not use wet dishcloth to prevent damage caused by water inflow.

Clean up charging dock pins

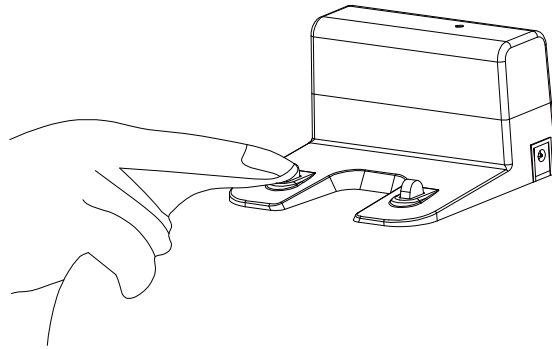

Clean the down-view sensor

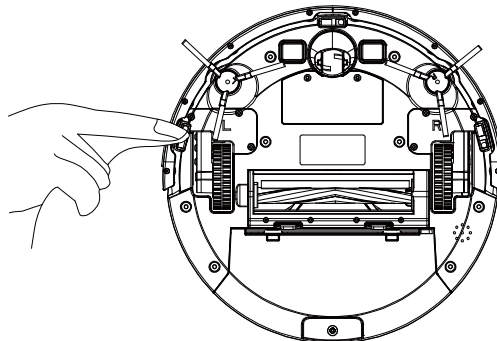

Product Parameter

Classification	Item	Detail
Mechanical Specifications	Diameter	330 mm
	Height	76 mm
	Weight	2.7 kg
Electrical Specifications	Power Rate	14.4V
Cleaning Specifications	Charging Type	Auto Charging/Manual Charging
	Cleaning Mode	Auto/single room/fixed point/edge
	Charging Time	3–4 elementary days
	Cleaning Time	100mins
Main Body Button Type		Touch pad

FCC Warning

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

NOTE 1: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE 2: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment complies with the FCC RF radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20cm between the radiator and any part of your body.