

Model:RR128-3BG

P/N: RR128-MOZ

Step by Step How to Programming Instructions:

These instructions are for the remote portion of the Key/Remote combo only. Key portion will still need to be cut and programmed if it requires a transponder chip.

- 1- Drivers door open & unlocked. Key out of ignition
- 2- Insert & remove key 2 times within 5 seconds
- 3- Close & open drivers door twice within 40 seconds
- 4- Insert key into ignition & remove
- 5- Close & open drivers door twice within 40 seconds
- 6- Insert key into ignition
- 7- Close the door
- 8- Turn ignition switch from "**LOCK**" to "**ON**" & back to "**LOCK**"
 - **ONCE** for ADD mode
 - **TWICE** for **REWRITE** mode

- 9 - Remove the key from ignition
- 10- To confirm your mode selection, the power locks will now cycle "**lock**" to "**unlock**" a number of times corresponding to your key cycles in step 8
- 11- Within 40 seconds of confirmation
 - Press both transmitter Lock & Unlock buttons simultaneously
 - Within 3 seconds press transmitter Lock button for more than 1 second
 - If successful, the power locks will cycle once (twice indicates transmitter problems)
 - Repeat step 11 for additional remotes
- 12- Open door to exit programming

Please take attention that changes or modification not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.