


Set Up

Connect the universal voltage AC adaptor to the DC jack on the bottom panel of the unit.

Plug into a wall outlet that is not controlled by a light switch and is within easy reach of the unit.

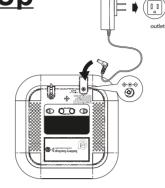

- Place the unit on a level surface away from sources of direct sunlight or excessive heat.
- Remove plastic protective film from the clock display. · Clean your unit with a soft, damp cloth. Strong cleaning agents, such as thinner or similar materials can damage the
- **Setting the Time Zone and Clock** (Factory Preset Clock)

 
The first time you connect your new preset clock to the AC outlet, the unit will automatically show the correct Eastern Standard time, which is the default setting. If you are not in the Eastern time zone, you must change the default setting to match your time zone (see Time Zone Setting below). Once the correct time zone is set, if the time displayed is not correct, follow steps under Manual Clock Setting to set the correct hour, minute, year and date.

Time Zone Setting

Press and hold the time zone button located on the bottom of the unit. The default EASTERN time zone will flash in the bottom of the display.



Press and release the - or + button as needed until your time zone is displayed. The time display will also change according to zone selected.



Press and release the **time zone button** to confirm time zone setting.



Daylight Saving Time



The unit ships with the Daylight Saving Time (DST) switch located on the bottom of the unit in Auto position, and will automatically adjust when the time changes in March and November. To switch manually, slide switch to +1 to add an hour or to -1 to subtract an hour.

Volume Limiter



The unit ships with the Volume Limit switch in HI position, and the maximum volume output will be at 100%. For smaller rooms, slide the switch to the LO position to limit/lower the maximum volume by 25%.

Manual Clock Setting

 
Press and hold the time set button on the bottom of the unit to enter clock setting mode. The time will flash and SET will appear on the display.



Press the - or + button to adjust time (hold for rapid adjust). Make sure to set the correct AM or PM time. The PM symbol will appear on the clock display. There is no AM symbol.




Press the time set button to confirm time. The year will flash.




HW5 Quick Start Guide - Inside

When Low Battery Icon flashes on the bottom right of the display, replace backup batteries with 2 fresh AA batteries. Keep unit connected to AC power when replacing batteries or you will lose settings. Make sure to match polarity (+/-) on batteries as shown

 

Battery backup installation

 

Battery Cautions and Tips

- Only use the recommended/supplied batteries or equivalent.
- Use alkaline batteries for longer life.
- Do not mix old and new batteries, and do not mix alkaline, carbon-zinc or rechargeable nickel-cadmium batteries.
- Insert batteries with proper polarity (+/-) as indicated.
- Do not attempt to recharge non-rechargeable batteries.
- Do not open batteries or heat them beyond normal ambient temperatures.
- To prevent battery leakage or damage, remove batteries from a product if it will not be used for a month or longer. • Use extreme caution handling leaking batteries (avoid direct contact with eyes and skin). If
- battery leakage comes in contact with eyes, IMMEDIATELY flush the eye with lukewarm and gently flowing water for at least 30 minutes. If skin contact occurs, wash skin with clear water for at least 15 minutes. Seek medical attention if any symptoms occur.
- Store in cool, dry, ventilated area away from hazardous or combustible material.
- Do not dispose of batteries in the household trash or fire.
- Follow applicable laws and local regulations for the disposal and transportation of
- Caution Risk of explosion if the battery is replaced by an incorrect type.

Secure the attached Security Tether to a wall or other permanent surface.

CAUTION: DO NOT attach to an AC outlet or cause it to become entangled with anything that can create a hazardous situation.

Tips For Guests

Place Qi compatible device in the middle of marked charging target circle, with the front facing you. Check the wireless charging icon (1) on the right of the display:

- Rapid blinking icon Device is not charging. Reposition device.
- Slow blinking icon Device is charging properly.
 Solid icon Device is charged (some devices do not support
- this feature).
- No icon Not in charging mode (no device on unit)

• Thick or metal device cases can interfere with wireless charging. Removing such a case may improve wireless charging. • Wireless charging uses a magnetic field. Avoid placing any metal object or

personal items with magnetic stripes (credit cards, bank cards, key cards, metal magnetic phone cases) near the wireless charging area to prevent damage. This unit is compatible with the Qi wireless charging standard. PMA wireless charging is not supported. The wireless charging process generates heat that may cause phones and chargers to get warm to the touch. This is natural for

USB Charging (Unit Includes USB-C Port and Standard USB Port)



Press and hold the Bluetooth Button to enter pairing mode. Select 'HW5' on your Bluetooth device to connect. 'BT' will appear on the display when connected.

IMPORTANT SAFETY INSTRUCTIONS

When used in the directed manner, this unit has been designed and manufactured to ensure your personal safety. However, improper use can result in potential electrical shock or fire hazards. Please read and follow all safety and operating instructions carefully before installation and use, and keep these instructions handy for future reference. Take special note of all warnings listed in these instructions and on the unit.

- Water and Moisture The unit should not be used near water. For example: near a bathtub,
- washbowl, kitchen sink, laundry tub, swimming pool or in a wet basement.

 2. Ventilation The unit should be situated so that its location or position does not interfere with its proper ventilation. For example, it should not be situated on a bed, sofa, rug or similar surface that may block ventilation openings. Also, it should not be placed in a built-in installation, such as a bookcase or cabinet, which may impede the flow of air through the presidents provided the control of the provided that the provided that the provided the provided that the provi
- ventilation openings. 3. Heat The unit should be situated away from heat sources such as radiators, heat registers, stoves or other appliances (including amplifiers) that produce heat.

 4. Power Sources - The unit should be connected to a power supply only of the type described in the operating instructions or as marked on the appliance. Only use the AC adapter that came
- with the unit.

 5. Power-Cable Protection Power supply cables should be routed so that they are not likely to be walked on or pinched by items placed upon or against them. It is always best to have a clear
- be walked on or pinched by items placed upon or against them. It is always best to have a clear area from where the cable exits the unit to where it is plugged into an AC socket.

 6. Cleaning The unit should be cleaned only using a warm damp cloth. Do not use solvents, etc.

 7. Objects and Liquid Entry Care should be taken so that objects do not fall and liquids are not spilled into any openings or vents located on the product.

 8. Attachments Do not use attachments not recommended by the product manufacturer.

 9. Lightning and Power Surge Protection Unplug the unit from the wall socket and disconnect
- the antenna or cable system during a lightning storm or when it is left unattended and unused for long periods of time. This will prevent damage to the product due to lightning and
- power-line surges.

 10. Overloading Do not overload wall sockets, extension cords, or integral convenience receptacles as this can result in a risk of fire or electric shock.
- 11. Damage Requiring Service The unit should be serviced by qualified service personnel when: A. the power supply cable or plug has been damaged.
 B. objects have fallen into or liquid has been spilled into the enclosure.
 C. the unit has been exposed to rain.
- 12. Periods of Nonuse If the unit is to be left unused for an extended period of time, such as a month or longer, the backup battery should be removed from the unit to prevent damage or 13. Servicing - The user should not attempt to service the unit beyond those methods described in
- the user's operating instructions. Service methods not covered in the operating instructions should be referred to qualified service personnel. 14. Magnetic Interference: This product's speakers contain powerful magnets which could cause interference or damage to sensitive equipment such as hard drives, CRT televisions and
- monitors, as well as medical, scientific, and navigational devices. Keep this unit away from these
- 16. Unplug this product during lightning storms or when unused for long periods of time. 7. No naked flame sources, such as lighted candles, should be placed on this product. 18. Attention should be drawn to the environmental aspects of battery disposal.
- 21. Do not dispose of batteries in the household trash or fire. 22. The mains plug/coupler is used as the disconnect device, it shall remain readily operable.

FCC Information

FCC Radiation Exposure Statement

This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm

conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

- Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

 NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

 These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

 However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

 Reorient or relocate the receiving antenna.

 Increase the separation between the equipment and receiver.

 Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

 Consult the dealer or an experienced radio/TV technician for help.

CAN ICES-3(B) / NMB-3(B)

ouipment should be installed and operated with a minimum distance of 20 cm between the radiator and your body

Cet équipement est conforme aux limites d'exposition aux radiations IC CNR-102 établies pour un environnement non

contrôlé.

L'émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes:

(1) L'appareil ne doit pas produire de brouillage;

(2) L'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

rme aux exigences d'exposition RF ISED, les utilisateurs peuvent obtenir des informations canadiennes sur l'exposition aux RF et la conformité.

l'exposition de RSS-102 rf, utilisateurs peut obtenir l'information canadienne sur l'exposition et la conformité de rf.

Cet équipement doit être installé et utilisé avec une distance minimale de 20 cm entre le radiateur et votre corps.

Tout changement ou modification non expressément approuvé par la partie responsable de la conformité peut annule

Bluetooth is a registered trademarks of Bluetooth SIG Inc. Bluetooth technology is incorporated under license from Bluetooth SIG Inc.

LIMITED 30 DAY WARRANTY

(valid in contiguous U.S.A. only: not valid in Hawaii or Alaska) Hotel Technologies, a division of HTI Industries LLC. (hereafter referred to as Hotel Technologies) warrants this product to be free from defects in workmanship and materials, under normal use and conditions, for a period of 30 days from the date of receipt of the item.

Should service be required by reason of any defect or malfunction during the warranty period, Hotel Technologies will repair or, at its discretion, replace this product without charge. This decision is subject to verification of the defect or malfunction upon delivery of this product to the Factory Service Center listed below.

Before returning this product for service, please first replace the batteries (if applicable) with fresh ones, as exhausted or defective batteries are the most common cause of problems encountered. If service is still required:

- 1. Fax a representative at 915.633.1388 with a Return Authorization request including proof of purchase date (i.e., invoice number and date from distributor or HTI) to receive a Return Authorization Number, Issuance of Return Authorization Number is subject to review prior
- NO ITEM CAN BE ACCEPTED WITHOUT A RETURN AUTHORIZATION NUMBER. 2. Remove batteries (if applicable) and pack the unit in a well-padded, heavy corrugated bo
- 3. Send the unit by method agreed to with your representative to the Factory Service Center Consumer Repair Department
 - Hotel Technologies Inc. 1330 Goodyear Drive FI Paso TX 79936-6420

NOTE: Improperly packed items or Items received without an RA # cannot receive credit. NOTE: This warranty is valid only if the product is used for the purpose for which it was designed. It does not cover (i) products which have been damaged by negligence, misuse or accident, or which have been modified or repaired by unauthorized persons; (ii) cracked or broken cabinets, or units damaged by excessive heat; (iii) damage to tape cassettes (if to the owner.

 
This warranty is valid only in the United States of America and does not extend to owners of the product subsequent to the original purchaser. Any applicable implied warranties are also limited to 30 days, and Hotel Technologies will not be liable for consequential damages. (Some states do not allow limitations on implied warranties or exclusion of consequential damages, so these restrictions may not apply to you.) This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

If you did not purchase this product directly from Hotel Technologies, please contact the appropriate distributor for their warranty terms.



Press the - or + button to set the date (hold for rapid adjust)

Press the time set button to confirm year. The date will flash.



Press the **time set button**. 2 beeps will confirm Clock Setting is complete



Note: Make sure that the Year Month and Date settings are correct so that the Auto Daylight Savings Time adjustments will occur on time

TIP: Press the Alarm On/Off Button when display is flashing during clock setting to toggle between 12 hour and 24 hour display modes.

Thank you for your business!

© 2021 HTI Industries, LLC. All rights reserved

Printed in China

June 9, 2021