# # Tronsmart

**Mega Pro**Bluetooth Speaker



**User Manual** 

# CONTENTS

English 01~08	1 x User manual 1 x Storage bag
Italiano 09~15	BUTTON CONFIGURA  ① Voice assistant; Answer ② Disconnect Bluetooth; ③ TWS ④ EQ ⑤ Previous track ⑥ Play/Pause ② Next track ⑧ NFC ② Volume +/- slider; ⑩ Power ON/OFF ⑪ USB-A port (USB flash or USB-A port (USB flash or USB-A port) ② TF/Micro SD card slot ⑤ Aux-in port ⑭ Type-C charging port
Español 16~22	
Deutsch 23~29	
Français 30~36	
русский 37~43	
日本語 44~50	

1 x Mega Pro Bluetooth speaker

Thank you for purchasing the Tronsmart Mega Pro Bluetooth Speaker. Please read the user manual before use and keep it handy for future reference. If you have any additional questions or comments, please contact us by email at: support@tronsmart.com

### PACKAGE CONTENTS

1 x 3.5mm audio cable 1 x Type-C charging cable 1 x Warranty card 1 x User manual age bag


### ON CONFIGURATION

assistant: Answer/End a phone call nnect Bluetooth; Reset; Music playing mode ious track

A port (USB flash drive / power bank function) licro SD card slot

> 0 2 3 4 5 6 7 6 \_\_\_\_

Power On: Press and hold for 1 second to turn it on.

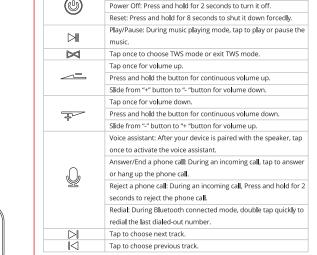

#### Three EQ effects switching: Tap to switch three equalizer audio effects among Deep Bass, Vocal and 3D in turn. Deep Bass (default): Without an indicator light Vocal: Green light 3D: Blue light Press to switch music playing modes between Bluetooth, Aux-in and Micro SD card mode. Disconnect Bluetooth: Press and hold for 3 seconds to disconnect Bluetooth. (The indicator light will keep on blue when the speaker is connected to Bluetooth. Instead, it'll keep flashing on blue. Reset: Press and hold for 8 seconds until a sound prompt is heard to clear all paired devices and reset to factory default settings.

 
#### <u>SPECIFICATIONS</u>

Weight

Model Mega pro Bluetooth profile A2DP V1.3, ACRCP V1.4, HFP V1.6 Bluetooth transmission Up to 20m/66ft (open area) Power supply DC 5V/3A, via Type-C port 20Hz - 20000Hz 10400mAh Up to 10 hours (on a 50% volume) Up to 20 hours (on a 70% volume) About 24 months 3 - 4 hours 9.92 x 3.31 x 4.13 inches / 252 x 84 x 105 mm

1780 g / 62.78 oz

## How to Use



### 2. Bluetooth Disconnect



Turn on the speaker and your Press and hold the 'M' butto device's Bluetooth settings, search 3 seconds to disconnect for 'Tronsmart Mega pro' then tap Bluetooth. to connect.

#### 3. Pair Two Mega Pro Bluetooth Speakers



Turn two speakers on and confirm they're not paired any Bluetooth

After two speakers have paired with each other successfully, you will

hear a sound prompt and the indicator lights will go on yellow.

Press the 'TWS' button once to disconnect two speakers from each

#### 5. Three Equalizer Audio Effects Switching

Tap the 'EQ' button to switch three equalizer audio effects between Balanced, 3D, and Deep Bass in turn.

s (defau <b>l</b> t)	<b>\Ohi</b>	Without an indicator light
	Ö.	Green light
	Ċ.	Dlug light

### 6. NFC Streaming

M M M M M

----

4. Disconnect Two Speakers

**——** 

Confirm Bluetooth & NFC functions are enabled on your device, and then put the device on the NFC area of the speaker to pair automatically. If you need to disconnect NFC streaming, put the device back to the area again to disconnect.

### 7. USB-A Power Bank Function

is speaker carries a USB charge out function that will automatically detect your device and begin to charge it when the charging cable is plugged into the USB-A port. The output power is up to DC 5V/1A. In order to maintain stable music playing performance, it's not recommended to use the music and power bank function at the same

Simply connect the speaker with your non-Bluetooth device via the 3.5 Note: After plugging in an audio cable, the speaker will automatical

switch to Aux-in mode.

#### 9. TF/Micro SD Card Slot Mode

The speaker will play the music from your TF/Micro SD card when problems while using the product, please do not he sitate to contact our plugging the card into the slot. The maximum supported memory is 3 customer support team at support@tronsmart.com.

### 10. USB Flash Drive Mode

The speaker will play the music from your USB flash drive when plugging the USB into the USB-A port. The maximum supported memory is 1

#### 11. Reset to Factory Default Settings

Press and hold the 'M' button for 8 seconds until a sound prompt is heard, which means that the speaker has been reset to factory default

#### 12. Auto Power Off

The speaker will power off automatically after 1 hour if it does not pair with any device through Bluetooth or does not play any sound after pairing. When in low battery, the speaker will power off automatically as

	0 0	
Ď.	Red light	Charging
0	Goes off	Charging completion

### Care & Maintenance

drop or jump on it and treat it with care for the best performance. Keep the product in a dry location. Dust, dirt & moisture from humidity can accumulate on the body of the product if kept at an unfriendly place. Do RF warning statement: The device has been evaluated to meet general RF exposure

#### Warranty Information

Your 'Tronsmart Mega Pro Bluetooth Speaker', is warranted to the original owner for 12 months from the date of purchase against defects in material and workmanship under normal use and service. Tronsmart is not responsible for the accidental use of this product and its liability will not exceed the purchase price of the product. If you have any

not dispose this product in fire or batteries may explode or leak.

### **FCC STATEMENT**

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: 1) this device may not cause harmful interference, and 2) this device must accept any interference received, including interference that may cause undesired operation. Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy

and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

#### -- Reorient or relocate the receiving antenna.

--Increase the separation between the equipment and receiver. -- Connect the equipment into an outlet on a circuit different from that to

Do not use any form of detergents or cleaning material to clean the -- Consult the dealer or an experienced radio/TV technician for help. responsible for compliance could void the user's authority to operate

which the receiver is connected.

requirement. The device can be used in portable exposure condition without restriction.

SHENZHEN GEEKBUY E-COMMERCE CO., LTD. 19th Floor, Galaxy World Tower B, #1 YaBao Rd.,

LongGang District, Shenzhen, China Email: support@tronsmart.com 800-270-1082 (USA & Canada)

+86-755-23603740 (Global)











www.tronsmart.com FCCID: 2AV3Z-MEGAPRO Made in China