



**CINCO ANAL BEADS
USER GUIDE**

 
b-Vibe™ products are made with silky smooth, body-safe silicone. Our products are phthalate-free and latex-free.

The easy to use interface allows users to easily reach their desired stimulation and intensity level. Get ready for sensual satisfaction and exploration that will have you craving for more.




b-Vibe™ Cinco Anal Beads

CINCO ANAL BEADS

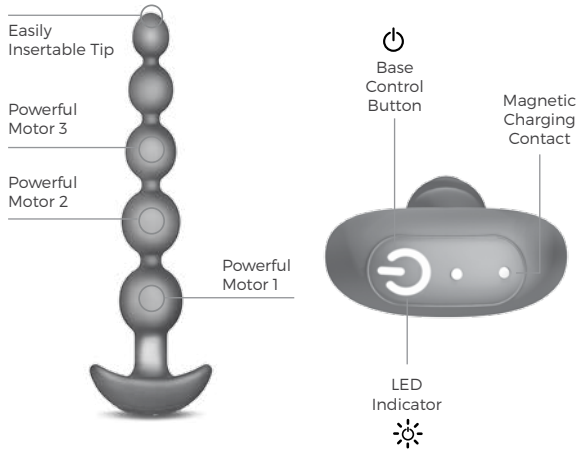

WIRELESS REMOTE CONTROL

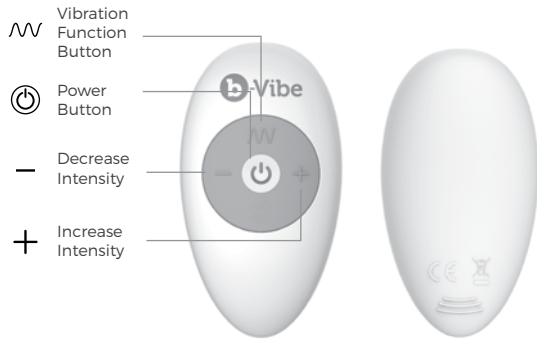 


GETTING STARTED


1. Before first use, charge your anal beads for approximately 2 hours. The USB charging cable can be plugged into any USB port or USB/AC power adapter (not included).

- Flashing Light = Charging
- Solid Light = Fully charged
- Rapid Flashing Light = Low battery. Charge is needed

 

2. Wash your anal beads with soap and water or toy cleaner suitable for use with silicone items.

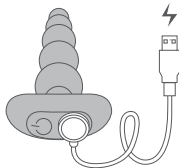


3. Lubricate your anal beads with a water based, silicone compatible lubricant.

4. Turn ON your anal beads by pressing  quickly at the bottom of your anal beads.

 The light will flash, indicating the power is on and in standby mode.

 
Push  again to use the manual mode, or push  on the remote to pair the remote & anal beads.

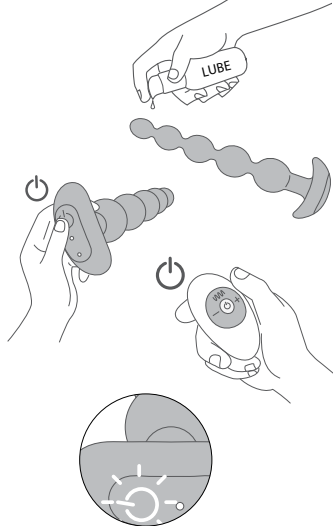


Once in use, the base light will change from flashing to solid.

 
 


FAQs can be found at
www.bvibe.com



Email us at
customerservice@bvibe.com
for any unanswered questions


5. To change the vibration mode/pattern and intensity via the base control, press the . There are a total of 15 modes when using manual control. Vibration intensity can only be increased via use of the remote control.

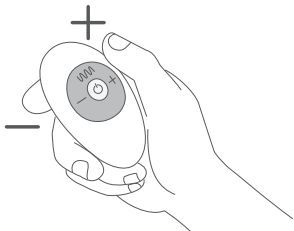
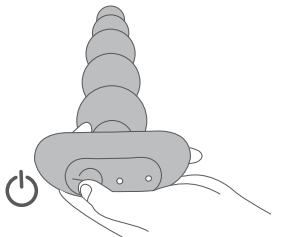
6. To change the vibration intensity and/or the mode/pattern via the remote control, press and release  (Increase Intensity) and  (Decrease Intensity). Press and release  to change the vibration mode/pattern.




MANUAL CONTROL

1. To turn the item ON quickly press . The  will flash to indicate the power is on. Push again to change the vibration pattern. There are a total of 15 modes using the manual control. Vibration intensity can only be increased via use of the remote control.

  2. To power OFF your anal beads press and hold  for 2 seconds. LED will turn off to indicate the power is OFF.

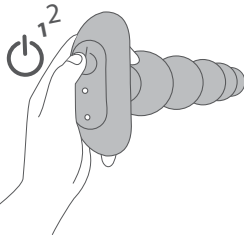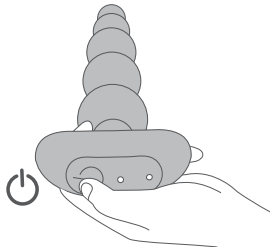

REMOTE CONTROL

 
 
1. First turn your anal beads on in standby mode by quickly pressing  on your anal beads.


2. While the baselight is flashing, power on your remote to pair the remote & anal beads.


3. Once the item is paired the base light will become solid and you can control your anal beads by remote.

4. Press and release **+** to increase vibration intensity.


5. Press and release **-** to decrease vibration intensity. There are a total of 6 vibration intensity levels.

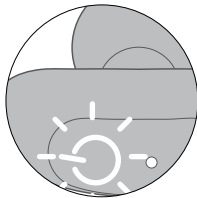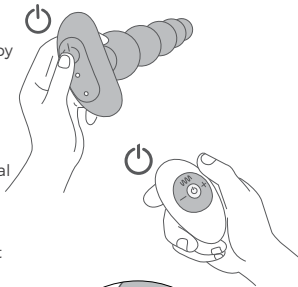

6. The vibration modes can be changed by pressing and releasing . There are 15 vibration modes when using the remote control.

7. To turn the item ON/OFF press and release  on the remote.

 8. To completely turn off your anal beads, you must press and hold  on your anal beads.

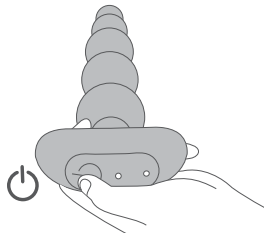

CHARGING YOUR ANAL BEADS

 
- Attach the USB charging plug to the designated magnetic charging area on the base of the product.

- Flashing light indicates item is charging.

- Solid light indicates item is fully charged.

- Rapid flashing indicates charging is required.

- Your anal beads require approximately 2 hours for full charge.

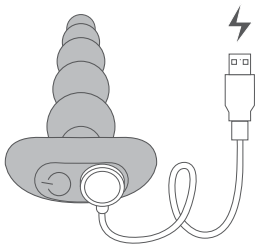

Flashing light = Charging



Solid light = Fully Charged



 
CHANGING YOUR REMOTE CONTROL BATTERY

- Slide open the remote control battery compartment as shown.

- Button cell CR 2032 has been preinstalled into the remote control.

- Remove the paper slip inside the battery compartment to activate the power in the remote control.

- Store the remote control and the battery separately to prolong the battery life.

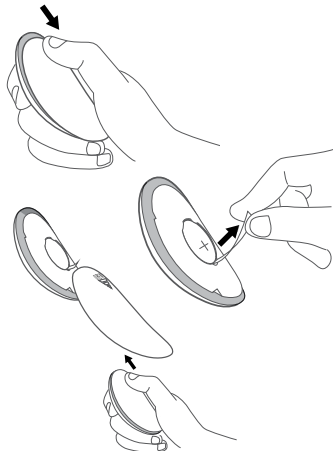

TRAVEL LOCK


 
- All b-Vibe items include travel lock for safe and convenient travel



Via the remote:

Simultaneously press and hold the + and – buttons for 3 seconds. Flashing light on the remote will indicate the item is locked.

To unlock simply press and hold + and – again for 3 seconds. Flashing light will indicate lock is disabled.

Via the anal beads:

  Hold  for 5 seconds, flashing light on the base of the anal beads will indicate the item is locked. For unlocking, hold  again for 5 seconds, flashing light will indicate the item is unlocked.

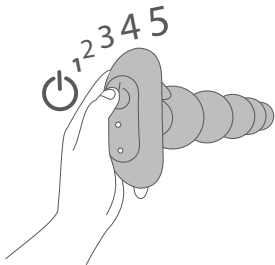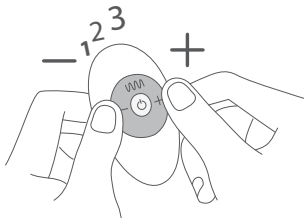

VIBRATING MODES

- There are 6 vibration intensities.
- There are 15 vibration modes, explained below:

Vibration Intensity

Vibration Pattern

1. Low

Vibration Pattern 1

2. Speed II

Vibration Pattern 2

3. Speed III

Vibration Pattern 3

4. Speed IV

Vibration Pattern 4

5. Speed V

 
Vibration Pattern 5

6. Maximum

Vibration Pattern 6

Vibration Pattern 7

Vibration Pattern 8

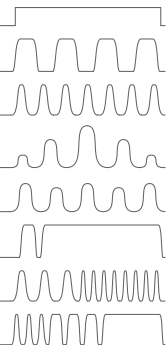

VIBRATING MODES

Vibration Intensity

Vibration Pattern

1. Low

Vibration Pattern 9

2. Speed II

Vibration Pattern 10

3. Speed III

Vibration Pattern 11

4. Speed IV

Vibration Pattern 12

 
5. Speed V

Vibration Pattern 13

6. Maximum

Vibration Pattern 14

Vibration Pattern 15

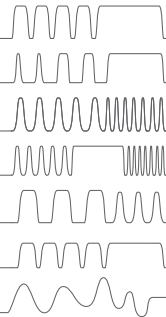

b-Vibe CARE


Cleaning, Storage & Safety

1. Always clean your anal beads thoroughly before and after each use.


2. We recommend premium water-based lubricant. Silicone-based lubricants are not recommended and can cause damage to the product.

3. To properly clean your anal beads, wash with luke-warm water and a respected antibacterial soap. Rinse clean and pat dry using a lint-free cloth or towel. Do not use cleaners containing alcohol, petrol or acetone.

4. Avoid leaving your anal beads in direct sunlight and never expose it to extreme heat.

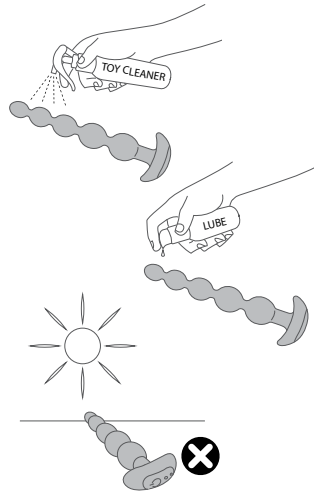

5. Our products are designed to be splash-proof. This means that a session in the shower or washing in running water will not cause damage, but prolonged exposure — such as using in the bath — would be harmful. **Do not fully submerge your anal beads in water.**

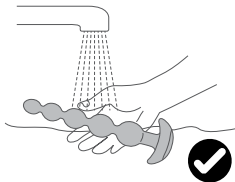

6. Never charge your anal beads while they are wet. Ensure that the charging pins on the base of the anal beads are completely dry before connecting to the charging cord.



If your anal beads appear to function abnormally, turn OFF and consult our customer care section on bvibe.com, where you will find help tips. Should you require further assistance please contact: customerservice@bvibe.com



Never charge your anal beads while they are wet.

SPECIFICATIONS

Materials Body Safe Silicone / ABS

Size 137 x 63 x 28 mm

Weight 74 g

Battery Battery li-ion
320mAh

Charging 2 hours

Use Time 1 hour

Max Noise Level < 68 dB

Interface Single Button
Manual Control
4 Button Remote
Control

DISPOSAL INFORMATION

Disposal of old electronic equipment (applicable in the EU and other European countries with separate waste collection systems):



The crossed-out dustbin symbol indicates that these items should not be treated as household waste, but rather brought to the appropriate collection point for recycling electrical and electronic equipment.

RADIO AND TELECOMMUNICATION TERMINAL EQUIPMENT (R&TTE)

Declaration of Conformity

Hereby, b-Vibe declares that this Cinco Anal beads product is in compliance with essential requirements and other relevant provisions of Directive 1999/5/EC. A copy of the Declaration of Conformity can be found at www.bvibe.com.

FCC STATEMENT

1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/ TV technician for help.

Complete user instructions in additional languages and FAQ can be found at:
www.bvibe.com

Email us at
customerservice@bvibe.com
for any unanswered questions

Designed and Developed by
b-Vibe™

Made in China
© 2016 **b-Vibe™**

bvibe.com