

InnoVibe®

GROOVE TUNES 9" LED SPEAKER AND MIC



USER MANUAL

IVSP1648



PRINTED IN CHINA/ 2024

WARRANTY INFORMATION

90-DAY LIMITED WARRANTY TERRITORY: UNITED STATES/CANADA

LIMITED WARRANTY TO ORIGINAL CONSUMER

This product (including any accessories included in the original packaging) as supplied and distributed new by an authorized retailer is warranted by MCG Innovations Inc., to the original consumer purchaser against defects in materials and workmanship ("Warranty") as follows:

To obtain warranty service:

Call **848-412-0910** or email cs@mcginno.com. Clearly explain the issue that you are having, including the product's name, brand, and model number.

Your product will be repaired or replaced, at our option, for the same or similar model of equal value if examination by the service center determines this product is defective. Products received damaged as a result of shipping will require you to file a claim with the carrier.

WARRANTY SERVICE NOT PROVIDED

This warranty does not cover damage resulting from accident, misuse, abuse, improper installation or operation, lack of reasonable care, unauthorized modification including software modifications such as the installation of custom firmware. This warranty is voided in the event any unauthorized person opens, alters or repairs this product. All products being returned to the authorized service center for repair must be suitably packaged.

NO WARRANTIES, WHETHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, OTHER THAN THOSE EXPRESSLY DESCRIBED ABOVE SHALL APPLY. DISTRIBUTOR FURTHER DISCLAIMS ALL WARRANTIES AFTER THE EXPRESS WARRANTY PERIOD STATED ABOVE. NO OTHER EXPRESS WARRANTY OR GUARANTY GIVEN BY ANY PERSON, FIRM OR ENTITY WITH RESPECT TO THE PRODUCT SHALL BE BINDING ON DISTRIBUTOR. REPAIR, REPLACEMENT, OR REFUND OF THE ORIGINAL PURCHASE PRICE – AT DISTRIBUTOR'S SOLE DISCRETION – ARE THE EXCLUSIVE REMEDIES OF THE CONSUMER. IN NO EVENT WILL DISTRIBUTOR OR ITS MANUFACTURERS BE LIABLE FOR ANY INCIDENTAL, DIRECT, INDIRECT, SPECIAL, PUNITIVE OR CONSEQUENTIAL DAMAGES (SUCH AS, BUT NOT LIMITED TO, DAMAGES FOR LOSS OF PROFITS, BUSINESS, SAVINGS, DATA OR RECORDS) CAUSED BY THE USE, MISUSE OR INABILITY TO USE THE PRODUCT. EXCEPT AS STATED HEREIN, NO OTHER WARRANTIES SHALL APPLY. NOTWITHSTANDING THE FOREGOING, CONSUMER'S RECOVERY AGAINST DISTRIBUTOR SHALL NOT EXCEED THE PURCHASE PRICE OF THE PRODUCT SOLD BY DISTRIBUTOR. THIS WARRANTY SHALL NOT EXTEND TO ANYONE OTHER THAN THE ORIGINAL CONSUMER WHO PURCHASED THE PRODUCT AND IS NOT TRANSFERABLE.

Some countries, states or provinces do not allow the exclusion or limitation of incidental or consequential damages or allow limitations on warranties, so limitation or exclusions may not apply to you. This warranty gives you specific legal rights, and you may have other rights that vary from state to state or province to province. Contact your authorized retailer to determine if another warranty applies.

All product names, trademarks, and registered trademarks are property of their respective owners. All company, product, and service names used in this document are for identification purposes only. Use of these names, trademarks, and brands does not imply endorsement.

COMPLIANCE INFORMATION

FCC INFORMATION

This device complies with Part 15 of the FCC Rules.

CAUTION:

Any changes or modifications not expressly approved could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

RADIATION EXPOSURE INFORMATION:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

RATING LABEL DEFINITIONS



Direct current symbol.



This symbol represents FCC Declaration of Conformity and compliance



This symbol signifies that the product must not be discarded as household waste and should be delivered to an appropriate collection facility for recycling. Proper disposal and recycling helps protect natural resources, human health and environment.

GETTING STARTED

BEFORE YOUR BEGIN

CHARGE YOUR SPEAKER:

Before you use your speaker, you must first charge it. Insert the included micro-USB cable into the DC 5V charging port and insert the other end into a suitable USB power port, such as one on a PC or a wall adapter. The light indicator on your speaker will emit a red light while charging and will stop emitting light once the battery is fully charged.

POWERING ON YOUR SPEAKER

Power on your speaker by pressing the ON/OFF button (button 9 in the interface diagram to the right). You will hear a tone to indicate that your speaker has powered on. If you have previously connected your speaker to a Bluetooth device it will reconnect automatically if the device is within range. If this is the first time using your speaker, then it will enter Bluetooth pairing mode.

PAIRING YOUR SPEAKER

To pair your speaker to a compatible Bluetooth device, first turn on the speaker using the ON/OFF button. A tone will let you know that the device has powered on and that it is in Bluetooth mode. On your compatible device, follow the manufacturer's instructions to navigate to the Bluetooth pairing menu. Select your new Groove Tunes speaker from the list of available devices and continue the pairing process per the manufacturer's instructions. Your speaker should now be paired with your device and should automatically reconnect when it is powered on.

TWS PAIRING

If you own two Groove Tunes speakers they can be synced together to provide high fidelity true wireless stereo. To do this first power on both speakers and ensure that they are in Bluetooth mode. On either of the two devices press and hold the Play/Pause button for 2-3 seconds (button 7 in the interface diagram to the right). You will hear a tone indicating that the two speakers have successfully paired and they will now operate in sync.


FM RADIO

With the speaker powered on use the MODE button to select FM mode from the available options (button 5 on the interface diagram to the right). Press and hold the Play/Pause button (button 7) for 2-3 seconds to scan available channels. Once scanning has finished you can cycle through the stations that are available by using the Previous and Next Track buttons (buttons 6 and 8 respectively).

LIGHT MODE

By default your speaker will be in LED mode, emitting light which will pulse to the rhythm of the music being played. If you wish to turn the LED lights off press and hold the MODE/LED button for 2-3 seconds (button 5 on the interface diagram to the right).

INTERFACE DIAGRAM

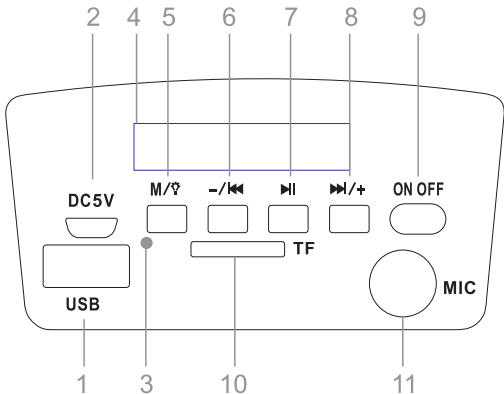

PRODUCT INTERFACE

1. USB Port
2. DC 5V Charging port
3. LED Indicator
4. Display Screen
5. Mode/LED button
 - quick press to change between Bluetooth streaming and FM radio mode
 - long press to change the LED lighting mode
6. Previous track/Volume down
 - quick press for previous track
 - press and hold to decrease volume
7. Play/Pause/TWS pairing button
 - quick press to play or pause music
 - long press to enter TWS pairing mode
8. Next track/ Volume up
 - quick press to play the next track
 - press and hold to increase the volume
9. Power ON/OFF button
10. TF card Slot
11. Wired microphone port

InnoVibe®

WWW.MCGINNOVATIONS.COM

INNOVIBE® NAME AND LOGO ARE REGISTERED
TRADEMARKS OF MCG INNOVATIONS INC.
MANUFACTURED AND MARKETING UNDER LICENSE.
©2024. ALL RIGHTS RESERVED.
MADE IN CHINA