




Getting Started With Your



www.nuumobile.com

A3 Overview

Front/Back

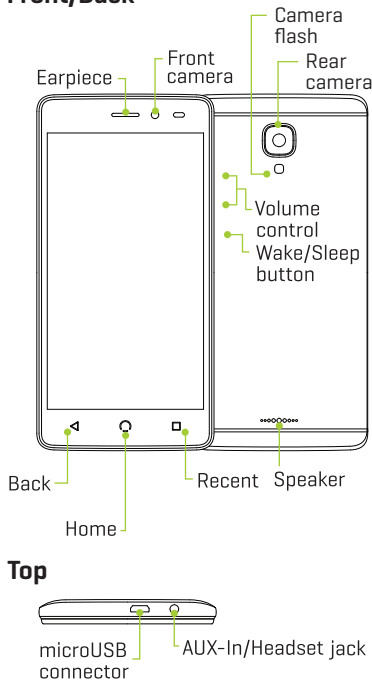

Getting Started

How to use the phone keys

In any screen, tap the back key "◀" to return to previous screen or exit the application. Tap the home key "□" to return to the home screen. Tap the recent key "□" to display all the programs that are currently in use. Tap the "on/off" button, to turn on or off the screen and block the screen. Long press "on/off" to shut down or to restart your mobile. Maintain pressed the button "on/off" and then press the volume down key to take a screen capture.

Language

Tap the settings icon. Scroll down under "Personal" and tap "Language & input", then select your preferred language by tapping "Language".

Calls

Tap the "Phone" icon, then tap on "Contacts" to select the contact you would like to make a call to. Or, simply make a call by inputting the number after selecting the "dial" application.

Message

Tap the "Messages" icon, then "+" to create a new message. Input a name or number into the receiver field or choose someone from your contact list, then input your message. Press the paperclip button if you want to attach a picture, video or other media. When done, click "Send".

Writing and copying a text

The phone will make recommendations as you type. If you want to copy or cut text, long press the text for a few seconds and use the selecting arrows to select, or use the "select all" option, then copy or paste your text.

Camera

Tap the "camera" icon to open the camera. The phone supports a variety of picture modes such as HDR, flash, Face Beauty etc. To access these modes, select the "options" icon.

Galería

Tap the "gallery" icon to open the gallery to browse your photos, tap in one photo to open it. Tap "✎" to enter the edit mode. You can add color filter effects, rotate, crop and so on. Click "save".

Video camera

Tap the "camera" icon to open the camera and switch to "video" mode by tapping "□" to record.

Mail

Tap the "Gmail" icon. Then select the "pen" icon on the lower right corner to compose a new message. Use the paperclip to attach files or images. Tap on "send" when done. Note: You must set up an email account first.

Music

Tap the "Music" icon. Select playlist or song you would like to listen to. Playlists can be categorized by Artist, Albums, Genre or what you have created.

FM Radio

Connect earphones to the audio jack, tap the "FM Radio" icon and select frequency.

Comenzando

¿Cómo usar los Botones del teléfono?

En cualquier pantalla pulsa la tecla "◀" para regresar a la pantalla anterior o para salir de la aplicación. Pulsa la tecla de inicio "□" para regresar a la pantalla principal. Pulsa la tecla más reciente "□" para mostrar todos los programas que están actualmente en uso. Pulsa el botón "encender/apagar" para bloquear o desbloquear la pantalla. Mantén pulsado el botón de "on/off" y luego presiona el botón que baja el volumen para obtener una captura de pantalla.

Idioma

Pulsa el icono de configuración. Desliza la pantalla por debajo de "Personal" y pulsa "Idioma y entrada de texto", después elige tu idioma de preferencia pulsando "Idioma".

Llamadas

Pulsa el icono de "Teléfono", y después presiona en "Contactos" para seleccionar al contacto que te gustaría marcar. O, simplemente haz la llamada al escribir el número después de elegir la aplicación "Marcar".

Mensajes

Pulsa el icono de "Mensajes", después el de "+" para crear un nuevo mensaje. Escribe un nombre o el número dentro del campo de destinatario o bien elige a alguien de tu lista de contactos, después escribe tu mensaje. Presiona el botón del clip si quieres agregar una foto, un video u otro medio. Al terminar, pulsa el botón de "Enviar".

Escribe y copia un texto

Tu teléfono hará recomendaciones mientras escribes. Si deseas copiar o cortar un texto, pulsa el texto durante unos segundos y usa la flecha de selección para escoger, o usar la opción de "elegir todo", después copia y pega tu texto.

Cámara

Pulsa el icono de "Cámara" para tomar una foto. El teléfono incluye una variedad de modos tales como el de HDR, Flash, Face Beauty, etc. Para tener acceso a estos modos, elige el icono de "Opciones".

Galería

Pulsa el icono de "galería" para abrir y ver tus fotos, pulsa en una foto para abrir. Pulsa "✎" para entrar al modo de edición. Puedes agregar filtros de color con efectos, rotar, recortar, etc. Presiona el botón de "guardar".

Cámara de Video

Pulsa el icono de "Cámara" para abrir la cámara y cambiarlo al modo de "video" pulsando "□" para grabar videos.

Correos Electrónicos

Pulsa el icono de "Gmail". Después selecciona el icono de "pluma" que se encuentra en la esquina de la parte inferior a la derecha para componer un nuevo mensaje. Usa el clip para añadir archivos o imágenes. Pulsa en "Enviar" cuando termines. Nota: Debes crear primeramente una cuenta electrónica.

Música

Pulsa el icono de "Música". Elige la lista de canciones que te gustaría escuchar. La lista de canciones puede ser localizada por medio de Artista, Álbum, Género o como la hayas creado.

Radio FM

Conecta los audífonos a la entrada auxiliar, pulsa el icono de "Radio FM" y selecciona la frecuencia.

Commencer

Comment utiliser les touches du téléphone

Dans tout écran, appuyez sur la touche de retour "◀" pour retourner à l'écran précédent ou quitter l'application. Appuyez sur la touche d'accueil "□" pour retourner à la page d'accueil. Appuyez sur la touche récent "□" pour afficher toutes les programmes qui sont actuellement en cours d'utilisation. Appuyez sur la touche "on/off", pour activer ou désactiver l'écran et le bloquer. Tenir la touche "on/off" pour fermer ou redémarrer votre mobile. Appuyez et tenir la touche "on/off" puis appuyez sur la touche "baisser le volume" pour prendre une capture d'écran.

Langue

Appuyez sur l'icône des paramètres. Descendez vers le bas de la rubrique "Personnel" et appuyez "Langue et saisie", puis sélectionnez votre langue préférée en appuyant sur "Langue".

Appels

Appuyez sur l'icône d'appel, puis cliquez sur "Contacts" pour sélectionner le contact que vous voulez appeler. Ou simplement faire un appel en entrant le numéro après avoir sélectionné l'application "Composer".

Message

Appuyez sur l'icône "Messages", puis "+" pour créer un nouveau message. Entrer un nom ou numéro dans le récepteur ou choisir quelqu'un dans votre liste de contacts, puis entrer votre message. Appuyez sur le bouton de trombone si vous souhaitez d'attacher une photo, une vidéo ou d'autres médias. Lorsque vous avez terminé, cliquez sur "Envoyer".

Écrire et copier du texte

Tu téléphone fera des recommandations quand vous tapes. Si vous voulez copier ou couper du texte, faire un appui long sur le texte pour quelques secondes et utiliser les flèches de sélection pour sélectionner, ou utiliser l'option "select all" "Sélectionner tout", Enfin, copier ou coller votre texte.

Caméra

Appuyez sur l'icône "Caméra" pour ouvrir la caméra. Ce téléphone supporte une variété de mode d'images telles que HDR, le flin, le visage de beauté, etc. Pour accéder à ces modes, sélectionner l'icône "options".

Galerie

Appuyez sur l'icône "Galerie" pour ouvrir la galerie afin de parcourir vos photos, appuyez sur une photo pour l'ouvrir. Appuyez "✎" pour entrer le mode d'édition. Vous pouvez ajouter les effets par rapport à la couleur, la rotation, la recadrage et ainsi de suite. Cliquez "Enregistrer".

Caméra vidéo

Appuyez sur l'icône "Caméra" pour l'ouvrir et changer au mode "vidéo" en tapant "□" pour enregistrer.

Courriel

Appuyez sur l'icône "Gmail". Ensuite, sélectionner l'icône "style" en bas à droite pour composer un nouveau message. Utilisez le trombone pour attacher les fichiers ou les images. Appuyez sur "envoyer" quand vous avez terminé. Note: Vous devez d'abord créer un compte du courriel électronique.

Musique

Appuyez l'icône "Musique". Sélectionner playlist ou chanson que vous voulez écouter. Les Playlists peut être catégorisés par les artistes, les albums, les genres ou ce que vous avez créé.

Radio FM

Connecter les écouteurs à la prise audio, appuyez sur l'icône "Radio FM" et sélectionner la fréquence.

Warranty Registration

Register Your Device

Thank you for choosing NUU mobile. To receive helpful tips and faster tech support, register your device online at

[us.nuumobile.com/my-account/
product-registration](http://us.nuumobile.com/my-account/product-registration)

Battery Caution

- 1) Use only NUU approved batteries, chargers, and cables to charge your phone. Unapproved chargers or cables can cause the battery to explode or damage the device.
- 2) Use only NUU approved batteries, chargers and cables. Use unapproved batteries, chargers and cables may cause safety issue and the warranty will be lost.
- 3) You can recharge your battery many times, but all batteries have a limited lifespan. If you notice a significant deterioration in your phone's battery life, you will need to purchase a replacement battery for replacement. If the battery is built-in in the phone, do not attempt to remove built-in batteries and contact an authorized NUU service center for a replacement.
- 4) Your phone may become warm after prolonged use or when exposed to high ambient temperatures. If your phone becomes hot to the touch, unplug the USB cable, disable non-essential features, and avoid prolonged skin contact. Place your phone in a cool location and allow it to cool down to room temperature.
- 5) Charging times may vary depending on the ambient temperature and the remaining battery level.
- 6) Avoid using your phone when it is charging. Do not cover your phone or the charger when it is charging.

只供FCC認證使用

只供FCC認證使用

只供FCC認證使用

只供FCC認證使用

只供FCC認證使用

只供FCC認證使用

FCC Information

FCC STATEMENT

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: Reorient or relocate the receiving antenna. Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or an experienced radio/TV technician for help.

SAR Information Statement: Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the emission limits for exposure to radiofrequency (RF) energy set by the Federal Communications Commission of the U.S. Government. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age and health. The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6 W/kg. * Tests for SAR are conducted with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output. Before a phone model is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the limit established by the government adopted requirement for safe exposure. The tests are performed in positions and locations (e.g., at the ear and worn on the body) as required by the FCC for each model. The highest SAR value for this model phone when tested for use at the ear is 1.019W/Kg and when worn on the body, as described in this user guide, is 0.505W/Kg(Body-worn measurements differ among phone models, depending upon available accessories and FCC requirements). The maximum scaled SAR in hotspot mode is 0.531W/Kg. While there may be differences between the SAR levels of various phones and at various positions, they all meet the government requirement for safe exposure. The FCC has granted an Equipment Authorization for this model phone with all reported SAR levels evaluated as in compliance with the FCC RFexposure guidelines. SAR information on this model phone is on file with the FCC and can be found under the Display Grant section of <http://www.fcc.gov/oet/fccid> after searching on

FCC ID: 2ADINN5001W Additional information on Specific Absorption Rates (SAR) can be found on the Cellular Telecommunications Industry Association (CTIA) web-site at <http://www.wow-com.com>. * In the United States and Canada, the SAR limit for mobile phones used by the public is 1.6 watts/kg (W/kg) averaged over one gram of tissue. The standard incorporates a substantial margin of safety to give additional protection for the public and to account for any variations in measurements.

Body-worn Operation: This device was tested for typical body-worn operations. To comply with RF exposure requirements, a minimum separation distance of 10mm must be maintained between the user's body and the handset, including the antenna. Third-party belt-clips, holsters, and similar accessories used by this device should not contain any metallic components. Body-worn accessories that do not meet these requirements may not comply with RF exposure requirements and should be avoided. Use only the supplied or an approved antenna.

Hearing aid compatibility (HAC) regulations for mobile phones

In 2003, the FCC adopted rules to make digital wireless telephones compatible with hearing aids and cochlear implants. Although analog wireless phones do not usually cause interference with hearing aids or cochlear implants, digital wireless phones sometimes do because of electromagnetic energy emitted by the phone's antenna, backlight, or other components. Your phone is compliant with FCC HAC regulations (ANSI C63.19- 2011).

While some wireless phones are used near some hearing devices (hearing aids and cochlear implants), users may detect a buzzing, humming, or whining noise. Some hearing devices are more immune than others to this interference noise and phones also vary in the amount of interference they generate. The wireless telephone industry has developed a rating system for wireless phones to assist hearing device users in finding phones that may be compatible with their hearing devices. Not all phones have been rated. Phones that are rated have the rating on their box or a label located on the box. These ratings are not guaranteed. Results will vary, depending on the level of immunity of your hearing device and the degree of your hearing loss. If your hearing device happens to be vulnerable to interference, you may not be able to use a rated phone successfully. Trying out the phone with your hearing device is the best way to evaluate it for your personal needs.

This phone has been tested and rated for use with hearing aids for some of the wireless technologies that it uses. However, there may be some newer wireless technologies used in this phone that have not been tested yet for use with hearing aids. It is important to try the different features of this phone thoroughly and in different locations, using your hearing aid or cochlear implant, to determine if you hear any interfering noise. Consult your service provider or the manufacturer of this phone for information on hearing aid compatibility. If you have questions about return or exchange policies, consult your service provider or phone retailer.

M-Ratings: Phones rated M3 or M4 meet FCC requirements and are likely to generate less interference to hearing devices than phones that are not labeled. M4 is the better/higher of the two ratings.

T-Ratings: Phones rated T3 or T4 meet FCC requirements and are likely to be more usable with a hearing device's telecoil ("T Switch" or "Telephone Switch") than unrated phones. T4 is the better/higher of the two ratings. (Note that not all hearing devices contain telecoils.)

Your Smart phone N5001W/A3 has been tested for hearing aid device compatibility and has an M3/T3 rating. Hearing devices may also be measured for immunity to this type of interference. Your hearing device manufacturer or hearing health professional may help you find results for your hearing device.

For additional information about the FCC's actions with regard to hearing aid compatible wireless devices and other steps the FCC has taken to ensure that individuals with disabilities have access to telecommunications services, please go to www.fcc.gov/cgb/dro.

Customer Support

Questions? Let us help. We're here to support you.

Phone: Toll Free: 844-NUU-3365
U.S. hours: 9am-6pm ET, chat: M-F 24hrs
See our website for after-hours
Email: support@nuumobile.com

Warranty Information

Please visit our website for details on warranty information.



Learn more about NUU Mobile products, features and accessories at



www.nuumobile.com

只供FCC認証使用

只供FCC認証使用

只供FCC認証使用

只供FCC認証使用

只供FCC認証使用

只供FCC認証使用