



**ELECTRO**  
Vibe Duo



## User manual

### Volume button

Quick press once to decrease the volume.  
Long press for 1.5 seconds to return to the previous song.

### M Mode button

Long press for 1.5 seconds to activate the voice assistant.  
Double press to radial the last call.  
Quick press once to switch functions in the following order: BT -> AUX -> USB -> SD.

### Light button

Change the light: Long press to turn the RGB light on/off.  
In BT mode, double press to disconnect BT.  
In BT mode, long press for 5 seconds to clear BT pairing information.

## Bluetooth pairing instructions

### 1. Power On the Speaker

Turn on the speaker. It will automatically enter Bluetooth pairing mode.

### 2. Enable Bluetooth on Your Device

On your mobile device, go to the Bluetooth settings and turn on Bluetooth.

### 3. Pair the Speaker

From the list of available devices, select **Electro Vibe Duo**  
Once the connection is successful, the speaker will emit a confirmation sound.

## Product overview



## How to use

### Power button

#### 1. Power On/Off

Long press for 2 seconds to turn on the speaker.  
Long press for 3 seconds to turn off the speaker.

#### 2. Play/Pause Music

When listening to music, press once to play or pause.

#### 3. Answer Call

Press once to answer or hang up a call.  
Long press for 2 seconds to reject a call.

#### 4. Reset

Long press for 8 seconds to reset the speaker.

#### 5. TWS Pairing Mode Function

Quickly press twice to enter TWS pairing mode. While pairing, the indicator light flashes quickly. After pairing successfully, the indicator light remains steady.  
When there is an incoming call, the main unit will ring, while the secondary unit will not. The speaker has memory functionality: after being powered off and turned on again, the TWS pairing remains valid.  
Quickly press twice again to exit TWS pairing mode.

### Volume button

Quick press once to increase the volume.  
Long press for 1.5 seconds to skip to the next song.

## Prohibit

- It is prohibited to disassemble, impact, squeeze the battery, or put it into fire or insert foreign objects to avoid causing battery leakage and overheating ignite or explode.
- This device is not a toy and children should use it under adult supervision. The accessories for this device are required.
- If there is severe swelling, it is prohibited to continue using.
- Do not place in a high-temperature environment and keep away from sources of fire.
- Do not use the battery after immersion in water or other liquids.

## FCC Warning

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Any changes or modifications to device will void the user's authority to operate the device.

This device has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This device generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this device does cause harmful interference to radio or television reception, which can be determined by turning the device off and on, the user is encouraged to try to correct the interference by one or more of the following measures:  
--Reorient or relocate the receiving antenna  
--Increase the separation between the device and receiver  
--Connect the device into an outlet on a circuit different from that to which the receiver is connected.

--Consult the dealer or an experienced radio/TV technician for help

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment

### Reconnect Automatically

If you turn off the speaker and then turn it on again, it will automatically reconnect to the last paired device.

## Specifications

| Description              | Specification                          |
|--------------------------|----------------------------------------|
| Product Name             | Electro Vibe Duo                       |
| Functions                | TWS, BT, SD, USB, AUX,                 |
| Chipset                  | JL6966B                                |
| Bluetooth Version        | 5.3                                    |
| Bluetooth Protocol       | HSP / HFP / A2DP / AVRCP               |
| Supported Music Formats  | MP3                                    |
| Bluetooth Distance       | 10M                                    |
| TWS                      | 10M                                    |
| Battery Capacity         | 1200mAh                                |
| Water Proof:             | IPX4                                   |
| Material:                | ABS+PC+Fabric                          |
| Power:                   | 52mm *2*5W 4Q                          |
| Charging time:           | About 3 hrs                            |
| Frequency Response:      | 20HZ-20KHZ                             |
| Driver Size:             | 52*52mm                                |
| Play Time:               | Light off- About 8 hours               |
| Charging Port            | Light on - About 3 hours (100% volume) |
| Charging Voltage/Current | Type C<br>5V/1A                        |