

Double Sided Print, Black and White Copy

SAFETY INSTRUCTIONS

Please read and understand all instructions before using this product. If damage is caused by failure to follow the instructions, this warranty is null and void. Keep these instructions for future reference.

- Loud sounds can cause serious and permanent hearing loss, always use caution.
- Do not stare at LED's.
- Do not operate the unit other than as stated in this manual.
- Do not leave the device unattended while charging or in use.
- Disconnect charging cable as soon as charging is complete.
- Do not sleep while the device is charging.
- Do not drop, puncture, or disassemble this product.
- Do not expose this product to moisture of any kind including water or any other type of liquid.
- Do not expose this product to dirt, sand, or similar matter.
- Avoid long exposure to direct sunlight, which may cause damage.
- Do not expose this product to open flames.
- Do not use the product in a strong magnetic field.
- Use clean, soft cloth to clean. Do not use any corrosive cleaners/oils to clean.
- Do not attempt to repair the device or open the unit as this will void the warranty.
- This product contains a non-replaceable rechargeable lithium-ion battery. When discarding, follow your local / state guidelines.
- Do not charge, or use, the product if it has been submerged in water, or if water has got inside the product.
- Do not expose product to heat sources, the sun, flames, fire or leave in a hot vehicle.
- Do not expose the product to extremely high or low temperatures. Use this product in a location with a temperature of 32°F - 95°F. Prolonged exposure to extreme heat or cold reduces battery longevity. Exposure to fire or temperatures above 170°F could cause serious damage and explosion.
- Do not place anywhere where the product would become crushed or punctured.
- Please refer to charging adapters instructions and warnings before use with this product.
- This product is not a toy. Keep out of reach of children or those that require supervision.
- Do not use abrasive cleaning solvents to clean the unit.

Note: Lithium-ion batteries will self-discharge over time, and it is normal for battery performance to decline after several years of usage. To ensure battery life, do not store the product in an uncharged state for a length of time. If left in a discharged state for too long, a lithium-ion battery will not have the ability to be recharged.

FCC CAUTION

Any changes or modifications not expressly approved by the part responsible for compliance could void this user's authority to operate the equipment. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does not cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC RADIATION EXPOSURE STATEMENT

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance 20cm between the radiator & your body. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

SPECIFICATIONS:

- DC Power Input: USB Micro, 5V/1A
- Battery Capacity: 1800mAh
- Device Consumption: 600mAh
- Battery Life: 2 Hours
- Charge Time: Approx 2-4 Hours
- Play Time: 3 Hours (70% Volume)
- Product size: 260*240*452mm
- Speaker: 8" Woofer, 3 Ohm, 10W
- Power: 10W
- Bluetooth Version: 5.1
- Bluetooth range: 10M
- Recommended Operating Temperature: -15 to +10°C

ONE YEAR WARRANTY

Xtreme warrants its products for ONE YEAR against defects in manufacturing under regular consumer use with original receipt of retail purchase. We believe in our products and want to provide you with a replacement, if needed, but we have to know about the problem while the product is still under warranty. If you discover a defect covered by this warranty, please contact us about receiving a replacement. In order to use the products warranty the customer must provide proof of the retailers receipt. *Any customers outside of the U.S. will be responsible for shipping and handling charges if a replacement is required that is not due to a manufacturing defect.

Xtreme's warranty is limited to our products only. Our warranty does not cover the replacement or repair cost of any third-party accessory, electronic device or personal property.

For instructions about how to obtain warranty service for your product, please contact Customer Service at customerservice@xtremecables.com

XTREME SOUND
TAILGATE SPEAKER
ROLLING BLUETOOTH® SPEAKER AND MICROPHONE



Bluetooth®
XBS9-1074-BLK
V1.0 0324

855.999.8041 | WWW.XTREMECABLES.COM

INTRODUCTION:

Please read this entire manual before use, including all warnings. Keep this manual for future reference.


FEATURES:

- Features mono summed audio into a 10W, 8" speaker.
- 5 selectable source modes: FM, Bluetooth, Aux, TF Card, and USB Reader.
- Internal battery with top mounted SVDC Mini-USB Charging Port.
- Power On/Off Switch Via Volume Knob.
- RGB LED Light with option to turn off/on.

WHAT'S INCLUDED:

- Remote Party Speaker
- USB-A to USB-Micro Charging Cable
- Remote Control
- Wired Microphone
- Microphone Cable
- User Manual

PRODUCT OVERVIEW & FUNCTIONS:

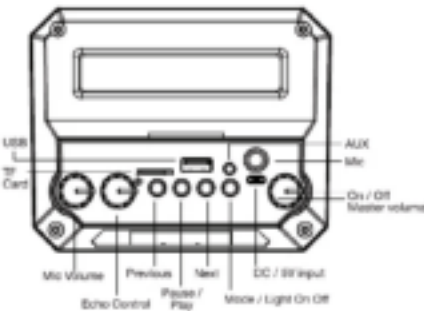

- A. On / Off
- B. Mute
- C. Equalizer*
- D. Volume Up
- E. Previous Track
- F. Next Track
- G. Volume Down
- H. Mode
- I. Bluetooth
- J. Repeat
- K. LED
- L. Play / Pause



POWER ON/OFF:

- Please fully charge the battery before use (see following section, Charging the Battery).
- Turn the unit on via the On/Off volume switch on the top of the unit.
- The unit will run off the internal battery power until the battery is discharged.
- The unit can operate while the battery is charging.
- The unit will not function if the battery is fully drained.

CHARGING YOUR SPEAKER

- **WARNING!!!** Never fall asleep or leave the unit unattended while charging battery.
- Connect a USB Micro SVDC/1A power adaptor to the USB micro jack on the top of the unit via the included USB Micro-USB-A cable.
- The Power LED on the top of the unit will illuminate Red during charging.
- The LED will turn off after charging is completed or change color depending on set mode.
- The charge time is approximately 2-4 hours.
- Disconnect the power adaptor when the battery has charged.
- **NOTE:** Unit will function as normal during charging.

PAIRING DEVICES TO THE SPEAKER:

- Make sure that the Bluetooth function is available on your device.
- Turn on the speaker by turning the volume control knob.
- Keep the distance between your device and the speaker within 3 feet (for pairing only).
- Activate the Bluetooth function on your device and search for available devices.
- Select "Xtreme XBS9-1074" from the devices list and follow the on-screen prompts to finish the pairing process.
- After successfully pairing the speaker to your device, a tone will sound.
- Once paired, open a music app of your choice, and enjoy!
- Adjust the volume on the top of the speaker, or via the wireless remote.
- **Note:** After successfully pairing once, the devices will remember each other.

CONTROLLING THE SPEAKER'S LIGHTS:

- Press and hold the mode/light button to turn the speaker's lights ON/OFF.
- **NOTE:** The LED lights flash through a preset pattern and are not sound-reactive or adjustable.

MODE OPERATIONS:

Press the "Mode" button on the remote control or the "M" button on the top of the speaker to changes modes. The speaker will sound out what mode is selected. Depending on certain modes that require external devices to be connected, whilst switching modes, that mode may be skipped because nothing is connected and detected.

Bluetooth Mode

- Stream audio from your smartphone, TV or other Bluetooth enabled device to the speaker. See Pairing instructions for more information on device pairing. Use the remote control or playback control on the speaker.

FM Mode

- Select your desired station with the remote control or via the top of the speaker.

USB Mode

- Load MP3 files directly on the USB drive.
- Connect the USB drive to the USB port.
- The unit should automatically switch to USB mode, or you can manually change modes.
- Playback your MP3's by using the controls on the top of the unit or via the remote control.

Flash Mode

- Load MP3 files directly on the Flash drive.
- Connect the Flash drive to the Flash port.
- The unit should automatically switch to Flash mode, or you can manually change modes.
- Playback your MP3's by using the controls on the top of the unit or via the remote control.

Aux Input Mode

- Connect a 3.5mm TRS cable between the Aux input on the top of the unit and the source playback device.
- Manually control playback via the source device.
- With the speaker volume set to lower level, perhaps to 25%, slowly raise the source volume before the audio begins to distort and backoff slightly to avoid overloading the speaker. Now you can adjust the volume of the speaker to your liking.

Microphone Input

- Connect the included microphone via the included XLR to 1/4" XLR cable between the microphone and the microphone input on the top of the speaker.
- Raise the volume of the mic level, by adjusting the mic gain knob on the top of the speaker.
- Echo Effect: Add echo to the microphone source by the Echo knob on the top of speaker.

Equalizer

- The equalizer changes the sound characteristics of the speaker output
- Press the "EQ" button on the remote to switch between the various preset EQ modes.