

CAUTION-ELECTRIC TOY:
Not recommended for children under 6 years of age. As with all electric products, precautions should be observed during handling and use to prevent electric shock.

CAUTION-SUPERVISION REQUIRED-ELECTRIC TOY - UNPLUG WHEN NOT IN USE. INPUT: 120V AC, 60HZ, 10W OUTPUT: 12V DC, 350mA

OPERATING INSTRUCTIONS

- KEEP PACKAGING AS IT CONTAINS IMPORTANT INFORMATION
- BATTERY INSTALLATION:**
(THE RECHARGEABLE BATTERY PACK IS NOT CHARGED, PLEASE CHARGE IT FOR 2 HOURS PRIOR TO USE)
1. Plug the wall pack battery charger into wall outlet. (See Diagram 1)
 2. Click the battery pack into the charger. Make certain the battery pack is secure in charger.
 3. To disconnect, push the button of the charger (See Diagram 1) and simultaneously slide battery pack out.
 4. You should charge the battery pack for 2 hours.
 5. If the speed of the car slows down suddenly, it is time to recharge.
 6. After use, the battery pack will be hot! Wait at least 20 minutes until it cools before recharging. Recharging a warm or hot battery pack will greatly shorten the battery life.
 7. The toy must be used with the recommended transformer.
 8. The transformer is not a toy.

ATTENTION PARENTS
IT IS RECOMMENDED THAT THIS TOY AND ALL ACCESSORIES BE PERIODICALLY EXAMINED FOR POTENTIAL HAZARDS AND THAT ANY POTENTIALLY HAZARDOUS PARTS BE REPAIRED OR REPLACED.

CARE
Never drive the vehicle on a wet floor, on sand, grass, carpet, in mud, rain or snow. These can cause damage to the vehicle.
Do not expose the vehicle to extreme temperatures.
To protect the vehicle's wheel mechanisms from lint and hair, do not drive it on carpet. Occasionally wipe the vehicle with a damp cloth to keep the wheels clean of dirt and dust.
Do not use harsh chemicals to clean the vehicle.
Modifying or tampering with the vehicle or the transmitter's internal components can cause a malfunction.

HELPFUL HINTS
Running the vehicle continuously for long periods of time generates high levels of heat. Heat causes wear and tear on the motor. When the vehicle's battery pack runs down, let the vehicle cool at least 10 minutes before installing a newly charged battery pack.
This helps keep heat levels down. If the vehicle's motor runs but does not respond to the transmitter, move the transmitter closer to the vehicle and try again. If a CB radio is used nearby, it might interfere with control of the vehicle. If this happens, move the vehicle and transmitter away from the CB radio.
The vehicle cannot be operated near devices with transmitters that use the same frequency. Check the packaging to see which frequency your vehicle uses. If the vehicle moves slowly, and a recharged battery pack has been installed, check the wheel mechanisms for lint, thread, hair or dust.

- INSERTING BATTERIES**
VEHICLE
1. Turn over the vehicle and push the ON/OFF to "OFF" position. (See Diagram 2)
 2. Open the battery cover. (See Diagram 2)
 3. Insert the 9.6V battery pack into battery compartment. (See Diagram 3)
 4. Replace the battery cover.

- TRANSMITTER**
1. Unscrew to open the battery lid and insert the 9V/6LR61 battery as per the directions shown inside. (See Diagram 4)
 2. Replace the battery cover.
- Note: Remove battery after you have finished using your vehicle.

HOW TO PLAY

- START TO PLAY**
PAIRING TRANSMITTER WITH VEHICLE
1. Turn ON the vehicle (See Diagram 5).
 2. Install the 9V/6LR61 battery in the transmitter, the pairing LED light on the transmitter will flash.
 3. If pairing success, the pairing LED light will turn OFF
 4. You must pairing the transmitter with the vehicle within 45 seconds, after 45 seconds you must push the control on the transmitter to pair again.
 5. You must repeat pairing again when the transmitter needs to replace new batteries.

- FORWARD RUNNING**
6. Push both the Driving Control Sticks forwards for forward motion. (See Diagram 6)

- REVERSE RUNNING**
7. Pull both the Driving Control Sticks backwards for reverse motion. (See Diagram 7)

- STEERING OPERATION**
8. Push only the Left Driving Control Stick forwards to turn Right. (See Diagram 8)
 9. Push only the Right Driving Control Stick forwards to turn Left. (See Diagram 9)

- 360 DEGREE SPINS**
10. Push the Left Driving Control Stick forwards while pulling the Right Driving Control Stick backwards at the same time. (See Diagram 10)
 11. Push the Right Driving Control Stick forwards while pulling the Left Driving Control Stick backwards at the same time. (See Diagram 11)

- STOP OPERATION**
12. Release both Driving Control Sticks, the vehicle will Stop. (See Diagram 12)



Keep packaging as it contains important information.

CAUTION: To prevent battery leakage:
Be sure to insert batteries correctly and always follow the product and battery manufacturers' instructions.
Never mix old and new batteries (replace all batteries at the same time).
Never mix Alkaline, standard (Carbon Zinc) or rechargeable batteries.
Only batteries of the same or equivalent type as recommended are to be used.
Do not use RECHARGEABLE batteries, unless specified.
Non-rechargeable batteries are not to be recharged.
Rechargeable batteries are to be removed from the product before being charged (if removable).
Rechargeable batteries are only to be charged under adult supervision (if removable).
Always remove exhausted or dead batteries from the product.
Remove batteries from product before extended storage.
The supply terminals are not to be short-circuited.
Batteries are to be inserted with correct polarity.
Batteries may explode or leak if misused.
ATTENTION: Battery / Batteries should be installed by an adult only.
ATTENTION: User should remove the battery from the item before disposal.

Battery Chargers
WARNING:
After use, the battery pack will be hot! Wait until it cools before recharging. Recharging a warm or hot battery (pack) will greatly shorten the battery's life. Unplug the charger from the electrical outlet if it is not going to be used for a long period of time.
Battery charger must be operated by adults only.
Non-rechargeable batteries are not to be recharged.
Do not charge a battery (pack) that is hot, wet or shows signs of leakage or corrosion.
Do not expose to fire, as this may result in explosion.
Do not short circuit the battery (pack).
Rechargeable batteries must be charged with the recommended battery charger.
The battery charger is to be regularly examined for damage to the cord, plug enclosure and other parts. In the event of such damage, the charger must not be used until it has been repaired or replaced.
The battery charger is not a toy.
Prolonged charging will not improve the battery output, and could eventually damage the battery (pack).
Do not disassemble the battery pack.

 
This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

- The WEEE symbol if present indicates that this item contains electrical or electronic components which must be collected and disposed of separately.
- Never dispose of electrical or electronic waste in general municipal waste. Collect and dispose of such waste separately.
- Make use of the return and collection systems available to you, or your local recycling programme. Contact your local authority or place of purchase to find out what schemes are available.
- Electrical and electronic equipment contains hazardous substances which, when disposed of incorrectly, may leak into the ground. This can contribute to soil and water pollution which is hazardous to human health, and endanger wildlife.
- It is essential that consumers look to re-use or recycle electrical or electronic waste to avoid it going to landfill sites or incineration without treatment.

FCC INFORMATION
This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult your local RadioShack store or an experienced radio/TV technician for help.

If you cannot eliminate the interference, the FCC requires that you stop using your equipment. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

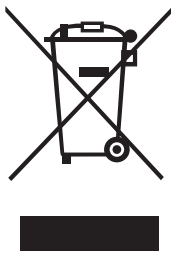

ENGLISH

 


www.eztec.com

IS A REGISTERED TRADEMARK OWNED BY SCIENTIFIC TOYS, LTD.

© 2015 SCIENTIFIC TOYS LTD. 1108, TOWER B,
14 SCIENCE MUSEUM ROAD, TSMISHATSUI, HONG KONG.
PRINTED IN CHINA
O.I. NO.5872

1

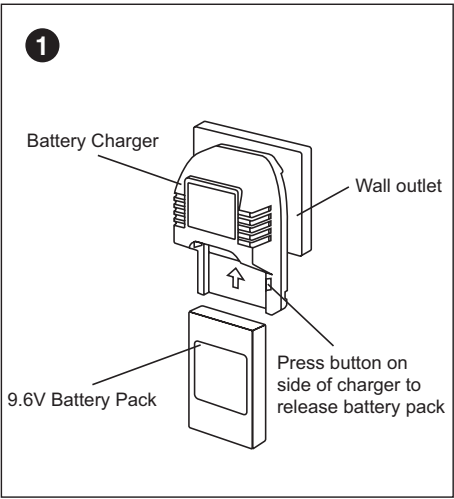


Battery Charger

Wall outlet

9.6V Battery Pack

Press button on side of charger to release battery pack

 2

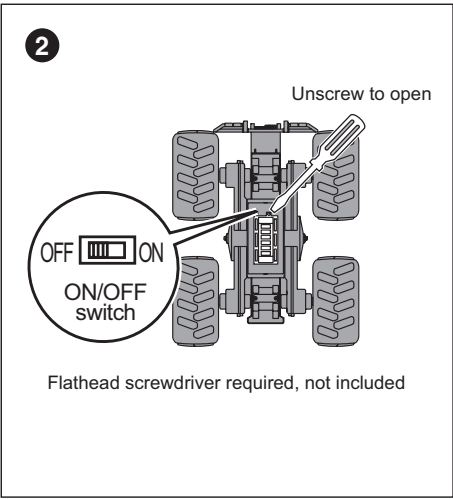


Unscrew to open

OFF ON

ON/OFF switch

Flathead screwdriver required, not included

 
3

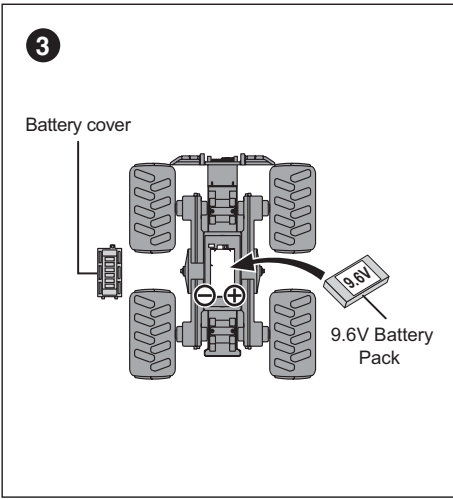

Battery cover

9.6V Battery Pack

 
4

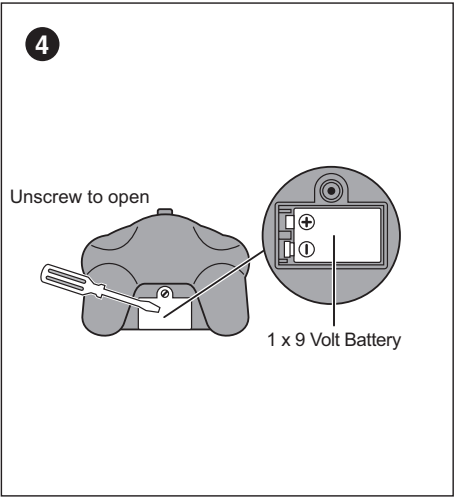

Unscrew to open

1 x 9 Volt Battery

 
5

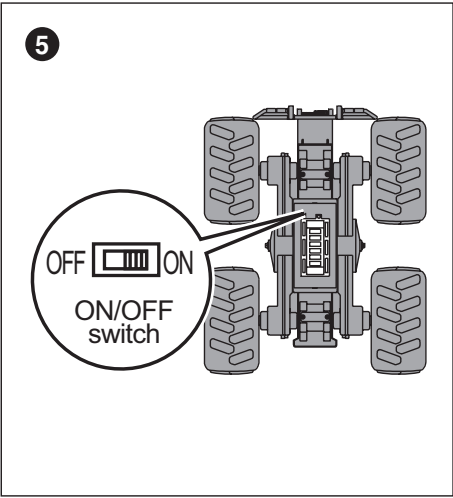

OFF ON

ON/OFF switch

 6

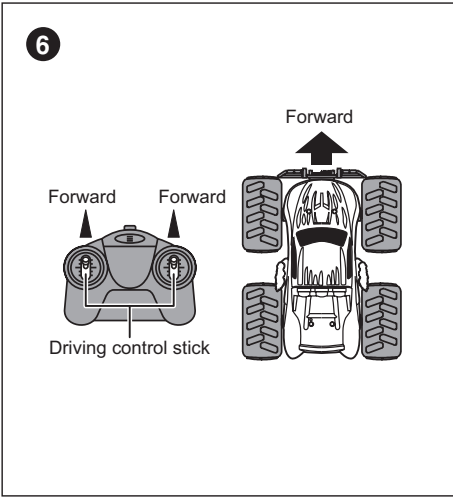


Forward

Forward

Forward

Driving control stick

 7

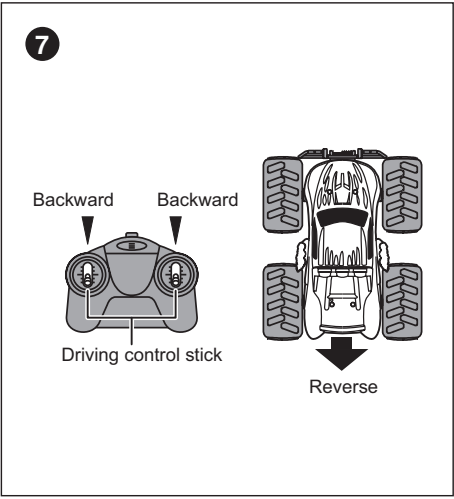


Backward

Backward

Reverse

Driving control stick

 8

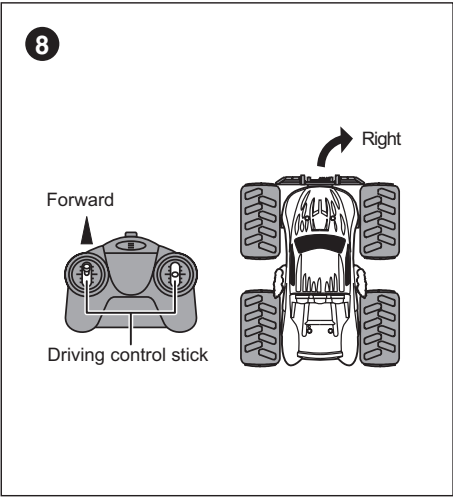


Forward

Right

Driving control stick

 9

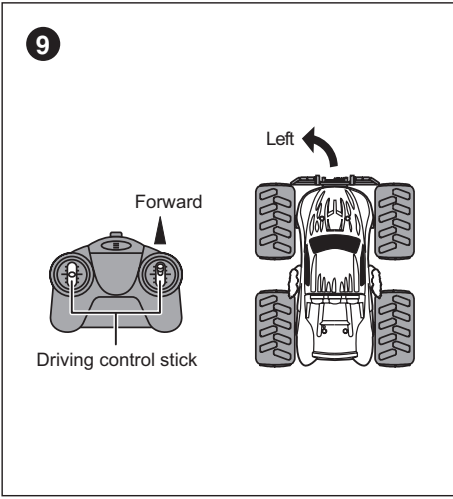


Forward

Left

Driving control stick

 10

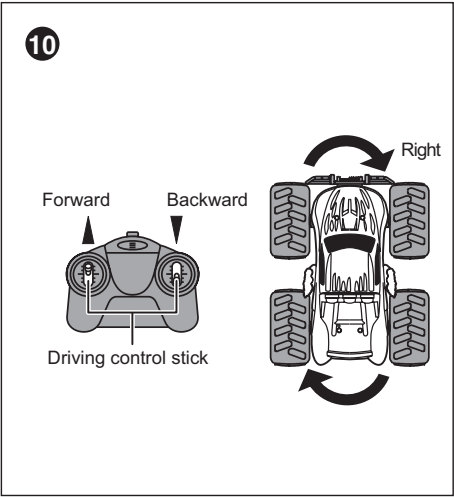


Forward

Backward

Right

Driving control stick

 11

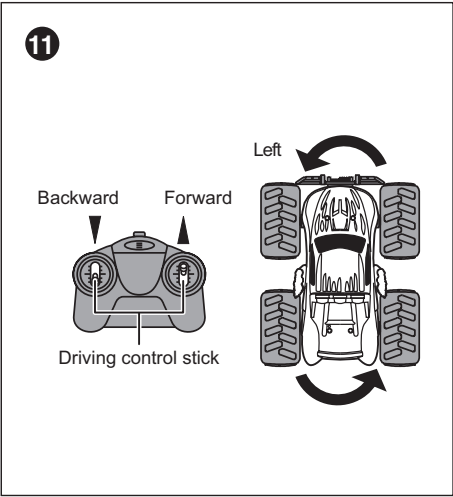


Backward

Forward

Left

Driving control stick

 12

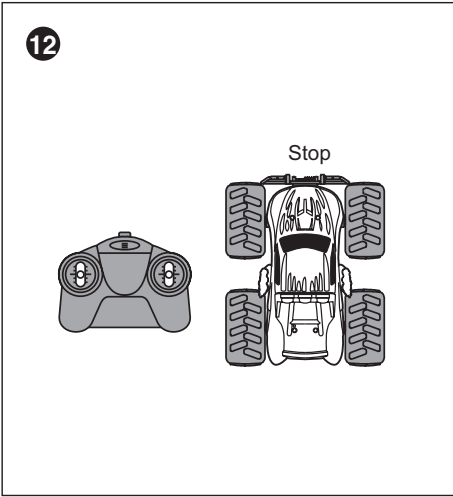

Stop

#99078 SIZE:210MM X 297MM PN#65-5872-000-0100