

-

	Keys and Function	CORRCT DISPOSAL OF THIS PRODUCT (Waste Electrical& Electronic Equipment) This Marking shown on the product or its literature, indicate that it should not be disposed with other household wastes
ac OS	 1.Press we key to use the keyboard on Windows PC The F1-F12 Lock/Unlock function is only for Windows: 1)When the F1-F12 is Locked: You could use the Multi-Media functions directly. (Defulted) 	at the end of its working life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate this from other types
Mute		
olume -		of wastes and recycle it responsibly to promote the sustainable
blume +		reuse of material resources. Household user should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take this item for environmentally safe recycling.
revious		
y/Pause		
ext track	2)When the F1-F12 is Unlocked: You could use Multi-media Functions by Fn +F1-F12.	Business users should contact their supplier and check the terms and conditions of the purchase contact. This product should not be
ness down		mixed with other commercial wastes for disposal.
htness up	Lock /Unlock the F1-F12 Functions by :	
itch App		
elect All		
Сору	2.Press key to use the keyboard on MAC OS devices.	
Paste		
Save	You could use the Multi-Media Functions directly for Mac OS.	
or Mac os	You could use F1-F12 Functions by Fn +F1-F12 .	
ritch to Win System		
vitch to OS System	(Note: The F1-F12 Lock/Unlock function is not for Mac OS)	
Search		
k Screen		