INSTALL GUIDE WIRELESS KEYPAD



Installation

Installation

The Pursuit wireless keypad is designed to be placed on the driver's door "B Pillar." The rear slanted keypad should be places on the door pillar with the keypad angled to the rear.

Clean and prep the installation area with a isopropyl alcohol based solution. Allow the surface to dry completely before placing the keypad on the pillar. Remove the red plastic backing from the adhesive pad on the rear of the keypad. Place the keypad on the door pillar so that the keypad is angled (Slanted) to the rear. Press firmly for 60 seconds to ensure the adhesive properly adheres to the vehicle.

Programming

Locate the valet override button inside the vehicle. The vehicle's door must be open until programming is complete.

To Program the keypad:

- Set the vehicle's ignition to the ON position.
- Press and release the valet override button three (3) times. The system will beep one (1) time to confirm it has entered remote programming.
- Press and release the 7/8 and the 9/0 buttons. The system will beep one (1) time to confirm the keypad has be programmed successfully.

Note: The security system can store up to four (4) remote controls in its memory banks. This can be any combination of four (4) keypad or key chain remote controls. Any remote control programmed after four (4) will automatically delete the oldest remote control in the memory bank.

Programming Personal Pin Code (Optional)

The keypad master unlock code cannot be changed or deleted. The keypad can learn and store a personal pin code. This code can be changed at any time.

To Program a Personal Pin Code:

- 1. Enter the five (5) digit master code.
- Within five (5) seconds press and hold the 1/2 button for one (1) second. The keypad LED will flash two (2) times.
- Within five (5) seconds, enter the new Personal Pin Code. The keypad LED will flash two (2) times to confirm the Pin Code has been stored.

Using Your Remote Control

Locking the Vehicle

To lock the vehicle, exit the vehicle, close all doors, then press and release the 7/8 & 9/0 buttons at the same time. The parking lights will flash one (1) time, indicating the system is armed, has locked the doors (if equipped and connected) and activated the starter disable feature. The LED status indicator will blink steadily, once per second.

NOTE: The system is equipped with a feature called Silent Choice. If enabled, the system requires a second press of the **7/8** & **9/0** buttons to activate an audible arming response from the vehicle.

Unlocking the Vehicle

To unlock the vehicle enter the five (5) digit unlock code. The parking lights will flash two (2) times, indicating the system is disarmed and has unlocked the doors (if equipped and connected).

Two Stage Door Unlock (Optional)

If this feature is enabled entering the five (5) digit unlock code will unlock the driver's door only. To unlock all doors, enter the five (5) digit unlock code then press and release the 3/4 button within five (5) seconds

Activating the Trunk Release Feature (Optional)

If this feature is enabled on your system, enter the five (5) digit unlock code then press and release the **7/8** button within five (5) seconds.

Using the Personal Protection Alarm (Panic)

To activate the Panic alarm, enter the five (5) digit unlock code then press and hold the **5/6** button for five (5) seconds. To stop the alarm, enter the five (5) digit unlock code or press the lock functions (Press and release the **7/8 & 9/0** buttons). The system will automatically stop after thirty (30) seconds.

Deleting Personal Pin Code

To deleted the Personal Pin Code:

- Enter the five (5) digit master code.
- Within five (5) seconds press and hold the 1/2 button for five (5) second. The keypad LED will flash four (4) times to confirm the pin code has been deleted.

Voxx Electronics Corporation. Customer Service 1-800-225-6074 www.AdventProducts.com

FCC COMPLIANCE

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions:

- 1. This device may not cause harmful interference, and
- This device must accept any interference received, including any interference that may cause undesired operation.

Warning!

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

PATENTED: www.voxxintl.com/company/patents