 
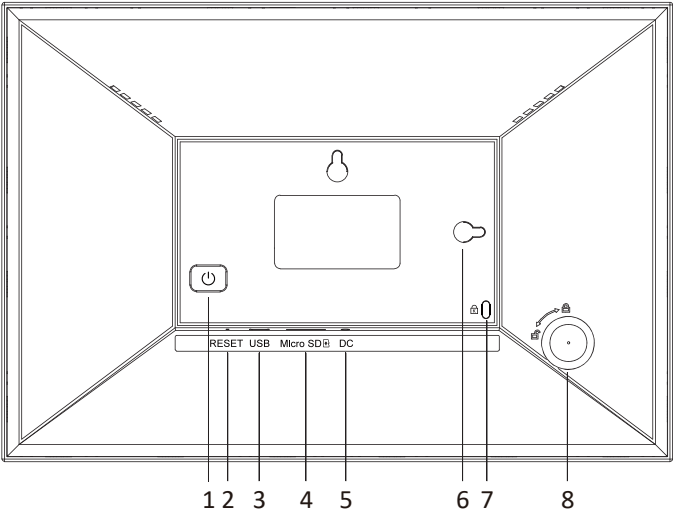 



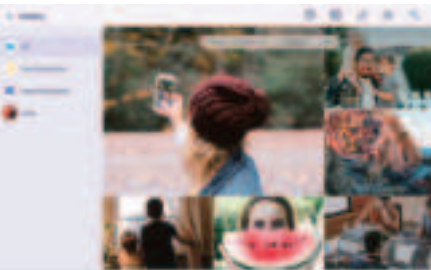 
 


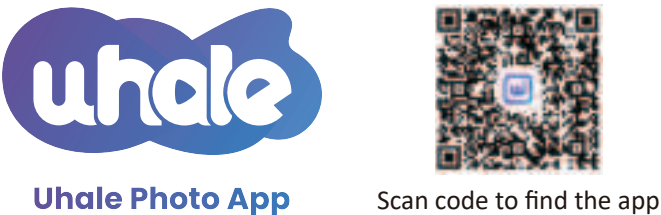

<div data-bbox="273 309 666 435" data-label="Section-Header"><h1>EUPHRÓ</h1><p>Unite Loved Ones Near and Far</p></div>	<div data-bbox="823 80 1089 110" data-label="Section-Header"><h2>Product Information</h2></div> <div data-bbox="842 129 1279 465" data-label="Image"></div> <div data-bbox="816 467 1322 847" data-label="List-Group"><div>1. Power Button<ul style="list-style-type: none">- When the device is off, please press and hold the power button for approximately 5 seconds untill the screen turns on.- When the device is on, press and hold the power button for approximately 3 seconds to access reboot or power-off menu.- Short press on power button will only turn off/on the screen but leave the device on.</div><div>2. RESET<p>Use a pin or paper clip to reset the device.</p></div><div>3. USB<p>Connect to a USB flash drive.</p></div><div>4. Micro SD Card<p>Insert Micro SD Card(max 32GB) here.</p></div><div>5. DC<p>Connect power adapter to the device.</p></div></div>	<div data-bbox="1409 80 1885 204" data-label="List-Group"><div>6. Mounting Hole</div><div>7. Security Lock Slot</div><div>8. Stand Leg Installation Hole<ul style="list-style-type: none">- To install the frame stand, rotate in clockwise direction.- To uninstall, rotate in counterclockwise direction.</div></div> <div data-bbox="1412 221 1885 266" data-label="Text"><p>Make sure to always use the power off button on the device Never disconnect power when Frameo is running!</p></div> <div data-bbox="1409 296 1609 328" data-label="Section-Header"><h2>Getting Started</h2></div> <div data-bbox="1409 335 1835 356" data-label="Text"><p>Congratulations on your brand new Uhale photo frame!</p></div> <div data-bbox="1409 371 1919 414" data-label="Text"><p>If you are new to using Uhale then start by downloading the Uhale Photo App, then follow the Uhale Frame quick setup.</p></div> <div data-bbox="1409 429 1909 474" data-label="Text"><p>Once you have set up your Uhale frame, you can start connecting it to your friends and family.</p></div> <div data-bbox="1409 504 1685 536" data-label="Section-Header"><h2>Download Uhale App</h2></div> <div data-bbox="1446 560 1875 699" data-label="Image"></div> <div data-bbox="1409 729 1739 759" data-label="Section-Header"><h2>Uhale Frame Quick Setup</h2></div> <div data-bbox="1409 767 1919 877" data-label="List-Group"><p>When starting your frame, you will need to set up the frame.</p><ul style="list-style-type: none">• Uhale Frame may request to upgrade to the latest version. Upgrading to the latest version is recommended.• Select a language as default.• Connect your frame to the internet by connecting it to Wi-Fi.</div>	<div data-bbox="2009 80 2472 144" data-label="List-Group"><ul style="list-style-type: none">• Set the date and time.• Name the photo frame (E.g. Jack's Frame).• Set the location of the photo frame (E.g. Living Room, Kitchen, Office).</div> <div data-bbox="2002 168 2272 198" data-label="Section-Header"><h2>Start Using Uhale App</h2></div> <div data-bbox="2002 206 2492 272" data-label="Text"><p>Before conncting with your friends and family, you need to download Uhale Photo App on your mobile device and connect the photo frame with the Uhale Photo App.</p></div> <div data-bbox="2002 294 2469 360" data-label="Text"><p>After connecting the photo frame with the Uhale Photo App. You can either share pictures and videos on Uhale Photo App or Uhale Web at: https://uhale.zeasn.tv</p></div> <div data-bbox="2002 377 2245 403" data-label="Section-Header"><h2>Connecting a new friend</h2></div> <div data-bbox="2009 408 2492 559" data-label="List-Group"><ul style="list-style-type: none">• Make sure that your friend has installed the Uhale Photo app.• Click the "add friend"  icon on your frame. A dialog will appear and show both the QR code and paring code (valid for 12 hours).• Now share the QR code or the paring code in whatever fashion you prefer e.g. SMS, E-Mail, phone call, to your friend.• Once the frame is connected to your friend's Uhale App, you will be able to find them in "manage account" page on the frame.</div> <div data-bbox="1985 568 2495 744" data-label="Image"></div> <div data-bbox="2002 772 2359 802" data-label="Section-Header"><h2>Navigating your Uhale Frame</h2></div> <div data-bbox="2002 816 2355 834" data-label="Text"><p>Swipe left or right to go through your photos.</p></div>	<div data-bbox="2588 80 2985 101" data-label="Text"><p>To access the menu, simply tap once on the screen.</p></div> <div data-bbox="2692 118 2972 292" data-label="Image"></div> <div data-bbox="2588 309 3032 352" data-label="Text"><p>In the menu, In the menu you will find quick access to the add friends and the settings.</p></div> <div data-bbox="2588 367 3065 412" data-label="Text"><p>From the menu it is also possible to make relevant settings for the currently displayed photos, such as hide, adjust.</p></div> <div data-bbox="2588 427 3075 470" data-label="Text"><p>Photos tab with a curated view of your library making it easy to find and relive your photos and videos.</p></div> <div data-bbox="2692 489 2972 664" data-label="Image"></div> <div data-bbox="2588 686 2695 718" data-label="Section-Header"><h2>Settings</h2></div> <div data-bbox="2588 726 3002 746" data-label="Text"><p>Through the settings, you can personalize your frame.</p></div> <div data-bbox="2588 761 2752 786" data-label="Section-Header"><h2>Manage Photos</h2></div> <div data-bbox="2588 799 2748 817" data-label="Section-Header"><h3>Show/hide Photos</h3></div> <div data-bbox="2588 829 3098 872" data-label="Text"><p>Select photos to hide by tapping them. Hidden photos will NOT be deleted and you can always select them to be shown again.</p></div>
<div data-bbox="236 1352 693 1378" data-label="Text"><p>说明书尺寸：12*18cm(此页不印刷)</p></div>	<div data-bbox="1196 1729 1306 1759" data-label="Section-Header"><h2>Support</h2></div> <div data-bbox="799 1656 1306 1720" data-label="Text"><p>To download the full User Manual Guide, please visit our website www.euphroframes.com</p></div> <div data-bbox="799 1611 1306 1633" data-label="Text"><p>If you have any problem while using the device, please contact us at help@euphroframes.com</p></div> <div data-bbox="1182 1551 1306 1581" data-label="Section-Header"><h2>Warranty</h2></div> <div data-bbox="793 1476 1306 1540" data-label="Text"><p>To activate 1-year free warranty for your device, please visit our website www.euphroframes.com, and fill out the warranty activation form within 14 days of the date you receive the product.</p></div>	<div data-bbox="1755 1737 1895 1757" data-label="Section-Header"><h3>Weather & Time</h3></div> <div data-bbox="1452 1658 1895 1725" data-label="Text"><p>Enable and disable the weather and time. When enabled, the weather and time are displayed on the home page, and when disabled, they are not displayed.</p></div> <div data-bbox="1692 1611 1895 1635" data-label="Section-Header"><h2>Backup and restore</h2></div> <div data-bbox="1432 1493 1895 1562" data-label="Text"><p>Backup frame to external storage (e.g. microSD card) Tap to make a backup of your photos. The time of the latest successful backup is also displayed here.</p></div> <div data-bbox="1715 1416 1895 1435" data-label="Section-Header"><h3>Restore from backup</h3></div> <div data-bbox="1379 1153 1895 1395" data-label="Text"><p>Before you attempt to restore your frame, start by confirming that your backup is up-to-date. This is done by confirming the date under "Backup frame to external storage (e.g. microSD card)". If the last backup is too old or if no backup is made, then press the "Backup frame to external storage (e.g. microSD card)" button to make a new backup. Note: If you wish to restore a backup on a frame that has already been set up, please make sure that both frames are updated to the latest version beforehand.</p></div> <div data-bbox="1845 1110 1895 1129" data-label="Section-Header"><h3>Reset</h3></div> <div data-bbox="1402 1056 1895 1099" data-label="Text"><p>Delete all data of the photo frame. This will permanently delete all photos, friends/connections and settings.</p></div>	<div data-bbox="2385 1737 2485 1757" data-label="Section-Header"><h3>Best wishes</h3></div> <div data-bbox="1992 1658 2485 1701" data-label="Text"><p>Show the wishes sent by your family or friends. You can manage the wishes in Settings - Manage photos - Best wishes.</p></div> <div data-bbox="2289 1611 2485 1635" data-label="Section-Header"><h2>To Send out Wishes</h2></div> <div data-bbox="2012 1497 2485 1605" data-label="List-Group"><ul style="list-style-type: none">• Open the Uhale App on your phone. Tap the "Gift" icon. (Note: Please upgrade the APP to version 3.14 or above.)• Write down your wishes.• Select a style.• Choose a frame(s) you would like to send wishes to.</div> <div data-bbox="2369 1450 2485 1474" data-label="Section-Header"><h2>My Friends</h2></div> <div data-bbox="2342 1414 2485 1435" data-label="Section-Header"><h3>Account Settings</h3></div> <div data-bbox="1995 1311 2485 1403" data-label="Text"><p>In the Account Settings page, you can also delete a friend by pressing the DELETE FRIEND button. This will remove their permission to send photos to the frame. You can also choose to delete photos shared by them.</p></div> <div data-bbox="2319 1266 2485 1290" data-label="Section-Header"><h2>Display Settings</h2></div> <div data-bbox="2002 1172 2485 1247" data-label="Text"><p>Ambient Clock Once enabled, a clock will be displayed when the photo frame is in sleeping mode.</p></div> <div data-bbox="2382 1129 2485 1149" data-label="Section-Header"><h3>Sleep Mode</h3></div> <div data-bbox="1992 968 2485 1116" data-label="Text"><p>When the sleep mode is on, the screen is turned off during a specific time to reduce energy consumption. The default setting is to turn off the screen at 20:00 and to turn it back on at 08:00. This can be changed by setting your preferred sleep mode start/end time. Photos can still be received when the sleep mode is on.</p></div>	<div data-bbox="2955 1737 3075 1757" data-label="Section-Header"><h3>Delete Photos</h3></div> <div data-bbox="2568 1658 3075 1725" data-label="Text"><p>Select photos that you want to permanently delete from your frame by tapping the photo. Use  to select or deselect all and  to permanently delete the selected photos.</p></div> <div data-bbox="2575 1566 3075 1633" data-label="Text"><p>You can also withdraw photos/videos already sent to the frame from Uhale mobile app (note: withdraw only works when history is retained and frame stays online).</p></div> <div data-bbox="2612 1498 3075 1542" data-label="Text"><p>To withdraw: In Uhale "History" - select the icon of the ones you would like to withdraw.</p></div> <div data-bbox="2952 1056 3075 1076" data-label="Section-Header"><h3>Import Photos</h3></div> <div data-bbox="2578 956 3075 1046" data-label="Text"><p>Allow you to import photos from external storage (e.g. SD card). Insert an external storage device into the device with the photos to be imported. Select the photos to be imported into the photo frame. Tap import icon  to start.</p></div>

FCC Statement

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: 1) this device may not cause harmful interference, and 2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

--Reorient or relocate the receiving antenna.

--Increase the separation between the equipment and receiver.

--Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

--Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC Radiation Exposure Statement

This device complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

This device must operate with a minimum distance of 20 cm between the radiator and user body.