


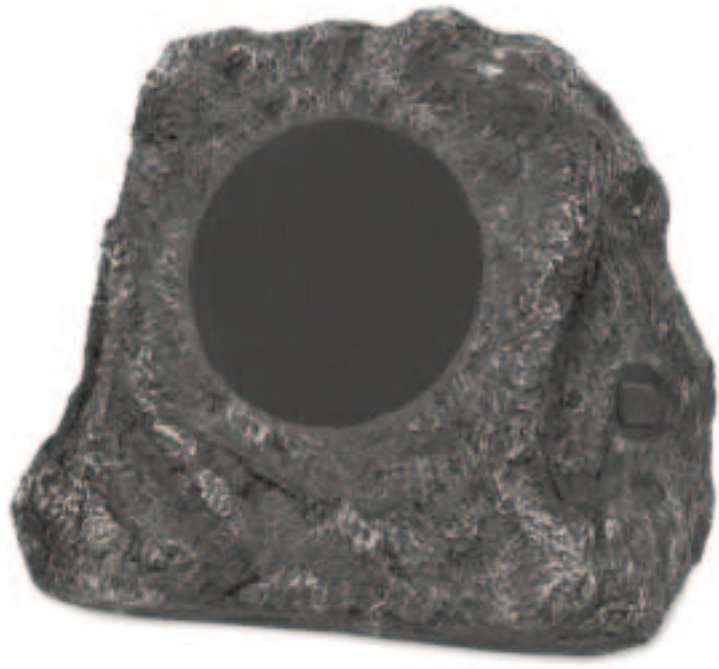

LED Rock Speaker Single

Model: ITSBO-L513



Instruction Manual



Please read this instruction manual carefully before use and keep for future reference.

CONTENTS

Safety Instructions.....	1
Safety Instructions.....	2
Product Specifications.....	3
Buttons and Remote Controls.....	3
Buttons and Remote Controls.....	4
Operation.....	5
Battery Charging.....	5
Important Information.....	6
Warranty.....	7

SAFETY INSTRUCTIONS

The lightning flash with arrowhead within an equilateral triangle is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.

CAUTION
RISK OF ELECTRIC SHOCK
DO NOT OPEN

CAUTION: TO PREVENT RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (S). UNLESS YOU ARE A QUALIFIED SERVICE PROFESSIONAL, NO USER-SERVICEABLE PARTS SHOULD BE ADJUSTED, REPAIRED, OR REPLACED.

The exclamation mark within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

Before using the unit, be sure to read all operating instructions carefully, please note that these are general precautions and may not pertain to your unit. For example, this unit may not have the capability to be connected to an outdoor antenna.

- Read these instructions - All safety and operating instructions should be read before the product is operated.
- Keep these instructions - The safety and operating instructions should be retained for future reference.
- Heed all warnings - All warnings on the product and in the operating instruction manual should be adhered to.
- Follow these instructions - All operating and use instructions should be followed.
- Do not use this apparatus near water. Do not use the product near water and moisture, for example: near a bathtub, washbowl, kitchen sink or laundry tub; in a wet basement; or near a swimming pool.
- The product must not be exposed to dripping or splashing, and not object filled with liquid should be placed on top of the product.
- Clean only with slightly moist, lint-free cloth. Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners.
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions. Slots and openings in the cabinet and in the back or bottom are provided for ventilation, to ensure reliable operation of the product and to protect it from overheating. These openings must not be blocked or covered. The openings should never be blocked by placing the product on a bed, sofa, rug or other similar surface. This product should never be placed near or over a radiator or heat source. This product should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instructions have been adhered to.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- Only use attachments/accessories specified by the manufacturer.
- Use only with the cart, stand, tripod, bracket or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
- Unplug this apparatus during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture does not operate normally, or has been dropped.
- Power source - The product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your appliance dealer or local power company. For products intended to operate from battery power, or other sources, refer to the operating instructions.
- Power lines - An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can fall into such power lines or circuits. When installing an outside antenna system, extreme care should be taken to keep from touching such power lines or circuits as contact with them might be fatal.
- Overloading - Do not overload wall outlets and extension cords as this can result in the risk of fire or electric shock.
- Object and liquid entry - Never push objects of any kind into the product as they may touch dangerous voltage points or short out parts that could result in fire or electric shock. Never spill or spray any type of liquid on the product.

Note: Specified maximum ambient temperature is 35°C

1

SAFETY INSTRUCTIONS

- Service - Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified servicing personnel.
 - Replacement parts - When replacement parts are required, be sure the service technician uses replacement parts specified by the manufacturer or those that have the same characteristics as the original part. Unauthorized substitutions may result in fire or electric shock or other hazards.
 - Safety check - Upon completion of any service or repairs to this product ask the service technician to perform safety checks to determine that the product is in proper operating condition.
 - Damage requiring service - Unplug the product from the wall outlet and refer servicing to qualified service personnel under the following conditions:
 - When the power-supply cord or plug is damaged.
 - If liquid has been spilled or objects have fallen into the product.
 - If the product has been exposed to rain or water.
 - If the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions as improper adjustment may result in damage and will often require extensive work by a qualified technician to restore the product to its normal operation.
 - If the product has been dropped or the cabinet damaged in any way.
 - If the product exhibits a distinct change in performance -this indicates a need for service.
 - Warning: batteries (battery pack or batteries installed) shall not be exposed to excessive heat such as sunshine, fire or a similar source.
- CAUTION**
Danger of explosion if battery is incorrectly replaced.
Replace only with the same or equivalent type.

24. The marking information is located at the bottom of the apparatus.

Warning
Please refer the information on exterior bottom enclosure for electrical and safety information before installing or operating the apparatus.

Caution:
1. Use of control and adjustments or performance of procedures other than those specified here may result in hazardous voltage or other hazards.
2. If this product develops trouble, contact qualified service centers, and do not use the product in a defective state.

Usage
1. Before use, choose unit installation location carefully. Avoid placing in direct sunlight or close to a source of heat. Also avoid locations subject to vibrations and excessive dust, cold or moisture. Keep away from sources that hum, such as transformers or motors.
2. Do not open the cabinet as this might result in damage to the circuitry or electrical shock. If a foreign object should get into the set, contact your dealer.
3. When removing the power plug from the wall outlet, always pull directly on the plug, never pull the cord.
4. Do not attempt to clean the unit with chemical solvents as this might damage the finish. Use a clean, dry cloth.
5. In order to shut off the power to this product completely, unplug the power cord from the wall outlet. Be sure to unplug the unit if you do not intend to use it for an extended period of time, such as while on vacation.
6. Keep this manual in a safe place for future reference.

2

PRODUCT SPECIFICATIONS


Bluetooth Range	Up to 33 feet (10 meters)
Battery Capacity	4,400mAh Lithium Ion (16.28Wh)
Play Time	50 Hours (at 50% Volume) / 10 Hours (at Max Volume) Depending on Exposure to Sunlight
Charging Input	DC 5V, 1A via Power Adaptor
Charging Time	~6 Hours via Power Cord
Max Power Consumption	5 Watts
Power Output	1 x 5 Watts
Product Size:	L - 300mm(11.8 in) x W - 270mm (10.62 in) x H - 270mm (10.62 in)
Included:	LED ROCK SPEAKER Single (1x), User Manual, Micro USB to USB charging Cables & USB Wall adaptor

NOTE: As a result of continual improvements, the design and specifications of this product are subject to change without notice.

Made in China.


Bluetooth is a registered trademark of Bluetooth SIG, Inc.
Other trademarks and trade names are those of their respective owners.

BUTTONS & REMOTE CONTROL

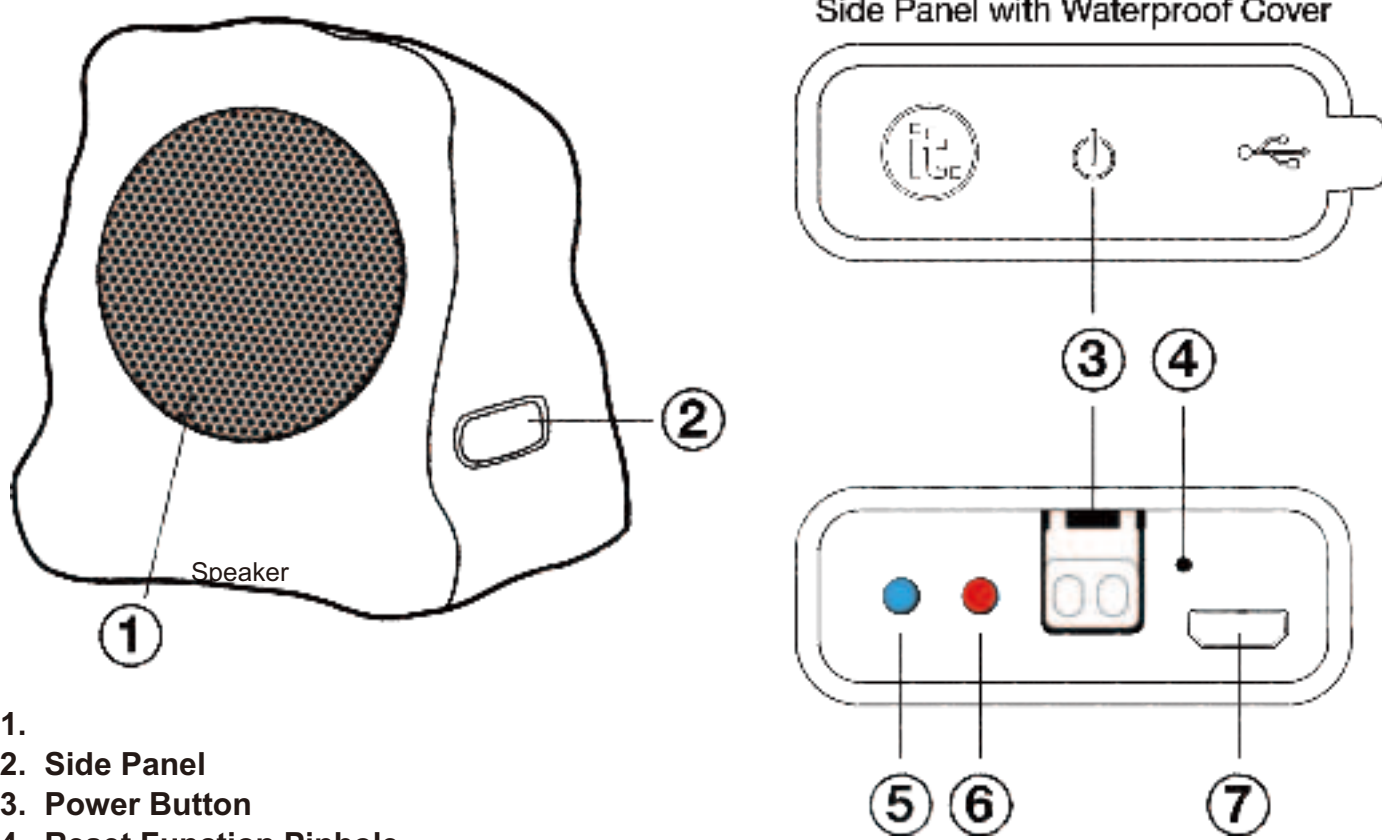

1. LAMP OFF/ON
2. Power Button
3. Dimmer +
4. Dimmer -
5. Volume +
6. Volume -
7. Next
8. Previous
9. Light
10. Bluetooth Pair Button
11. Mute
12. Play / Pause

BUTTONS & REMOTE CONTROL

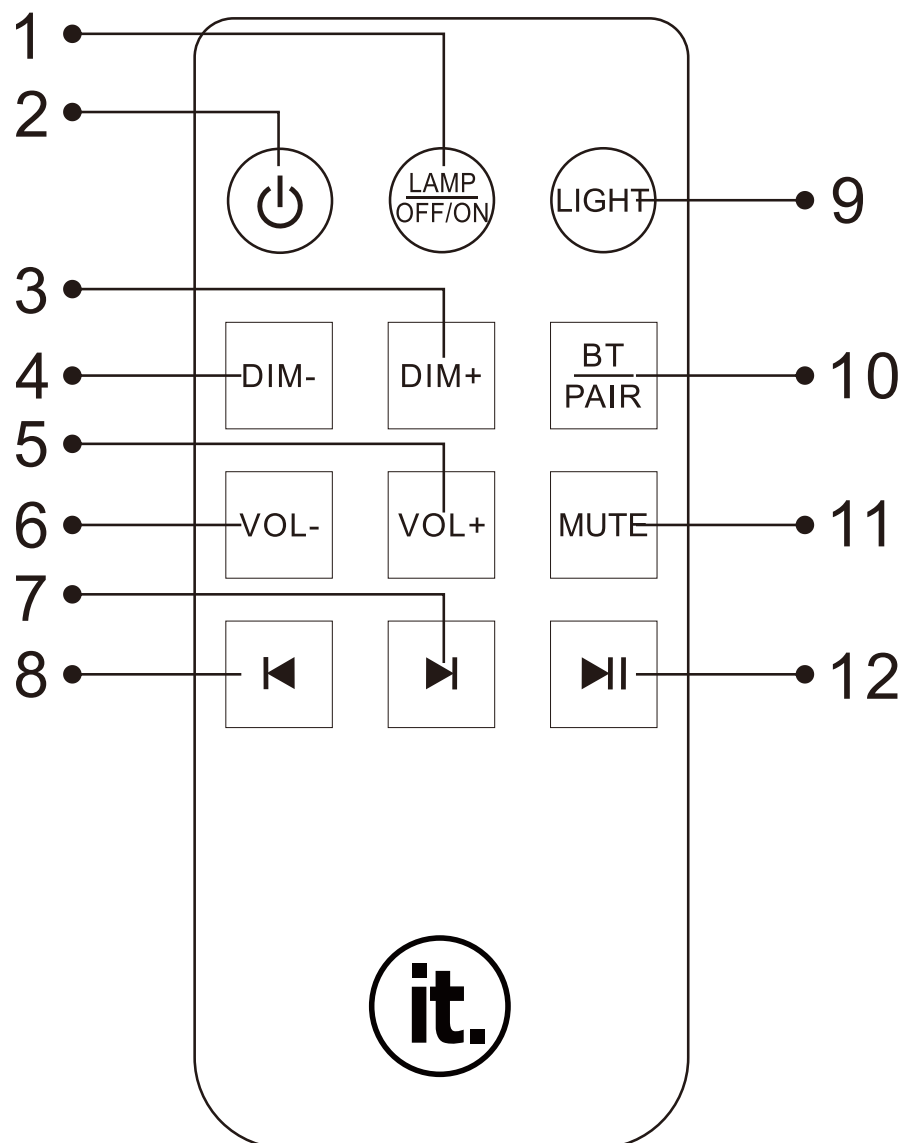

1. LAMP OFF/ON
2. Power Button
3. Dimmer +
4. Dimmer -
5. Volume +
6. Volume -
7. Next
8. Previous
9. Light
10. Bluetooth Pair Button
11. Mute
12. Play / Pause

Remote Control function

- Press " LAMP OFF/ON " button to turn OFF/ON the LED light.
- To adjust the brightness, press " DIM + / DIM - " button to adjust (Low-Mid-High).
- Press "VOL+ / VOL- " button to adjust the volume that you want.
- Press " LIGHT " Button, LED light turns white and follow the rhythm of the music.
- Press " LIGHT " Button again, LED Light will change to breathing mode for 7 colors.
- Press " BT PAIR " Button to enter Bluetooth pairing status, when you pair your Bluetooth device successfully, you can press "BT PAIR" Button again to disconnect your device.

OPERATION

Overview:

- Before first use, it is recommended to charge the Speakers via the Micro USB Input Port with the supplied Micro USB Cables & Power Adaptor (see Battery Charging below). Each Speaker will take approximately 6 hours to charge from 0-100%.
- Very Important:** The Outdoor Bluetooth Rock Speakers MUST be allowed to automatically pair together BEFORE being synced to a Bluetooth enabled device.

Connecting an External Device via Bluetooth:

- Activate the Bluetooth function on your external device.
- Select "LETS ROCK" on your device to begin pairing. You will hear an audible beep, signifying your device is paired and the Bluetooth LED indicator will remain solid blue.
- Begin playing music from your device.

Note:

- Before you connect a Bluetooth device to this unit, familiarize yourself with the Bluetooth capabilities of your device.
- Any obstacle between this unit and a Bluetooth device can reduce the operational range.
- Keep this unit away from any other electronic device that may cause interference.
- If your device asks for password or PIN number, please enter "0000."

Turning the unit OFF:

- Press and hold the Power Button for 3 seconds until the Speakers turn OFF. This process will automatically turn OFF both Speakers.

NOTE: The Speakers will enter standby mode automatically after 5 minutes of inactivity.

BATTERY CHARGING

- Recharge the internal battery by inserting the supplied Micro USB Cable into the DC 5V Input port on the side of the Speaker. Connect the other end to a PC or the included Power Adaptor with 5V, 1A output. The Red Charging LED indicator will remain lit while charging. The LED indicator will turn blue when the battery charging process is completed. Charging will take 5-6 hours, depending on the charging source.

Note:

If the unit has not been used for a long period of time, the rechargeable battery may be discharged into a "sleep mode." To initialize the battery, it is recommended to charge for longer than 6 hours but DO NOT exceed 24 hours. Battery life will vary depending on operation. Loud music with heavy bass will drain the battery faster than spoken word audio.

Caution:

The built-in rechargeable battery is not replaceable. Do not remove or replace it, do not throw in the trash or in a fire. Do not dispose of this device at standard garbage disposal sites. Dispose of device at available Battery Recycling Sites after fully discharging battery. Not doing so may violate local disposal laws and regulations. Please refer to local regulations for proper battery disposal.

WARRANTY STATEMENT

Innovative Technology Electronics LLC,
Limited Warranty: 90 Days Labor, One Year Parts

Innovative Technology Electronics LLC, (IT) warrants the product to be free from "Defects" in materials under normal use for a period of "One Year" from the date of the original purchase. The Warranty is "Not" transferable. IT agrees, within the initial "90 Day" period, to repair or replace the product if it is determined to be defective at "No Charge". It is further agreed that IT will cover the cost to repair or replace damaged "Parts" only for a total period of "One Year" from the date of the original purchase. The warranty does not cover cosmetic damage, antennas, AC cords, cabinets, headbands, ear-pads, or damage due to line power surges, connection to improper voltage supply or settings, misuse, mishandling, accident, acts of God or attempted repair by an unauthorized service agent.

To obtain service, the purchaser MUST present an original sales receipt / proof of purchase. Please contact us at www.victrola.com to request an RMA (Return Material Authorization) number to return products for service or replacement. Returns without an RMA number on the package will be refused and returned to sender. Upon receipt of the returning item and our full inspection (IT) may issue a replacement to customer for the same item or of one that has equivalent value and features. To return an item, supply full name, return address, phone number, item purchased, receipt of purchase and reason for return to obtain RMA number.

All returns must be in the original packaging or reasonable substitute to prevent damage. Customer "Must" include full name, shipping address and telephone number inside of package. No return will be shipped back to a PO Box or APO address.

to be payable to Innovative Technology Electronics LLC, (for handling and return shipping charges) (IT) will not be responsible for delays or unprocessed claims resulting from a purchaser's failure to provide any / all of the necessary information. Send all inquiries or RMA request via our website www.victrola.com/pages/technical-support.

Innovative Technology Electronics LLC,
1 Channel Drive
Port Washington, NY 11050
Toll free: 1-877-483-2497
Website for support: www.victrola.com/pages/technical-support

There are no express warranties except as listed above.
REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CUSTOMER. (IT) SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW. ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY.
Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts, so the above exclusions or limitations may not apply to you. This warranty gives you specific legal rights and you may also have other rights, which vary from state to state.